

[Manuals.plus](#) /

> [pasapair](#) /

> Pasapair 1200W Space Heater User Manual

## **pasapair 1200W Space Heater**

# **Pasapair 1200W Space Heater User Manual**

Model: 1200W Space Heater

## **IMPORTANT SAFETY INSTRUCTIONS**

Read all instructions before using this heater. Failure to follow these instructions may result in fire, electric shock, or injury.

- Do not use this heater in bathrooms, laundry areas, or similar indoor locations where water may be present.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Unplug heater when not in use.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and away from the sides and rear.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## **PRODUCT OVERVIEW**

The Pasapair 1200W Space Heater is designed to provide efficient and quiet heating for small rooms. It features PTC heating technology, 3 operating modes, and a 70° oscillation function for wide heat distribution. Safety features include flame-retardant housing, tip-over protection, and high-temperature protection.



**Figure 1:** Front view of the Pasapair 1200W Space Heater. Shows the black mesh grille covering the heating element.



Figure 2: Top and rear view of the Pasapair 1200W Space Heater, highlighting the control panel and air intake grille.

## SETUP

1. **Unpacking:** Carefully remove the heater from its packaging. Retain packaging materials for future storage or transport.
2. **Placement:** Place the heater on a firm, level surface. Ensure there is at least 3 feet (0.9 m) of clear space around the heater from any combustible materials.

3. **Power Connection:** Plug the heater directly into a 120V AC, 60Hz wall outlet. Do not use extension cords or power strips.

## OPERATING INSTRUCTIONS

The Pasapair Space Heater features a control panel on the top for easy operation.



**Figure 3:** Close-up of the control panel on the top of the Pasapair Space Heater, showing mode and oscillation controls.

## Power On/Off

- To turn on the heater, rotate the power/mode dial to the desired heat setting.
- To turn off the heater, rotate the power/mode dial to the "0" (Off) position.

## Selecting a Mode

The heater offers three operating modes:

- **Low Heat:** Provides gentle warmth.
- **Medium Heat:** Offers moderate heating.
- **High Heat (1200W):** Delivers maximum heating power.

Rotate the mode dial to select between these settings.

## Oscillation Function

- To activate the 70° oscillation, press the oscillation button on the control panel.
- Press the button again to stop oscillation.

## Constant Temperature Heating

The heater is equipped with an intelligent constant temperature system. When the room reaches a set temperature, the heater will temporarily stop heating. It will automatically resume heating when the temperature drops, maintaining a stable room temperature.

## SAFETY FEATURES

---

- **Tip-Over Protection:** The heater will automatically shut off if it is accidentally tipped over (45° dump power-off).
- **Overheat Protection:** The heater will automatically shut off if it reaches an internal temperature of 122°F (50°C) to prevent overheating.
- **Flame-Retardant Housing:** Constructed with flame-retardant materials for enhanced safety.

## MAINTENANCE

---

Regular maintenance ensures optimal performance and longevity of your heater.

### 1. Cleaning:


- Always unplug the heater before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- The air inlet grille is removable for cleaning. Gently remove it and clean any accumulated dust with a soft brush or vacuum cleaner. Ensure it is dry before reattaching.

### 2. Storage:

- When not in use, store the heater in a cool, dry place.
- It is recommended to store it in its original packaging to protect it from dust and damage.





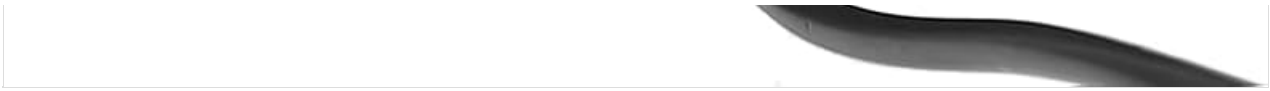

**Figure 4:** Rear view of the Pasapair 1200W Space Heater, illustrating the removable air inlet grille for maintenance.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not turn on.	<ul style="list-style-type: none"> <li>• Not plugged in.</li> <li>• Power outlet not functioning.</li> <li>• Tip-over switch activated.</li> <li>• Overheat protection activated.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure the power cord is securely plugged into a 120V wall outlet.</li> <li>• Test the outlet with another appliance.</li> <li>• Place the heater on a firm, level surface.</li> <li>• Unplug the heater, allow it to cool for 10-15 minutes, then plug it back in.</li> </ul>
Heater turns off unexpectedly.	<ul style="list-style-type: none"> <li>• Overheat protection activated.</li> <li>• Tip-over switch activated.</li> </ul>	<ul style="list-style-type: none"> <li>• Unplug the heater, allow it to cool for 10-15 minutes, then plug it back in. Ensure air inlets/outlets are not blocked.</li> <li>• Ensure the heater is on a stable, level surface.</li> </ul>
Reduced heat output.	<ul style="list-style-type: none"> <li>• Air inlet/outlet blocked by dust.</li> <li>• Operating in a larger room than recommended.</li> </ul>	<ul style="list-style-type: none"> <li>• Clean the air inlet grille as described in the Maintenance section.</li> <li>• This heater is designed for small rooms. Ensure the room size is appropriate.</li> </ul>

## SPECIFICATIONS

<b>Brand</b>	Pasapair
<b>Model</b>	1200W Space Heater
<b>Power Output</b>	1200W (High Heat)
<b>Voltage</b>	120 Volts
<b>Dimensions (D x W x H)</b>	6.3" x 6.3" x 11"
<b>Item Weight</b>	2.64 pounds
<b>Special Features</b>	3 Heat Modes, 70° Oscillation, Tip-Over Protection, Overheat Protection, Flame-Retardant Housing, Quiet Operation (36 dB)
<b>Room Type</b>	Bedroom, Small Rooms



Figure 5: Pasapair 1200W Space Heater with its dimensions (6.3"D x 6.3"W x 11"H) clearly indicated.

## WARRANTY AND SUPPORT

Specific warranty information is not provided in the product details. For warranty claims or technical support, please contact Pasapair customer service through their official website or the retailer where the product was purchased.

Please have your product model number (1200W Space Heater) and ASIN (B0DSFYVZSW) ready when contacting support.



© 2025 Pasapair. All rights reserved.

This manual is for informational purposes only. Pasapair reserves the right to make changes to the product without prior notice.