

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Klipsch](#) /

> [Klipsch Vegas Music City Party Speaker Instruction Manual](#)

## Klipsch Vegas

# Klipsch Vegas Music City Party Speaker Instruction Manual

Model: Vegas | Brand: Klipsch

## PRODUCT OVERVIEW

---

The Klipsch Vegas Music City Party Speaker delivers classic Klipsch sound with horn-loaded tweeter technology and a 5.25" woofer. Designed for powerful audio performance, this speaker is ideal for various events and features a durable, splash-resistant design.

### Key Features

- **Dynamic Sound with Ultra Bass:** Experience powerful audio with horn-loaded tweeters, a 5.25" woofer, and an Ultra Bass button for enhanced low frequencies.
- **Interactive Light Show:** Five RGB lighting settings with app-controlled presets that synchronize with your music.
- **Extended Battery Life:** Enjoy up to 12 hours of playback (lights off) or 8 hours (lights on) on a single charge.
- **Durable and Splash-Resistant:** IPX4 rated for protection against splashes, making it suitable for outdoor use.
- **Versatile Connectivity:** Features Bluetooth 5.2, standard auxiliary input, microphone jack, and 1/4" instrument input.
- **Integrated Microphone:** Includes a microphone for karaoke or public address.
- **Klipsch Connect Plus App:** Customize EQ settings, light patterns, and DJ buttons directly from your smartphone.
- **Party Link:** Connect multiple Klipsch Music City Party Speakers for synchronized audio.

## SETUP GUIDE

---

### Unboxing and Initial Charge

Carefully remove the speaker and all accessories from the packaging. Before first use, fully charge the speaker using the provided power cable. The battery indicator lights on the control panel will show the charging status.

### Powering On/Off

- To power on, press and hold the power button on the control panel for a few seconds until the lights illuminate.
- To power off, press and hold the power button again until the lights turn off.

### Bluetooth Pairing

- Ensure the speaker is powered on.
- Press the Bluetooth button on the control panel to enter pairing mode. The Bluetooth indicator light will flash.
- On your mobile device, navigate to Bluetooth settings and select "Klipsch Vegas" from the list of available devices.
- Once connected, the speaker will emit a confirmation sound, and the Bluetooth indicator light will remain solid.

## Microphone and Instrument Connection

- Locate the "MIC IN" or "GUITAR IN" jacks on the control panel.
- Plug your microphone or instrument into the corresponding jack.
- Adjust the "MIC VOL" or "GUITAR VOL" knobs to set the desired input level.
- Use the "ECHO" knob to add echo effects to the microphone/instrument input.



Image: Detailed view of the Klipsch Vegas speaker's top control panel, showing various knobs and buttons for audio and light adjustments, along with input jacks.

## OPERATING INSTRUCTIONS

---

### Control Panel Overview

- **Power Button:** Press and hold to turn the speaker on/off.
- **Bluetooth Button:** Press to enter Bluetooth pairing mode.
- **Play/Pause/Skip Buttons:** Control music playback.
- **Volume Knobs:** Adjust master volume, microphone volume, and guitar volume.
- **Bass Button:** Activate Ultra Bass mode for deeper low frequencies.
- **Light Mode Button:** Cycle through different light show settings.

- **Echo Knob:** Adjust echo effect for microphone/instrument inputs.

## Light Show Settings

The Klipsch Vegas speaker features five RGB light show settings. Press the Light Mode button on the control panel to cycle through the available patterns and colors. These lights can also be customized via the Klipsch Connect Plus app.

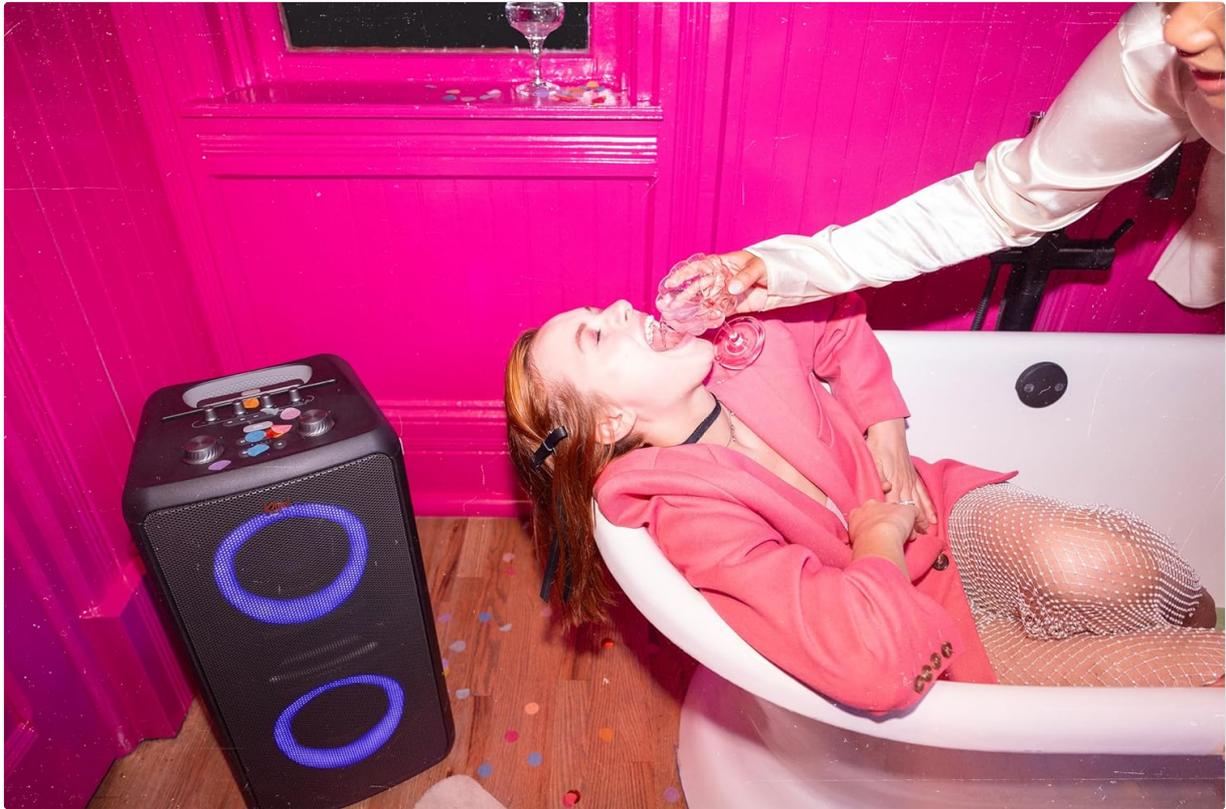


Image: The Klipsch Vegas speaker showcasing its vibrant light show settings, illuminating the speaker grilles with various colors.

## Party Link Mode

To enhance your audio experience, you can connect multiple Klipsch Music City Party Speakers using the Party Link feature. This allows for synchronized playback across several speakers. Refer to the Klipsch Connect Plus app for detailed instructions on setting up Party Link.

## CARE AND MAINTENANCE

---

- The Klipsch Vegas speaker is IPX4 rated, meaning it is resistant to splashing water. Avoid submerging the speaker in water.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the speaker in a cool, dry place when not in use.
- Avoid exposing the speaker to extreme temperatures or direct sunlight for prolonged periods.

## TROUBLESHOOTING

---

- **No Power:** Ensure the speaker is fully charged. Connect to a power source and check the battery indicator lights.
- **Bluetooth Pairing Issues:** Make sure the speaker is in pairing mode (flashing Bluetooth light). Forget the device from your mobile device's Bluetooth settings and try pairing again. Ensure no other devices are actively connected to the speaker.
- **No Sound:** Check the master volume on both the speaker and your connected device. Ensure the correct input source is selected if using auxiliary, microphone, or instrument inputs.
- **Distorted Sound:** Reduce the volume on both the speaker and your connected device. Check for proper connection of all cables.
- **App Connectivity Issues:** Ensure your speaker's firmware is up to date via the Klipsch Connect Plus app. Restart

both the app and the speaker.

## TECHNICAL SPECIFICATIONS

---

Feature	Specification
Model Name	Vegas
Brand	Klipsch
Mounting Type	Pole Mountable
Speaker Type	Multimedia
Product Dimensions	11.8"D x 12.1"W x 16.4"H
Item Weight	19.96 pounds (9.07 Kilograms)
Power Source	Battery Powered
Battery Life	Up to 12 hours (lights off), 8 hours (lights on)
Water Resistance	IPX4 Rated (splash resistant)
Connectivity Technology	Bluetooth 5.2
Audio Output Mode	Stereo
Speaker Maximum Output Power	100 Watts
Frequency Response	20 Hz
Control Method	App, On-device controls
Included Components	Party Speaker, Microphone

## WHAT'S INCLUDED

---

- Klipsch Vegas Music City Party Speaker
- Microphone
- Power Cable
- Quick Start Guide (not included in this document)

## WARRANTY AND SUPPORT

---

The Klipsch Vegas Music City Party Speaker comes with a limited warranty. For specific warranty details, please refer to the documentation included with your product or visit the official Klipsch website. Protection plans are available for purchase separately, offering extended coverage for 2-year, 3-year, or a monthly complete protect plan.

For technical support, troubleshooting assistance, or to register your product, please visit the [Official Klipsch Store](#) or contact Klipsch customer service.