

[Manuals.plus](#) /

> [Maxx Action](#) /

> Maxx Action 16" Dozer with Joystick Controls Instruction Manual

Maxx Action 470729

Maxx Action 16" Dozer with Joystick Controls Instruction Manual

Model: 470729

INTRODUCTION

This manual provides essential information for the safe and proper operation of your Maxx Action 16" Dozer. Please read all instructions carefully before use to ensure optimal performance and longevity of the product. This construction vehicle toy features realistic lights, construction sounds, and joystick-powered controls for an engaging play experience.

SAFETY GUIDELINES

Recommended Age: 3 years and up.

Always supervise children during play. Ensure the play area is clear of obstacles to prevent accidents. Do not operate the dozer near water or in wet conditions. Keep small parts away from children under 3 years of age to avoid choking hazards.

PACKAGE CONTENTS

- 1 x Maxx Action 16" Dozer Truck
- 3 x AA Batteries (pre-installed)

GETTING STARTED (SETUP)

1. **Battery Installation:** The dozer comes with 3 AA batteries pre-installed. If replacement is needed, locate the battery compartment on the underside of the vehicle. Use a screwdriver to open the compartment, insert new AA batteries observing polarity (+/-), and secure the cover.
2. **Power On:** Locate the power switch, typically on the control panel or underside. Switch it to the 'ON' position.
3. **Exiting Try-Me Mode:** The dozer may be in 'Try-Me' mode for demonstration purposes. To enable full functionality, locate the switch on the side of the dozer, usually near the tracks, and switch it from 'Try-Me' to 'Play' or 'On' mode. This allows for complete control via the joysticks.



Image: The Maxx Action Dozer showing its dimensions (16 inches long, 8.25 inches high, 7.6 inches wide) and the location of the 'Try-Me' mode switch on the side.

OPERATING YOUR DOZER

The Maxx Action Dozer features dual joystick controls for realistic operation, along with lights and sounds to enhance the play experience.



Image: A detailed view of the dozer's control panel, highlighting the red joystick for movement, the blue joystick for bucket control, and buttons for mode selection and power.

Joystick Controls

- **Red Joystick (Movement):** This joystick controls the forward and backward motion of the dozer. Push it forward to move the dozer forward, and pull it backward to move in reverse.
- **Blue Joystick (Bucket Control):** This joystick operates the front bucket. Push it forward to lower the bucket for digging or scooping, and pull it backward to lift the bucket.

Drive Modes

The dozer offers two drive modes for varied play:

- **Manual Mode:** Provides full control over the dozer's movement and bucket operation using the joysticks.
- **Automatic Mode:** Press the 'Auto' button to engage automatic movement. The dozer will move forward and backward on its own, allowing for continuous play without constant joystick input.

Lights and Sounds

The dozer is equipped with realistic construction sounds and bright lights that activate during operation, enhancing the immersive play experience.



Image: A young child operating the Maxx Action Dozer, demonstrating its ability to scoop dirt with its working front bucket.

Your browser does not support the video tag.

Video: An official product video demonstrating the Maxx Action Motorized Dig Rig Bulldozer in action, showcasing its joystick controls, automatic mode, and working bucket on a dirt surface.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the dozer with a damp cloth to remove dirt and dust. Do not immerse the toy in water.
- **Storage:** Store the dozer in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage.



Image: A child playing with the Maxx Action Dozer, emphasizing its durable rubber tracks, use of kid-safe materials, and suitability for both indoor and outdoor play.

TROUBLESHOOTING

- **Dozer not moving or lights/sounds not working:**
 - Ensure the power switch is in the 'ON' position.
 - Check if the batteries are correctly installed and not depleted. Replace if necessary.
 - Verify the dozer is not in 'Try-Me' mode. Switch to 'Play' mode for full functionality.
- **Bucket not responding:**
 - Ensure the blue joystick is being moved fully in the desired direction.
 - Check for any obstructions preventing the bucket from moving freely.

PRODUCT SPECIFICATIONS

Feature	Detail
Product Dimensions	7.7 x 16 x 8 inches
Item Weight	4.39 pounds
Item Model Number	470729
Manufacturer Recommended Age	3 years and up
Batteries	3 AA batteries required (included)
Manufacturer	Sunny Days Entertainment
Release Date	March 15, 2025

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the packaging or contact Sunny Days Entertainment directly. Keep your purchase receipt as proof of purchase.