

[Manuals.plus](#) /

> [Casio](#) /

> Casio MWA-300H Series Watch Instruction Manual

Casio MWA-300H

Casio MWA-300H Series Watch Instruction Manual

Model: MWA-300H

INTRODUCTION

Thank you for choosing the Casio MWA-300H Series watch. This manual provides essential information regarding the setup, operation, and maintenance of your new timepiece. Please read this manual carefully to ensure proper use and to fully understand the features of your watch.

The Casio MWA-300H is an analog watch featuring a chronograph, 100-meter water resistance, and luminous hands for enhanced readability. It is designed for versatile wear, suitable for both daily use and recreational water activities.



Image: Front view of the Casio MWA-300H Series watch, highlighting its green dial, chronograph sub-dials, and black resin band.

SETUP: INITIAL SETTINGS

Setting the Time

1. Pull the crown out to the second click (time setting position). The second hand will stop.
2. Rotate the crown to set the hour and minute hands. Ensure the AM/PM setting is correct if your watch has a 24-hour indicator or date changes at midnight.
3. Push the crown back in to the normal position. The second hand will resume movement.

Setting the Date

1. Pull the crown out to the first click (date setting position).
2. Rotate the crown to set the date. Avoid setting the date between 9:00 PM and 1:00 AM, as this may interfere with the automatic date change mechanism.
3. Push the crown back in to the normal position.

Battery Information

Your Casio MWA-300H watch is powered by 1 LR44 battery, which is included. The battery life is approximately 3 years. When the battery runs low, the watch may exhibit irregular movement or stop. It is recommended to have the battery replaced by a qualified watch technician to maintain water resistance.

OPERATING: WATCH FUNCTIONS

Using the Chronograph (Stopwatch)

The chronograph function allows for precise timing of events. Your watch features a 1/10-second stopwatch that captures elapsed, split, and 1st/2nd place times across three dedicated sub-dials.

1. **Starting the Stopwatch:** Press button A (typically the upper right button) to start the stopwatch.
2. **Stopping the Stopwatch:** Press button A again to stop the stopwatch.
3. **Resetting the Stopwatch:** After stopping, press button B (typically the lower right button) to reset the stopwatch hands to zero.
4. **Split Time Measurement:** While the stopwatch is running, press button B to measure split times. The stopwatch hands will momentarily stop to indicate the split time, then resume timing. Press button B again to release the split time and display the current elapsed time.

Note: Refer to the specific button layout on your watch for exact button assignments.

Water Resistance (100 Meters)

Your Casio MWA-300H watch is water resistant up to 100 meters (330 feet). This rating means the watch is suitable for swimming, showering, and recreational water activities. It is not suitable for diving or snorkeling where significant water pressure changes occur.

- Do not operate the crown or buttons while the watch is wet or submerged.
- After exposure to saltwater, rinse the watch with fresh water and wipe it dry.

Luminous Hands and Markers

The watch features luminous hands and markers that absorb light and glow in the dark, providing readability in low-light conditions. The intensity and duration of the glow depend on the amount and type of light exposure.

MAINTENANCE

General Care

- Wipe the watch regularly with a soft, dry cloth to remove dirt and moisture.
- Avoid exposing the watch to extreme temperatures, direct sunlight for prolonged periods, or strong magnetic fields.
- Keep the watch away from solvents, detergents, perfumes, and cosmetics, as these can damage the resin materials.

Battery Replacement

When the battery needs replacement, it is highly recommended to take your watch to an authorized Casio service center or a reputable watch repair shop. This ensures that the watch is properly sealed and its water resistance is maintained after battery replacement.

Water Resistance Checks

To maintain the water resistance of your watch, it is advisable to have it inspected periodically (e.g., every 2-3 years) by an authorized service center, especially if it is frequently exposed to water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch hands do not move or move irregularly.	Low battery.	Replace the battery. Consult a professional watch technician.
Time is incorrect.	Time not set correctly; watch has stopped and restarted.	Reset the time according to the "Setting the Time" instructions.
Date changes at noon instead of midnight.	AM/PM setting is incorrect.	Advance the time by 12 hours.
Chronograph hands do not reset to zero.	Chronograph hands misalignment.	Consult the full Casio module manual for chronograph hand adjustment procedures, or contact customer support.
Moisture inside the watch.	Crown or buttons operated underwater; seals compromised.	Immediately take the watch to an authorized service center for inspection and repair to prevent further damage.

SPECIFICATIONS

Model Name	MWA-300H
Display Type	Analog
Movement Type	Quartz
Water Resistance Depth	100 Meters (330 Feet)
Additional Features	Chronograph, Date Display, Luminous Hands
Power Source	Battery Powered (1 x LR44 included)
Case Material	Resin
Band Material	Resin
Crystal Material	Resin

Case Diameter	50.9 Millimeters
Case Thickness	14.3 Millimeters
Band Width	22 Millimeters
Clasp Type	Buckle

WARRANTY AND SUPPORT

Limited Warranty

Your Casio MWA-300H watch comes with a limited warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of coverage. The warranty typically covers manufacturing defects under normal use.

Customer Support

For further assistance, technical support, or warranty claims, please contact Casio customer service. You can find contact information on the official Casio website or in the documentation provided with your watch.

For more detailed information, including specific module operations or advanced settings, please visit the official Casio support website or refer to the full module manual for your watch.