

[manuals.plus](#) /› [Casio](#) /› [Casio WS-1400H Series Digital Watch User Manual](#)**Casio WS-1400H-2AV**

Casio WS-1400H Series Digital Watch User Manual

Model: WS-1400H-2AV

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Casio WS-1400H Series digital watch. Please read this manual carefully to ensure proper use and to fully utilize all features of your watch.

The Casio WS-1400H is designed for active individuals, featuring a 60-lap memory stopwatch, 100-meter water resistance, and a long-lasting 10-year battery.



Image: Casio WS-1400H Series Digital Watch, showcasing its design and digital display.

SETUP

Initial Time and Date Setting

1. In Timekeeping Mode, press and hold the **ADJUST** button (usually top-left) until the seconds begin to flash, indicating the setting screen.
2. Press the **MODE** button (usually bottom-left) to cycle through the settings: Seconds → Hour → Minute → Year → Month → Day.
3. Use the **START/STOP** button (usually top-right) to increase the flashing value, or the **LAP/RESET** button (usually bottom-right) to decrease it.
4. Once all settings are correct, press the **ADJUST** button to exit the setting screen.

Battery Information

Your Casio WS-1400H watch is powered by a CR2025 battery, providing approximately 10 years of operation. When the display becomes dim or functions become unreliable, it is time to replace the battery. It is recommended to have battery replacement performed by a qualified watch technician to ensure proper

sealing and water resistance.

OPERATING MODES

The watch features several modes accessible by pressing the **MODE** button.

Timekeeping Mode

Displays the current time (hour, minute, second), day of the week, and date. This is the default mode.

Stopwatch Mode

The stopwatch measures elapsed time, split times, and two finishes. It has a 60-lap memory function.

- To enter Stopwatch Mode: Press the **MODE** button until 'STW' or 'STOPWATCH' appears.
- To start/stop: Press the **START/STOP** button (front button).
- To record a lap/split time: Press the **LAP/RESET** button while the stopwatch is running.
- To reset: With the stopwatch stopped, press the **LAP/RESET** button.
- To view lap memory: In Stopwatch Mode, press the **ADJUST** button to cycle through recorded lap times.

Countdown Timer Mode

The countdown timer can be set for a specific duration and will alert you when the time expires.

- To enter Timer Mode: Press the **MODE** button until 'TMR' or 'TIMER' appears.
- To set the timer: Press and hold the **ADJUST** button until the hour/minute digits flash. Use **START/STOP** and **LAP/RESET** to adjust values, and **MODE** to move between hours and minutes. Press **ADJUST** to confirm.
- To start/stop the timer: Press the **START/STOP** button.
- To reset the timer: With the timer stopped, press the **LAP/RESET** button.

Alarm Mode

The watch features multiple daily alarms and an hourly time signal.

- To enter Alarm Mode: Press the **MODE** button until 'ALM' or 'ALARM' appears.
- To set an alarm: Press and hold the **ADJUST** button until the hour digits flash. Use **START/STOP** and **LAP/RESET** to adjust values, and **MODE** to move between hours and minutes. Press **ADJUST** to confirm.
- To turn alarms ON/OFF: In Alarm Mode, press the **START/STOP** button to toggle through alarms and the hourly time signal.

Dual Time Mode

Allows you to keep track of a second time zone.

- To enter Dual Time Mode: Press the **MODE** button until 'DT' or 'DUAL TIME' appears.
- To set dual time: Press and hold the **ADJUST** button until the hour digits flash. Use **START/STOP** and **LAP/RESET** to adjust values, and **MODE** to move between hours and minutes. Press **ADJUST** to confirm.

LED Backlight

The watch features an LED backlight for illumination in low-light conditions.

- To activate: Press the **LIGHT** button (usually top-right or a dedicated button).
- Afterglow duration: The backlight can be set to illuminate for 1.5 seconds or 3 seconds. This setting is typically adjusted in Timekeeping Mode's setting screen, cycling through options with the **MODE** button after setting time.

MAINTENANCE

Water Resistance

Your watch is rated for 100-meter water resistance. This means it is suitable for swimming, showering, and snorkeling. However, it is not suitable for scuba diving. **Do not operate buttons while the watch is wet or submerged.**

Cleaning

Wipe the watch regularly with a soft, dry cloth to remove dirt and moisture. For stubborn dirt, use a soft cloth dampened with water and a mild neutral detergent, then wipe dry.

Battery Replacement

As mentioned, the CR2025 battery has a 10-year life. When replacement is needed, it is strongly recommended to take the watch to an authorized Casio service center or a professional watch repair shop. This ensures the watch's water resistance is maintained after the battery compartment is opened.

TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Time is incorrect:** Re-adjust the time and date settings as described in the Setup section. Ensure the correct AM/PM setting is selected.
- **Buttons are unresponsive:** Ensure the watch is not in a frozen state due to extreme cold. If the issue persists, a battery reset (AC reset) might be required by a professional.
- **Water inside the watch:** Immediately take the watch to an authorized service center. Do not attempt to open the watch yourself.

SPECIFICATIONS

Model Number	WS-1400H-2AVCF
Manufacturer	Casio
Product Dimensions	5 x 7 x 5 inches; 5.26 ounces
Batteries	1 LR44 battery (CR2025 equivalent), included
Water Resistance	100 Meters (10 ATM)

Battery Life	Approximately 10 years
Stopwatch Memory	60 Laps

WARRANTY AND SUPPORT

For warranty information, service, and support, please refer to the official Casio website or contact Casio customer service directly. Keep your proof of purchase for warranty claims.

Official Casio Website: www.casio.com