

## ANTEMPER ANTEMPER 11-inch Android Tablet (Model B0DSH6712T)

# ANTEMPER 11-inch Android Tablet User Manual

Model: B0DSH6712T

## 1. INTRODUCTION

---

This manual provides comprehensive instructions for the setup, operation, and maintenance of your ANTEMPER 11-inch Android Tablet. Designed for versatility, this tablet features the latest Android 14 operating system, a powerful Octa-Core processor, ample storage, and robust connectivity options including 4G LTE and 5G WiFi. Please read this manual thoroughly to ensure optimal performance and longevity of your device.



Image 1.1: The ANTEMPER 11-inch Android Tablet, showcasing its sleek design and included accessories such as the keyboard, mouse, and stylus.

## 2. WHAT'S IN THE BOX

---

Verify that all items listed below are included in your product package:

- 1 x Android 14 Tablet
- 1 x Foldable Case
- 1 x Wireless Keyboard
- 1 x Wireless Mouse
- 1 x Stylus
- 1 x Protector Film
- 1 x OTG Adapter
- 1 x Type-C Cable
- 1 x Charger

- 1 x Eject Pin
- 1 x User Manual



Image 2.1: All components included in the ANTEMPER 11-inch Android Tablet package, laid out for clear identification.

### 3. PRODUCT OVERVIEW

Familiarize yourself with the physical components and ports of your tablet.

# Grab your camera and capture life's moments

Interact with the world through the 21MP rear camera. Videochat with your loved ones on the 8MP front-facing camera.



Image 3.1: A detailed diagram illustrating the location of the 3.5mm headphone jack, card slot, Type-C port, power button, reset button, volume controls, speaker, 8MP front camera, and 21MP rear camera on the ANTEMPER tablet.

## 3.1. Buttons and Ports

- **Power Button:** Press and hold to power on/off or restart the tablet. Short press to turn the screen on/off.
- **Volume Buttons:** Adjust the audio volume up or down.
- **Type-C Port:** Used for charging the tablet and connecting to a computer for data transfer.
- **3.5mm Headphone Jack:** Connect wired headphones or external speakers.
- **Card Slot:** Insert Nano SIM cards for 4G LTE connectivity and a TF (microSD) card for expandable storage.
- **Reset Button:** A small pinhole button for force restarting the device if it becomes unresponsive. Use the eject pin provided.

## 3.2. Cameras

- **Front Camera (8MP):** Located on the front bezel, ideal for video calls and selfies.
- **Rear Camera (21MP):** Located on the back of the tablet, suitable for capturing high-resolution photos and videos.

## 4. SETUP

---

### 4.1. Initial Charging

Before first use, fully charge your tablet using the provided Type-C cable and charger. Connect the Type-C cable to the tablet's Type-C port and the charger to a power outlet. The charging indicator will show the charging status.

### 4.2. Powering On/Off

- **To Power On:** Press and hold the Power button until the screen lights up and the ANTEMPER logo appears.
- **To Power Off:** Press and hold the Power button until a power menu appears on the screen. Select "Power off" and confirm.
- **To Restart:** From the power menu, select "Restart" and confirm.

### 4.3. SIM Card and TF Card Installation

Your tablet supports dual Nano SIM cards for 4G LTE connectivity and one TF (microSD) card for storage expansion up to 1TB.

1. Locate the card slot on the side of the tablet (refer to Image 3.1).
2. Insert the eject pin into the small hole next to the card slot to open the tray.
3. Carefully pull out the card tray.
4. Place your Nano SIM card(s) and/or TF card into the designated slots on the tray, ensuring correct orientation.
5. Gently push the tray back into the tablet until it clicks into place.

*Note: The tablet is unlocked for T-Mobile. SIM card is not included.*

### 4.4. Connecting Accessories

The tablet comes with a wireless keyboard and mouse for enhanced productivity.

- **Wireless Keyboard:** Typically connects via Bluetooth. Turn on the keyboard, enable Bluetooth on your tablet (Settings > Connected devices > Bluetooth), and pair with the keyboard.
- **Wireless Mouse:** May connect via Bluetooth or a USB dongle. If it uses a USB dongle, use the provided OTG adapter to connect the dongle to the tablet's Type-C port. If Bluetooth, pair it like the keyboard.
- **Stylus:** The stylus is generally passive and does not require pairing. Use it directly on the screen for navigation or drawing.

## 5. OPERATING INSTRUCTIONS



---

### 5.1. Basic Navigation (Android 14)

Your tablet runs on Android 14, offering an intuitive user experience. Swipe gestures and on-screen buttons are used for navigation.

- **Home Screen:** The central hub for your apps and widgets.
- **App Drawer:** Swipe up from the bottom of the screen to access all installed applications.
- **Notifications & Quick Settings:** Swipe down from the top of the screen to view notifications and access quick settings toggles (Wi-Fi, Bluetooth, etc.).
- **Multitasking/Recent Apps:** Swipe up from the bottom and hold, or tap the square navigation button (if enabled) to see recently opened applications.

# High configuration for new experience

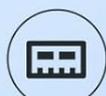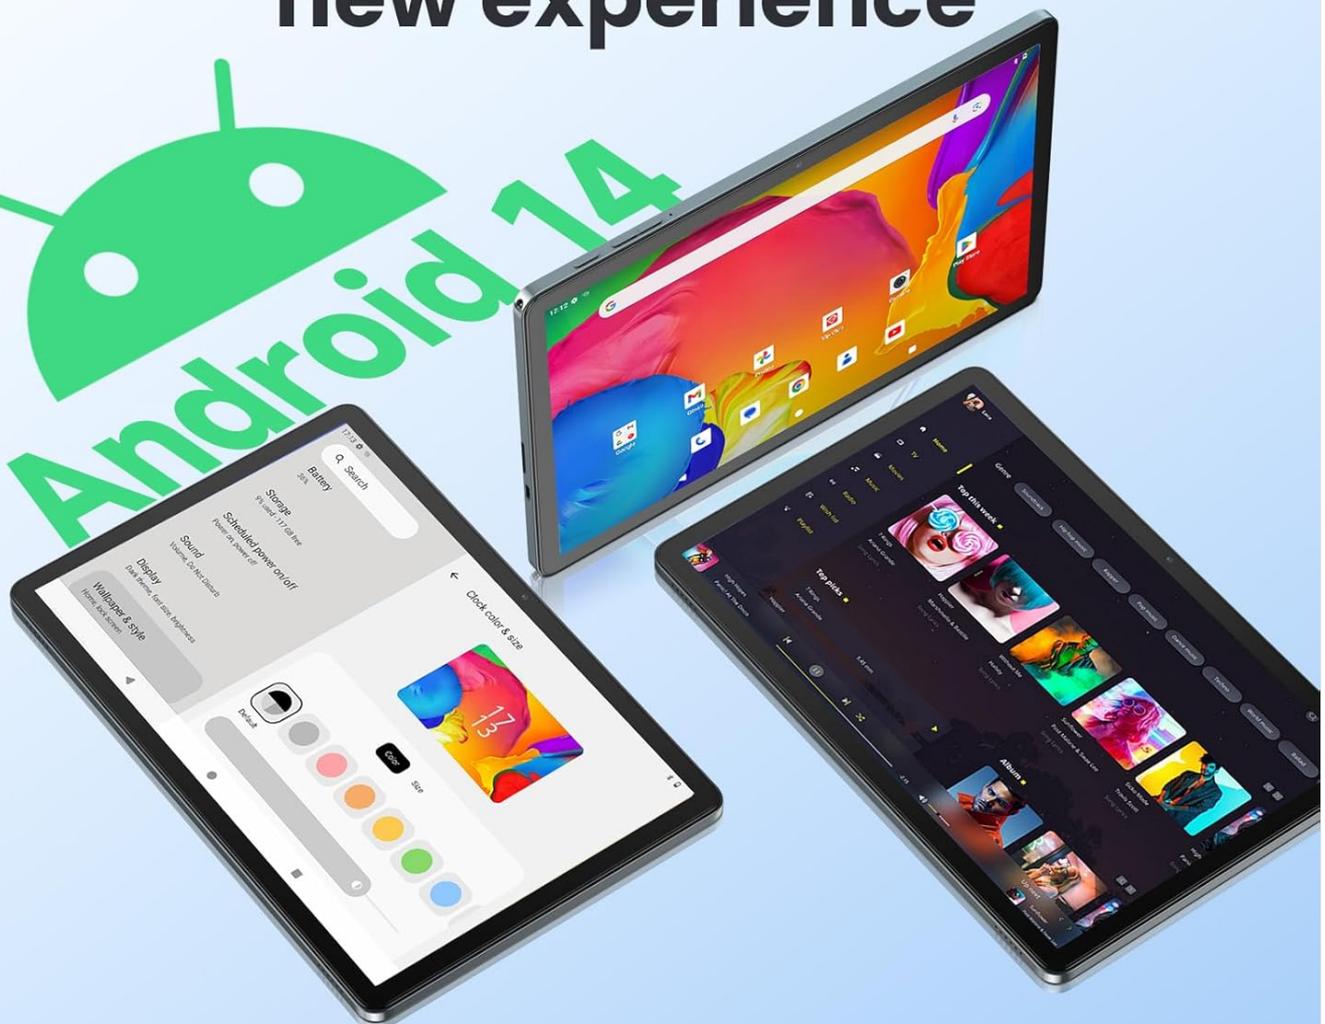

16GB RAM(8+8)



128GB ROM




4G Cellular



21MP + 8MP



8000mAh

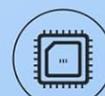

Octa-Core

Image 5.1: The Android 14 operating system interface on the ANTEMPER tablet, highlighting its modern design and customization options.

## 5.2. Connectivity

- **Wi-Fi:** Go to Settings > Network & internet > Wi-Fi. Turn on Wi-Fi and select your desired network. Enter the password if prompted. Supports 5G and 2.4G WiFi bands.
- **Bluetooth:** Go to Settings > Connected devices > Bluetooth. Turn on Bluetooth and pair with compatible devices like headphones, speakers, or the included keyboard and mouse.
- **4G LTE:** If a Nano SIM card is installed, mobile data will automatically activate. Ensure mobile data is enabled in Quick Settings or Network & internet settings.
- **GPS Navigation:** The tablet has built-in GPS. Enable location services in Settings > Location to use navigation apps.



Image 5.2: The ANTEMPER tablet displaying GPS navigation, demonstrating its utility for travel and route planning.

### 5.3. Advanced Features

- **Split-Screen Function:** To use two apps simultaneously, open one app, then swipe up from the bottom of the screen and hold to access recent apps. Tap the app icon at the top of the first app's card and select "Split screen". Then choose the second app from your recent apps or app drawer.
- **Cast Screen (Wireless Projection):** Share your tablet's screen to a compatible smart TV or display. Go to Settings > Connected devices > Connection preferences > Cast. Select your device from the list. Ensure your TV supports wireless projection.

The image features a dark grey ANTEMPER tablet in a split-screen mode, showing two different applications side-by-side. The tablet is propped up on its back. To the left of the tablet, the text reads "Battery 8,000mAh" and "Adapter 5V/2A". To the right, the text reads "Long Lasting Battery" followed by "up to 10 hours of battery life maximize your down-time for entertainment." At the bottom right, a smaller note states "Battery life may vary depending on network environment, usage patterns and other factors." The tablet is surrounded by a blue dashed circular glow on the surface it sits on.

Battery  
**8,000mAh**

Adapter  
**5V/2A**

**Long Lasting Battery**

up to 10 hours of battery life maximize your down-time for entertainment.

Battery life may vary depending on network environment, usage patterns and other factors.

Image 5.3: The split-screen feature in action on the ANTEMPER tablet, allowing two applications to be viewed and interacted with simultaneously for enhanced productivity.



Image 5.4: A user wirelessly projecting content from the ANTEMPER tablet to a large television screen, demonstrating the cast screen functionality for media sharing or presentations.

## 6. KEY FEATURES

---

### 6.1. Display

The ANTEMPER tablet features an 11-inch Incell LCD screen with a resolution of 1280 x 800 pixels. Incell technology integrates the touch panel directly into the LCD, improving touch response, accuracy, and color vibrancy. The display offers a 16:10 golden ratio and 330 Nits brightness for a clear and immersive viewing experience.

# 11" Incell screen brings immersive viewing experience

upgraded in-cell LCD technology improves screen response time, touch interactions, input accuracy and color accuracy.

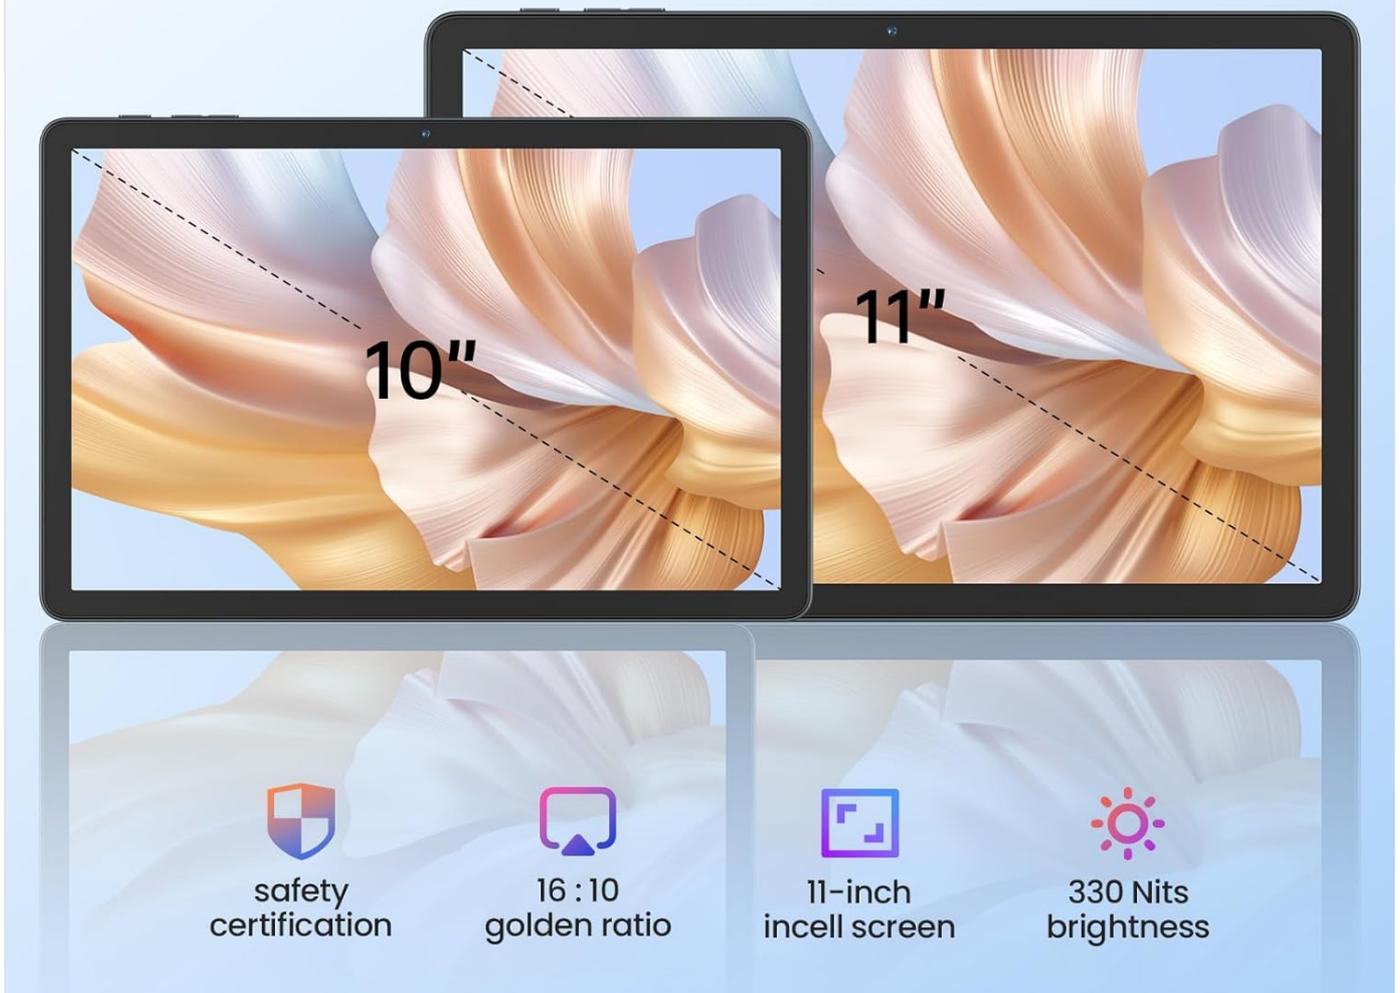


Image 6.1: Visual comparison highlighting the larger 11-inch Incell screen of the ANTEMPER tablet compared to a 10-inch display, emphasizing the immersive viewing experience.

## 6.2. Performance


Powered by the MediaTek MTK8786 Octa-Core processor, this tablet delivers robust performance. The 12nm chip architecture includes 2x A75 and 6x A55 cores, coupled with a Mali-G52 graphics coprocessor, ensuring smooth multitasking, gaming, and video streaming with low power consumption.

## 6.3. Memory and Storage

The tablet is equipped with 16GB of RAM (8GB physical + 8GB virtual expansion) for efficient app handling and smooth transitions. It offers 128GB of internal storage, providing ample space for applications, photos, and documents. Storage can be further expanded up to 1TB using a TF (microSD) card (sold separately).

# Ample storage for everything you need

# 128GB Storage

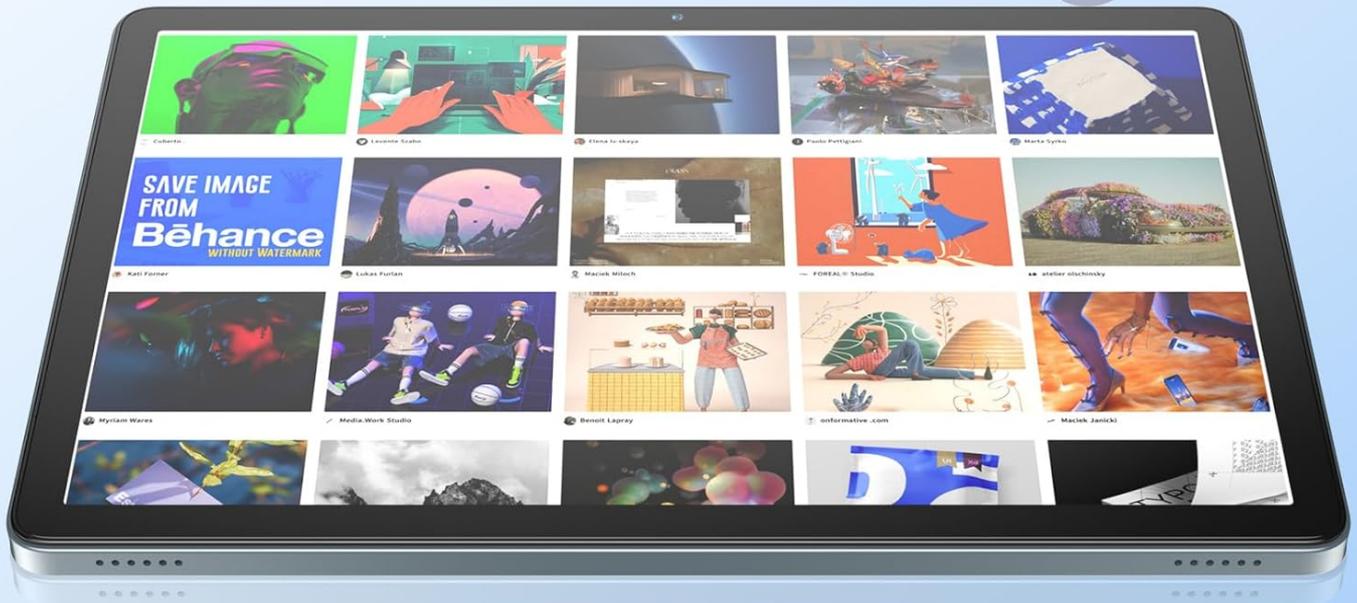

16GB RAM  
(8+8 expand)



128GB  
Internal Storage



Micro SD  
Expand to 1TB

Image 6.2: An illustration detailing the ANTEMPER tablet's storage capabilities, including 16GB RAM (8+8 virtual expansion), 128GB internal storage, and up to 1TB Micro SD expandability.

## 6.4. Cameras

Capture life's moments with the tablet's dual camera system. It features a 21MP rear camera for high-quality photos and an 8MP front-facing camera for clear video calls and selfies.

# High-capacity battery provides you with unlimited fun

8000mAh

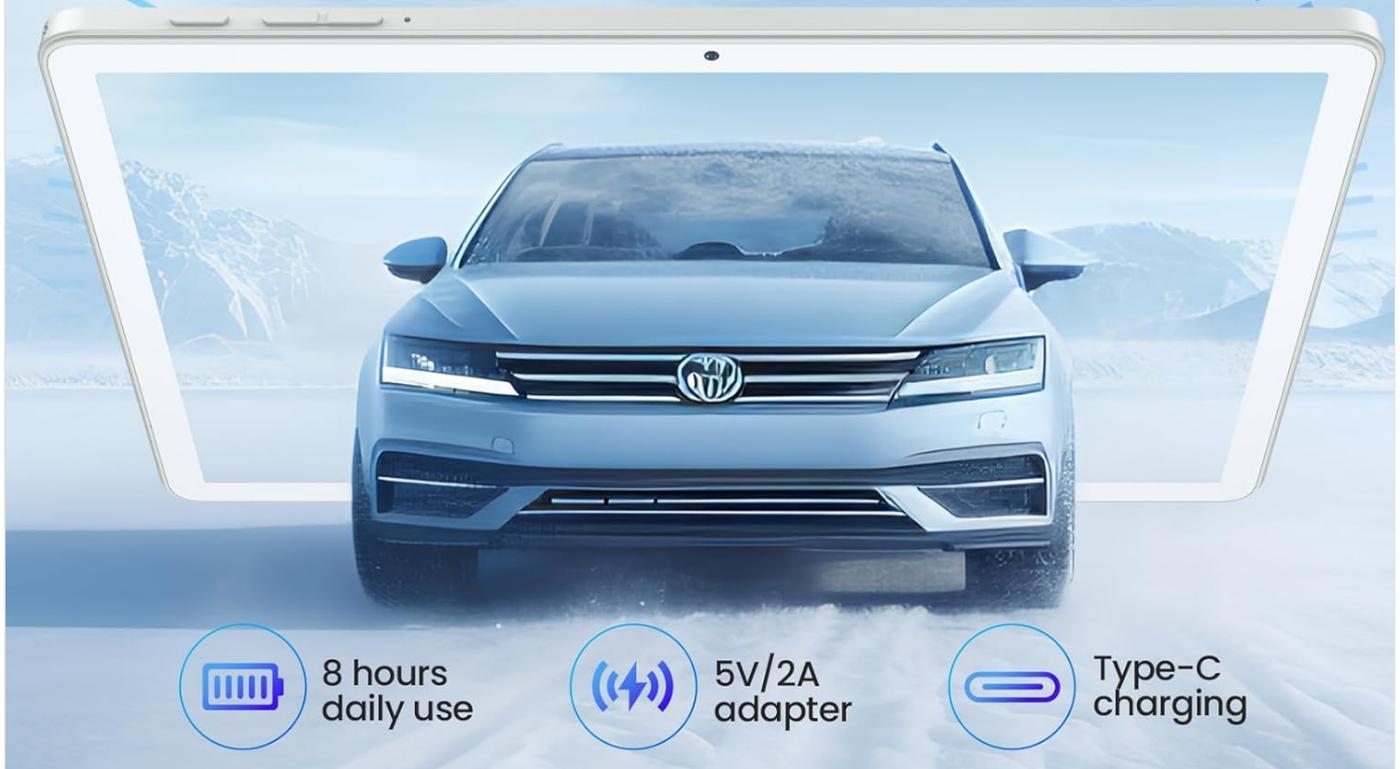


Image 6.3: A visual representation highlighting the 21MP rear camera and 8MP front camera of the ANTEMPER tablet, designed for capturing vivid photos and facilitating clear video communication.

## 6.5. Battery

Equipped with a powerful 8000mAh battery, the tablet provides extended usage, lasting up to 8 hours on a single charge, depending on usage patterns and network environment. It supports 5V/2A charging via the Type-C port.

# Stay connected with your family and friends anytime

Note: Tablet is unlocked for T-mobile and does not include SIM card



Dual  
Sim Card Slot



5G+2.4G  
WIFI Band



Bluetooth  
5.0



GPS  
Navigation



Image 6.4: An illustration emphasizing the 8000mAh high-capacity battery of the ANTEMPER tablet, capable of providing up to 8 hours of daily use.

## 7. MAINTENANCE

---

### 7.1. Cleaning

To clean your tablet, use a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics. Avoid using harsh chemicals, abrasive materials, or excessive moisture.

### 7.2. Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to Settings > System > System update to check for available updates.

### 7.3. Storage Management

To maintain optimal performance, periodically review and manage your tablet's storage. Delete unnecessary files,

uninstall unused apps, and clear cache data. You can check storage usage in Settings > Storage.

## 8. TROUBLESHOOTING

---

This section addresses common issues you might encounter with your ANTEMPER tablet.

Problem	Possible Cause	Solution
Tablet does not power on.	Low battery; system crash.	Charge the tablet for at least 30 minutes. If still unresponsive, press and hold the Power button for 10-15 seconds to force restart. If that fails, use the eject pin to press the Reset button.
Wi-Fi connection issues.	Incorrect password; router issues; tablet Wi-Fi disabled.	Ensure Wi-Fi is enabled. Re-enter the Wi-Fi password. Restart your Wi-Fi router. Try connecting to a different Wi-Fi network.
Tablet is slow or unresponsive.	Too many apps running; low storage; outdated software.	Close background apps. Clear app caches. Free up storage space. Check for and install system updates. Restart the tablet.
SIM card not detected.	Improper insertion; incompatible SIM; network issues.	Ensure the SIM card is correctly inserted into the tray. Verify the SIM card is active and compatible (Nano SIM). Restart the tablet.

## 9. SPECIFICATIONS

---

Detailed technical specifications for the ANTEMPER 11-inch Android Tablet.

Feature	Specification
Brand	ANTEMPER
Model	B0DSH6712T
Operating System	Android 14
Screen Size	11 Inches
Screen Resolution	1280 x 800 pixels
Processor	MediaTek MTK8786 Octa-Core (2 GHz)
Graphics Coprocessor	Mali-G52
RAM	16GB (8GB physical + 8GB virtual expansion)
Internal Storage	128 GB
Expandable Storage	Up to 1TB via TF card (sold separately)
Rear Camera Resolution	21 MP
Front Camera Resolution	8 MP

Feature	Specification
Battery Capacity	8000mAh
Wireless Type	802.11ac, 802.11b, 802.11g, 802.11n (5G+2.4G WiFi)
Bluetooth	Bluetooth 5.0
Cellular Connectivity	4G LTE (Dual Nano SIM slot)
GPS	Yes
Item Weight	3.08 pounds
Product Dimensions	9.8 x 7 x 0.3 inches
Color	Gray

## 10. WARRANTY AND SUPPORT

---

ANTEMPER is committed to providing high-quality products and customer satisfaction. While specific warranty details are not provided in this manual, we encourage you to retain your proof of purchase for any warranty claims.

For any questions, technical assistance, or support regarding your ANTEMPER 11-inch Android Tablet, please do not hesitate to contact our customer service team. We are here to help you with any issues or inquiries you may have.

Please refer to the contact information provided on the product packaging or the official ANTEMPER website for the most up-to-date support channels.