

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Enchen](#) /

› [Enchen Spark 2 Electric Body Hair Trimmer User Manual](#)

Enchen Spark 2

Enchen Spark 2 Electric Body Hair Trimmer User Manual

1. INTRODUCTION

The Enchen Spark 2 Electric Body Hair Trimmer is designed for precise and comfortable grooming of body hair. Featuring advanced ceramic blades and a waterproof design, this trimmer is suitable for various body areas, including the groin, armpits, legs, and chest. This manual provides essential information for the safe and effective use, maintenance, and care of your device.

ENCHEN

SPARK 2.0

TRIMMER FOR GROIN
& BODY GROOMING



Image 1.1: The Enchen Spark 2 Trimmer on its charging base, highlighting its sleek design.

2. SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Keep the appliance away from water when not in use or during charging, unless specifically designed for wet use.
- Do not use the appliance if it is damaged. Contact customer support for assistance.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only the charger and accessories provided or specified by the manufacturer.
- Do not disassemble the appliance. There are no user-serviceable parts inside.
- Avoid using the trimmer on irritated or broken skin.

3. PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all items are present:

- Enchen Spark 2 Electric Body Hair Trimmer
- Charging Base
- USB Charging Cable
- Cleaning Brush
- Guide Combs (1.5mm, 3mm, 6mm, 9mm)



Image 3.1: All components included in the Enchen Spark 2 package, including the trimmer, charging base, USB cable, cleaning brush, and various guide combs.

4. PRODUCT OVERVIEW

The Enchen Spark 2 Trimmer is designed with user convenience and performance in mind.

4.1 Key Features

- **Ceramic Blades:** Designed for skin-friendly trimming, reducing nicks and irritation.
- **Digital Display Screen:** Shows battery percentage and charging status.
- **IPX7 Waterproof:** Allows for wet and dry use, and easy cleaning under running water.
- **Ergonomic Design:** Provides a comfortable and secure grip.
- **Smart Travel Lock:** Prevents accidental activation during transport.
- **USB Rechargeable:** Convenient charging via USB cable.

4.2 Digital Display Screen

The integrated digital display provides real-time information about the trimmer's status, including battery level and charging indicators.



Image 4.1: A detailed view of the digital display screen on the Enchen Spark 2, showing battery percentage and operational icons.

4.3 Ergonomic Design

The trimmer's shape is designed to fit comfortably in your hand, ensuring ease of use and control during grooming sessions.



Image 4.2: A hand gripping the Enchen Spark 2 Trimmer, illustrating its ergonomic form factor for comfortable handling.

4.4 Smart Travel Lock

To activate or deactivate the travel lock, press and hold the power button for 3 seconds. The lock indicator will appear or disappear on the digital display.

SMART TRAVEL LOCK



Image 4.3: The Enchen Spark 2 Trimmer being secured in a travel bag, demonstrating the utility of the smart travel lock feature.

5. SETUP

5.1 Charging the Device

1. Ensure the trimmer is turned off.
2. Connect the USB charging cable to the charging base.
3. Place the trimmer onto the charging base.
4. Plug the USB cable into a compatible USB power adapter (not included) or a USB port.
5. The digital display will show the charging progress. A full charge takes approximately 2 hours.
6. Disconnect the charger once fully charged.

5.2 Attaching and Removing Guide Combs

1. To attach a guide comb, align the comb with the trimmer blade and push it firmly until it clicks into place.
2. To remove a guide comb, gently pull it upwards from the blade assembly.

6. OPERATING INSTRUCTIONS

6.1 General Trimming

1. Ensure the trimmer is fully charged.
2. Select the desired guide comb for your preferred hair length and attach it securely. For a closer trim, use without a guide comb.
3. Press the power button to turn on the trimmer.
4. Hold the trimmer at a slight angle against the skin and move it slowly against the direction of hair growth.
5. For sensitive areas, use extra caution and stretch the skin taut to ensure a smooth surface.
6. After use, press the power button to turn off the trimmer.

6.2 Wet and Dry Use

The Enchen Spark 2 is IPX7 waterproof, allowing for both wet and dry grooming. You can use it in the shower for convenience and easier cleanup.

ENCHEN

100% WATERPROOF



Trimming blades and guided combs are also detachable for easy cleaning.

Image 6.1: The Enchen Spark 2 Trimmer being used under running water, demonstrating its IPX7 waterproof capability for wet shaving and easy cleaning.

6.3 Recommended Uses

This trimmer is suitable for grooming hair on the beard, chest, genital area, pubic area, and underarms.

RELIABLE TOOLS FOR BODY GROOMING



AFTER



BEFORE

Image 6.2: Visual comparison of body hair before and after using the trimmer, illustrating its effectiveness for body grooming.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your trimmer.

1. Turn off the trimmer before cleaning.
2. Remove any attached guide combs.
3. Rinse the blade head and guide combs under running water. The blades are detachable for thorough cleaning.
4. Use the provided cleaning brush to remove any trapped hairs from the blades and inside the trimmer head.
5. Allow all parts to air dry completely before reassembling or storing the trimmer.
6. Do not use abrasive cleaners or solvents on the trimmer.

8. TROUBLESHOOTING

- **Trimmer not turning on:** Ensure the device is fully charged. Check if the travel lock is activated (refer to Section 4.4).
- **Poor trimming performance:** Clean the blades thoroughly to remove any hair buildup. Ensure the blades are properly seated. The battery might be low; recharge the device.
- **Blades pulling hair:** The blades may be dull or damaged. Consider replacing the blade head if available, or contact customer support. Ensure the trimmer is fully charged.
- **Charging issues:** Ensure the USB cable and charging base are properly connected. Try a different USB power source.

9. TECHNICAL SPECIFICATIONS

| Parameter | Value |
|-------------------|--|
| Product Name | Electric Trimmer |
| Model | Spark 2 |
| Rated Power | 5 W |
| Charging Time | 2 hours |
| Power Source | Battery Powered (USB Rechargeable) |
| Waterproof Rating | IPX7 |
| Special Features | Battery Indicator, Detachable Head, Ergonomic, Fast Charge, Waterproof |

Product Parameters



| | |
|-----------------------|------------------|
| Product name: | Electric trimmer |
| Model: | Spark 2 |
| Rated power: | 5 W |
| Charging time: | 2 hours |

Image 9.1: A diagram illustrating the physical dimensions and key product parameters of the Enchen Spark 2 Trimmer.


10. WARRANTY INFORMATION

The Enchen Spark 2 Electric Body Hair Trimmer is backed by a **1-year manufacturer warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear.

11. CUSTOMER SUPPORT

For any questions, concerns, or technical assistance regarding your Enchen Spark 2 Trimmer, please contact our customer support team. Refer to the contact information provided with your product packaging or visit the official Enchen website for support details.

Related Documents - Spark 2
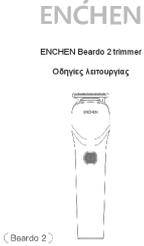
| | |
|--|--|
|  <p>ENCHEN ENCHEN Beardo 2 trimmer Οδηγίες Αποσυμπίεσης</p> <p>(Beardo 2)</p> | <p>ENCHEN Beardo 2 Trimmer User Manual and Instructions</p> <p>Official user manual for the ENCHEN Beardo 2 trimmer, providing detailed instructions on operation, charging, cleaning, maintenance, safety precautions, and specifications. Learn how to use and care for your grooming tool.</p> |
|  | <p>ENCHEN X7 Electric Shaver User Manual: Operation, Cleaning, and Troubleshooting</p> <p>Comprehensive guide for the ENCHEN X7 Electric Shaver, detailing safety instructions, usage, maintenance, troubleshooting tips, and warranty information. Learn how to effectively use and care for your ENCHEN X7 shaver.</p> |
|  | <p>ENCHEN Blackstone 3 Rotary Shaver User Manual</p> <p>Comprehensive user manual for the ENCHEN Blackstone 3 Rotary Shaver, covering important precautions, product description, usage instructions, display content, cleaning and maintenance, troubleshooting, and product parameters.</p> |
|  | <p>ENCHEN Mint 3 Portable Water Flosser User Manual</p> <p>Comprehensive user manual for the ENCHEN Mint 3 Portable Water Flosser, covering product introduction, usage instructions, important safety notes, care and maintenance, warranty information, and troubleshooting.</p> |
|  | <p>Maszynka do strzyżenia Enchen Boost 2 (czarny) - Specyfikacja Techniczna</p> <p>Szczegółowy opis i specyfikacja techniczna maszynki do strzyżenia Enchen Boost 2 w kolorze czarnym. Poznaj kluczowe cechy, parametry techniczne, zasilanie, czas pracy i wyposażenie.</p> |
| | |



[Xiaomi Mijia Hair Clipper 2 User Manual and FAQ](#)

Comprehensive user manual and frequently asked questions for the Xiaomi Mijia Hair Clipper 2, covering features, usage, maintenance, and troubleshooting for this IPX7 waterproof hair trimmer.

Documents - Enchen – Spark 2


[\[pdf\]](#) User Manual Accessories

20231106 User manual eng ENCHEN Spark 2 hajvágó trimmer 56115 45312

085cf6433c0030a5b7b7c53b19f855c1 puputeve hu media wysiwyg attachments |||

ELECTRIC TRIMMER User Manual * For safety issue, the Product s battery status remains low during tra ... refully press on the upper edge of the blade to lock it click . B A PRODUCT PARAMETERS Model: **Spark 2** Product name: Electric trimmer Input: 5V1A Charging time: 2 hours Shanghai Qiaopusi Smart S...

lang:en score:34 filesize: 3.93 M page_count: 1 document date: 2024-07-08

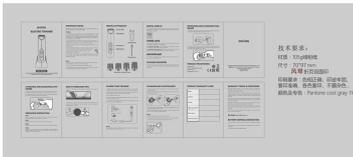


[\[pdf\]](#) User Manual

6974728531433 PL docId BC9EDD5F17D9787C9D9EDC22051A62EC User manual rum ENCHEN

Spark 2 hajvágó trimmer 56118 45312 8484736ac39d8a8c1a803643f0453ea3 puputeve hu media wysiwyg attachments |||

TRIMMER ELECTRIC Insturtuilciziarnei de *Produsul trebuie s fie complet nrcat nainte de prima util ... marginea superioara a lamei pentru a o bloca n poziiie clic . B A PARAMETRII PRODUSULUI Model: **Spark 2** Numele produsului: Trimmer electric Intrare: 5V 1A Timp de nrcare: 2 ore FIXAREA I DETAAR...

lang:it score:22 filesize: 1.24 M page_count: 12 document date: 2024-07-08

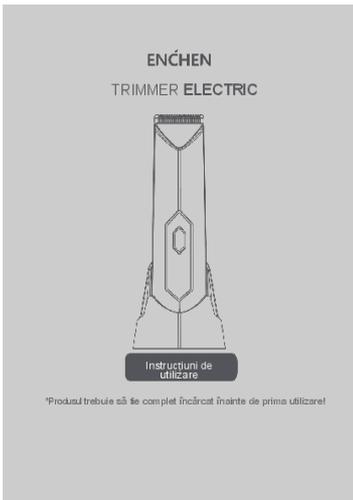

[\[pdf\]](#)


6974728531433 PL docId 6FF20D7823133D2616074F481C6A1A63 Οδηγίες λειτουργίας gre ENCHEN

Spark 2 hajvágó trimmer 56116 45312 e5da58331d8c694f3ed5999a13b6519f puputeve hu media wysiwyg attachments |||

* . 1. , , . 2. , . 2. , A B , , . B A : **Spark 2** : 5V 1A : 2 1. , . 2. ,

lang:tl score:15 filesize: 1.25 M page_count: 12 document date: 2024-07-08



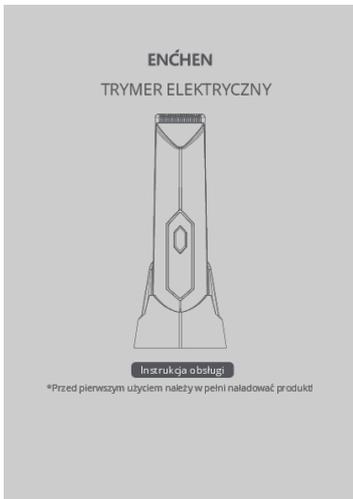

[\[pdf\]](#)

6974728531433 PL Instrukcja obsługi pol ENCHEN Spark 2 hajvágó trimmer 56120 45312

8b277548381201240672c382a05fa6e1 puputeve hu media wysiwyg attachments |||

TRYMER ELEKTRYCZNY Instrukcja obsługi *Przed pierwszym użyciem należy w pełni naładować produkt RODK ... ostronie nacinij grn krawd ostrza, aby je zablokować kliknicie . B A PARAMETRY PRODUKTU Model: **Spark 2** Nazwa produktu: Elektryczny trymer Wejście: 5V 1A Czas ładowania: 2 godziny MOCOWANIE I ODL... lang:pl score:14 filesize: 4.3 M page_count: 12 document date: 2024-07-08




[\[pdf\]](#)

6974728531433 PL Használati utasítás hun ENCHEN Spark 2 hajvágó trimmer 56117 45312

c8093bea12818b50b2c1b3bd8f93c6e7 puputeve hu media wysiwyg attachments |||

ELEKTROMOS HAJ- S SZAKLLVG Használati útmutató *Első használat előtt töltsse fel teljesen a készülékét BIZTO ... , majd nyomja meg vátosan a penge felső részét „kattans” . B A TERMÉKPARAMÉTEREK Modell: **Spark 2** Terméknév: Elektromos hajvágó Beméret: 5V 1A Töltési idő: 2 óra FSRGZTK FELHELYEZÉS S LEVÉTELE ... lang:no score:14 filesize: 1.43 M page_count: 16 document date: 2024-07-08

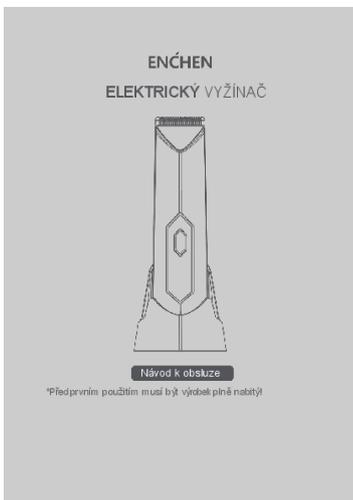


[\[pdf\]](#)

6974728531433 PL doclid 6EB2C959289618B81807FDE9B4DFD6B0 Návod k obsluze cze ENCHEN

Spark 2 hajvágó trimmer 56114 45312 87a51b60824950344f86a158ddc13e9d puputeve hu media wysiwyg attachments |||

ELEKTRICKÝ VYŽINAČ Návod k obsluze *Před prvním použitím musí být výrobek plně nabitý PEDPISY Ped použitím si ... poté opatrně zatlačte na horní okraj nože, aby se zajistil cvakl . B A PARAMETRY PRODUKTU Model: **Spark 2** Nzev produktu: Elektrický zastihovací Vstup: 5V 1A Doba nabíjení: 2 hodiny NABÍJENÍ A ODPOJENÍ H... lang:hr score:14 filesize: 1.19 M page_count: 12 document date: 2024-07-08

 ENCHEN
ELEKTRICKÝ VYŽINAČ



Návod na
použitie

*Pred prvým použitím musí byť výrobok úplne nabitý!

[\[pdf\]](#)

6974728531433 PL docId 6C18A46D5421A3352B0DA3DED7751284 Návod na obsluhu slo ENCHEN

Spark 2 hajvágó trimmer 56119 45312 35ecbc95f0eafaefb01c6cd6bb1eb914 puputeve hu media

wysiwyg attachments |||

ELEKTRICK VYZNAC Nvod na použitie *Pred prvým použitím musí byť výrobok úplne nabitý

PREKZKY Pred použitím ... potom opatrne stlačte hornú hranu noža, aby sa zaistil cvakol

. B A PARAMETRE PRODUKTU Model: **Spark 2** Názov produktu: Elektrický zastrihávač

Vstup: 5V 1A Čas nabíjania: 2 hodiny PRIPEVNENIE A ODPO...

lang:it score:14 filesize: 1.19 M page_count: 12 document date: 2024-07-08