

[Manuals.plus](#) /

› [COCOCAM](#) /

› COCOCAM C7 Indoor Camera Wall Mount Instruction Manual

COCOCAM CC-360P

COCOCAM C7 Indoor Camera Wall Mount Instruction Manual

Model: CC-360P

1. INTRODUCTION

This manual provides comprehensive instructions for the installation and use of the COCOCAM Wall Mount, designed exclusively for the COCOCAM C7 Indoor Camera. This accessory enhances your camera's functionality by allowing for elevated placement and an expanded field of view, ensuring more comprehensive surveillance of your indoor spaces.

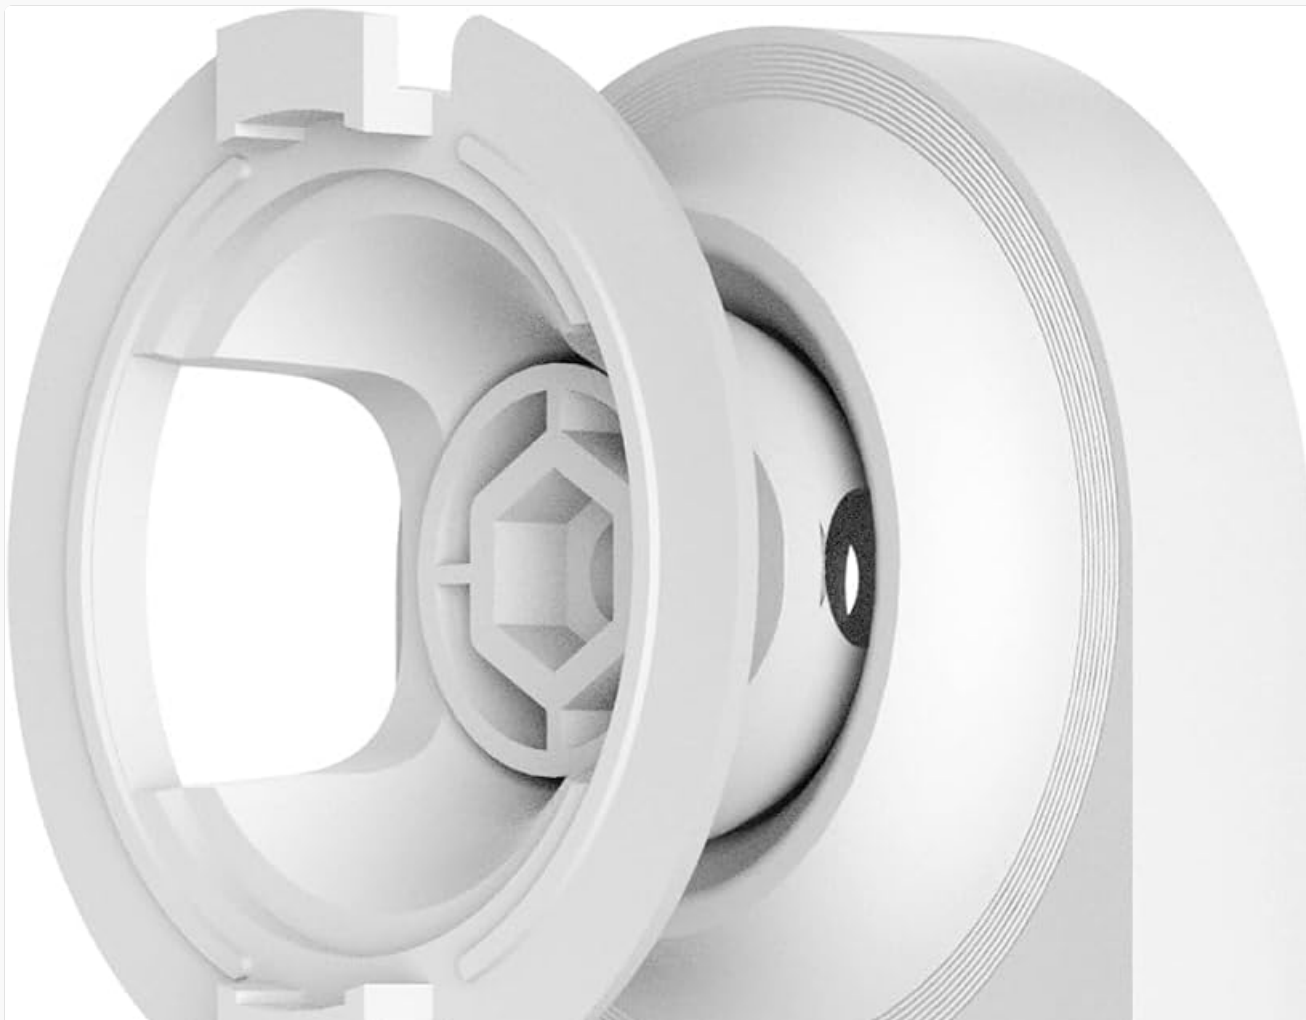




Image: The COCOCAM C7 Wall Mount, showing its design and mounting points.

2. COMPATIBILITY

This wall mount is specifically engineered for use with the **COCOCAM C7 Indoor Camera**. It is not compatible with other security camera models.

Only Suitable for



COCOCAM Indoor Camera C7

Image: The COCOCAM C7 Indoor Camera, indicating its exclusive compatibility with this wall mount.

3. KEY FEATURES

- **Exclusive Compatibility:** Designed solely for the COCOCAM C7 Indoor Camera.
- **Extended View:** Allows installation at higher positions (up to 2.5 meters) to broaden the camera's field of view and minimize blind spots.
- **Adjustable Angle:** The support tray's angle can be adjusted to achieve the desired camera orientation.
- **Easy Installation:** Simple two-hole wall mounting process.

BEFORE

Narrow field of vision

AFTER

Better field of vision

VS




Image: Visual comparison demonstrating the expanded field of view achieved by mounting the camera higher.

4. SETUP AND INSTALLATION

Important Notes:

- For optimal detection, it is recommended to install the camera at a height not exceeding 2.5 meters (approximately 8.2 feet).

- Install the mount in an accessible location for easy charging of the camera.
- This wall mount is designed for wall installation only and is not suitable for ceiling mounting.

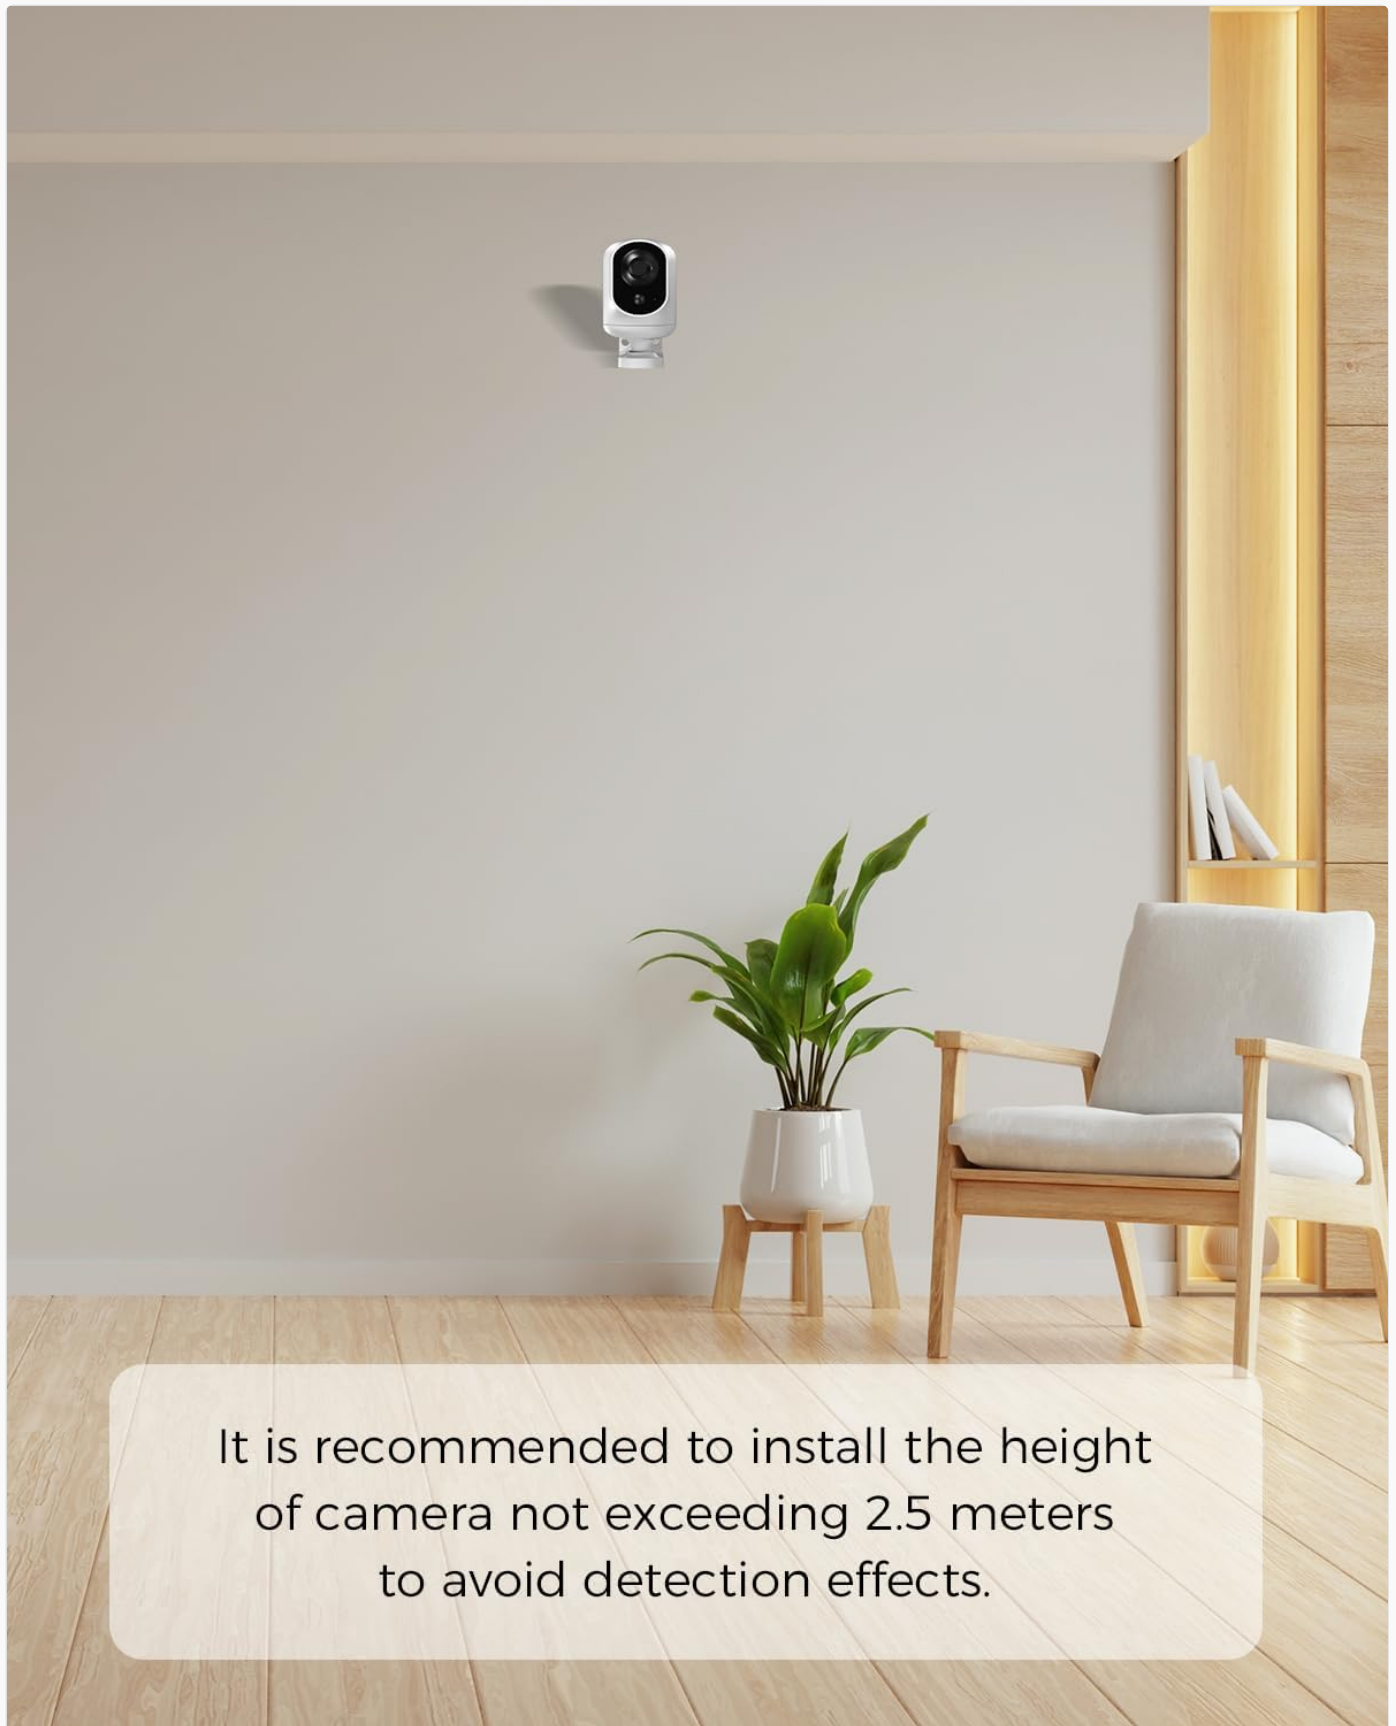

It is recommended to install the height of camera not exceeding 2.5 meters to avoid detection effects.

Image: Illustration showing the recommended installation height for the camera mount.

Installation Steps:

1. **Prepare the Wall:** Choose a suitable location on the wall. Mark two points for drilling, ensuring they align with the

mounting holes on the wall mount.

2. **Drill Holes:** Drill two holes at the marked points on the wall. Use an appropriate drill bit size for your wall anchors (if needed) and screws.
3. **Secure Screws:** Insert wall anchors (if necessary) and then partially screw the provided screws into the wall, leaving enough space for the mount to hang.
4. **Attach Camera to Mount:** Place your COCOCAM C7 Indoor Camera onto the support tray of the wall mount. Ensure it is securely seated.
5. **Hang the Mount:** Align the keyhole slots on the back of the wall mount with the screws on the wall. Slide the mount down to secure it firmly in place.
6. **Tighten Screws:** Gently tighten the screws to fully secure the wall mount to the wall, ensuring it is stable and does not wobble.

5. OPERATING AND ADJUSTMENT

The COCOCAM Wall Mount allows for flexible positioning of your C7 camera. Once installed, you can adjust the angle of the camera to optimize its field of view.

Adjusting the Camera Angle:

- The camera sits on a pivotable tray. Gently rotate or tilt the camera and its tray to achieve the desired viewing angle.
- Ensure the camera is stable after adjustment to prevent accidental movement.

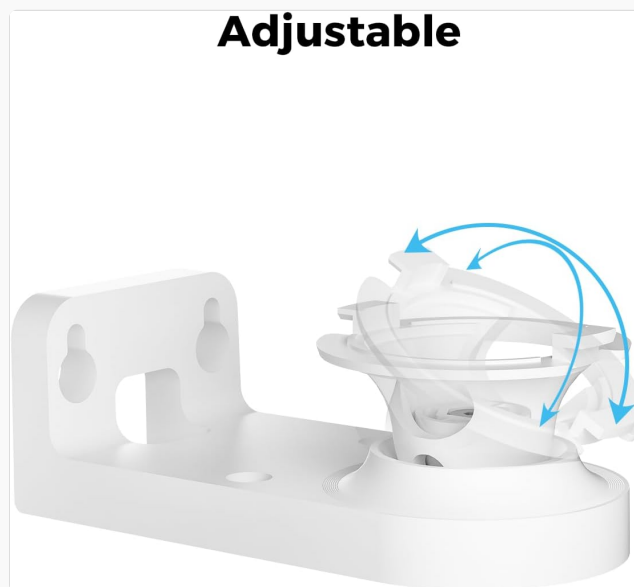


Image: Diagram illustrating the adjustable angle feature of the wall mount.

6. MAINTENANCE

The COCOCAM Wall Mount requires minimal maintenance to ensure its longevity and proper function.

- **Cleaning:** Wipe the mount periodically with a soft, dry cloth to remove dust. Avoid using abrasive cleaners or solvents.
- **Inspection:** Periodically check the mounting screws to ensure they remain tight and secure. If the mount feels loose, re-tighten the screws.
- **Environmental Conditions:** This mount is designed for indoor use. Avoid exposing it to extreme temperatures, direct sunlight for prolonged periods, or high humidity.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Mount feels loose on the wall.	Screws are not fully tightened or wall anchors are insufficient.	Re-tighten the mounting screws. If the problem persists, consider using more robust wall anchors appropriate for your wall type.
Camera detection issues after mounting.	Camera installed too high or angle is not optimal.	Ensure installation height is within 2.5 meters. Adjust the camera's angle on the mount to cover the desired area.
Mount does not fit my camera.	Incorrect camera model.	This mount is exclusively for the COCOCAM C7 Indoor Camera. Verify your camera model.

8. SPECIFICATIONS

- **Model Number:** CC-360P
- **Brand:** COCOCAM
- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Mounting Type:** Wall Mount
- **Movement Type:** Pivoting
- **Compatible Devices:** COCOCAM C7 Indoor Camera
- **Recommended Max Installation Height:** 2.5 meters (8.2 feet)

9. WARRANTY AND SUPPORT

Information regarding warranty and specific support contacts is not available in the provided product details. Please refer to the COCOCAM official website or your purchase documentation for warranty terms and customer support information. For general inquiries or further assistance, you may visit the [COCOCAM Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DSHF1NQR>

More documents and user manuals: <https://manuals.plus/>