

OGERY F11

OGERY F11-20000mAh Portable Camping Fan

USER MANUAL

Introduction

This manual provides instructions for the safe and effective use of your OGERY F11-20000mAh Portable Camping Fan. Please read this manual thoroughly before operating the device and retain it for future reference.

Product Overview

The OGERY F11-20000mAh is a portable, rechargeable fan designed for various environments including camping, travel, and home use. It features a 20000mAh battery, stepless speed regulation, an integrated LED lantern, and power bank functionality.



Image: OGERY F11-20000mAh Portable Camping Fan, front view with remote control.

Key Features:

- **Strong Airflow:** Provides wind speeds up to 5.3m/s with advanced Turbocharging and PWM Control.
- **Extended Battery Life:** Equipped with a 20000mAh battery, offering 12 to 138 hours of operation (fan only) or 33 to 152 hours (light only).
- **Fast Charging:** Supports 20W fast charging, reaching full capacity in approximately 4.5 hours.
- **Integrated LED Lantern:** Features a 3-level eye-protective LED ring light for illumination.
- **Multi-functional Design:** Includes 30°/60°/90°/120° automatic oscillation, 270° manual tilt, a remote control, folding handle, and a 360° rotatable hook.
- **Power Bank Function:** Dual output ports (USB and Type-C) allow charging of other devices.

Components:

Remote Control

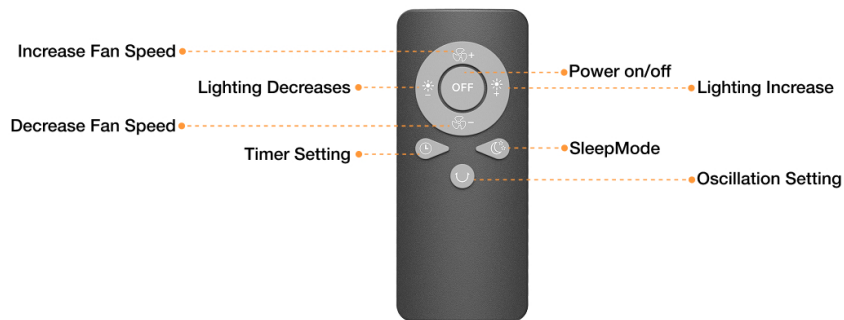


Image: Detailed view of the fan's control panel with indicators for power, fan speed, timer, and oscillation.

- **Control Panel:** Located on the base, includes power indicator, fan speed indicator, timer indicator, rocking head indicator, sleep button, lighting button, fan speed control knob, oscillation button, and timer button.
- **Remote Control:** For convenient operation of fan speed, light, oscillation, and timer.
- **Folding Handle:** For portability and carrying.
- **360° Rotatable Hook:** For hanging the fan in tents or other locations.
- **Charging Ports:** USB output and Type-C input/output ports.

Setup

Initial Charging:

1. Before first use, fully charge the fan. Connect the provided Type-C cable to the fan's Type-C input/output port and to a power adapter (not included, >18W recommended).
2. The power indicator lights on the control panel will show charging progress. All lights will be solid when fully charged.

18W Fast Charging

Upgrade Fast Charging

OGERY 
4.5 H

VS

Others
9 H



Image: The OGERY F11-20000mAh fan connected to a power source for charging.

Remote Control Battery Installation:

The remote control requires 2 CR5 batteries (included). Open the battery compartment on the back of the remote and insert the batteries, observing polarity.



Image: Diagram illustrating the buttons and functions of the remote control.

Operation

Power On/Off:

- **On Device:** Rotate the fan speed control knob clockwise from 'OFF' to turn on the fan. Rotate counter-clockwise to 'OFF' to power off.
- **Remote Control:** Press the power on/off button.

Fan Speed Adjustment:

- **On Device:** Rotate the fan speed control knob clockwise to increase speed (from MIN to MAX).
- **Remote Control:** Use the '+' and '-' buttons to increase or decrease fan speed.



Image: A family outdoors, illustrating the fan's stepless speed regulation via the control knob.

Oscillation Control:

The fan supports automatic oscillation at 30°, 60°, 90°, and 120°.

- **On Device:** Press the oscillation button on the control panel to cycle through oscillation angles or turn off oscillation.
- **Remote Control:** Press the oscillation setting button.

The fan head can also be manually tilted 270° vertically.

360° Omnidirectional Airflow

Front-back tilt

Auto left-right swing



Image: Two views of the fan demonstrating 270° front-back tilt and 30°/60°/90°/120° auto left-right swing.

LED Light Operation:

The integrated LED lantern has 3 brightness levels.

- **On Device:** Press the lighting button on the control panel to cycle through brightness levels (Low, Medium, Strong) and off.
- **Remote Control:** Use the light increase and light decrease buttons.

3 Level Eye-Friendly Lighting

Gentle on the eyes, better for vision

Upgrade Area Light And PWM Dimming Technology



Image: Fan hanging inside a tent, providing 3 levels of eye-friendly lighting.

Timer Function:

Set the fan to operate for a specific duration.

- **On Device:** Press the timer button to select 1H, 2H, 4H, or 8H.
- **Remote Control:** Press the timer setting button.

Sleep Mode:

Activates a quiet operation mode with indicator lights off.

- **On Device:** Press the sleep button.
- **Remote Control:** Press the sleep mode button.



Less noise

Ultra quiet
<23db

1H 2H
4H 8H

Turn off all
indicator lights

Enjoy tranquility and coolness

10dB 15dB 23dB 30dB 40dB

Blooming whisper falling leaves speaking passing truck

Image: A person sleeping in a tent with the fan operating quietly, illustrating low noise levels.

Power Bank Functionality:

The fan can charge other devices using its 20000mAh battery.

1. Connect your device's charging cable to the fan's USB output port or Type-C input/output port.
2. Ensure the fan has sufficient battery charge.

Charging the Fan

To recharge the OGERY F11-20000mAh fan:

1. Use the provided Type-C charging cable.
2. Connect the cable to the fan's Type-C input/output port.
3. Plug the other end into a compatible power adapter (e.g., wall charger, power bank) with an output of 18W or greater for fast charging.
4. A full charge takes approximately 4.5 hours. The power indicator lights will show charging status.

Maintenance

Cleaning:

- Ensure the fan is powered off and unplugged before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- For dust accumulation on the fan blades, use a soft brush or compressed air. Do not attempt to disassemble the fan for cleaning.

Storage:

- Store the fan in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50-70% every 3 months to maintain battery health.

Troubleshooting

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan fully.
	Power knob is in 'OFF' position.	Rotate the knob clockwise to turn on.
Weak airflow.	Fan speed set too low.	Increase fan speed using the knob or remote.
	Obstruction in front/back of fan.	Ensure clear path for airflow.
LED light not working.	Light is off or set to lowest brightness.	Press the light button to cycle through brightness levels.
Remote control not responding.	Remote batteries are depleted or incorrectly installed.	Replace batteries or check polarity. Ensure line of sight to the fan.
Device not charging from fan's power bank.	Fan battery is low.	Charge the fan.
	Incorrect cable or port used.	Use appropriate USB or Type-C cable and port.

Specifications

Feature	Detail
Brand	OGERY
Model Name	F11
Power Source	Battery Powered
Battery Capacity	20000mAh
Charging Time	Approx. 4.5 hours (with >18W adapter)
Operating Time (Fan)	12 to 138 hours (depending on speed)
Operating Time (Light)	33 to 152 hours (depending on brightness)
Wind Speed	Up to 5.3m/s

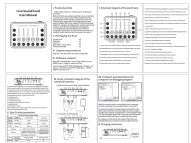


Feature	Detail
Oscillation	30°/60°/90°/120° Automatic
Tilt Angle	270° Manual
LED Light Levels	3
Control Method	Remote, On-device knob/buttons
Product Dimensions	4.3"D x 9.5"W x 15"H
Item Weight	3.94 pounds
Voltage	5 Volts
Wattage	18 watts
UPC	716597693982

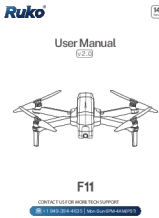

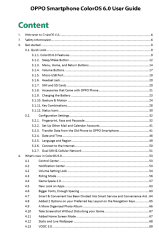
Warranty and Support

OGERY products are designed for reliability and performance. For warranty information or technical support, please refer to the product packaging or contact OGERY customer service through their official channels. Keep your purchase receipt as proof of purchase for warranty claims.

© 2025 OGERY. All rights reserved.

Related Documents - F11

 <p>CP2-208F11YWX F11英文说明书(海量印刷)尺寸 105X145 四折页</p>	<p>F11 Live Sound Card User Manual: Features, Setup, and Specifications</p> <p>Comprehensive user manual for the F11 Live Sound Card by Shenzhen Furuijie Electronic Technology Co., Ltd., detailing its features, connection methods, software compatibility, and FCC compliance for live streaming and audio production.</p>
 <p>Parker Service Manual Series F11</p>	<p>Parker Series F11 Hydraulic Pump/Motor Service Manual</p> <p>Comprehensive service manual for the Parker Series F11 bent axis, fixed displacement heavy-duty hydraulic pump and motor series. Covers specifications, design, operational checks, assembly, torque, parts, and valve plates.</p>
 <p>F11 Multi-Function Wireless Speaker User Manual</p>	<p>F11 Multi-Function Wireless Speaker User Manual</p> <p>User manual for the F11 Multi-Function Wireless Speaker by Lesoi, detailing functions, Bluetooth pairing, TWS mode, charging, and indicator lights.</p>

 <p>The image shows the cover of the Ruko F11 Drone User Manual v2.0. It features the Ruko logo at the top left, a small '14+' age rating icon at the top right, and a central illustration of the drone. Below the illustration, the text 'F11' is prominently displayed, followed by 'CONTRACTOR MODE TECH SUPPORT' and a phone number '1 800 361 4521 Email: Support@ruko.com'.</p>	<p>Ruko F11 Drone User Manual v2.0: Flight Guide, Safety, and Features</p> <p>Comprehensive user manual for the Ruko F11 drone, version 2.0. Discover features like 4K video, intelligent flight modes, and safe operation. Includes setup, flight, battery, and troubleshooting guides for users aged 14+.</p>
 <p>The image shows the cover of the Ruko F11 Drone Quick Start Guide. It features the Ruko logo at the top left, a small '14+' age rating icon at the top right, and a central illustration of the drone. Below the illustration, the text 'F11' is prominently displayed, followed by 'CONTRACTOR MODE TECH SUPPORT' and a phone number '1 800 361 4521 Email: Support@ruko.com'.</p>	<p>Ruko F11 Drone: Quick Start Guide and Operation Manual</p> <p>Comprehensive quick start guide for the Ruko F11 drone, covering setup, operation, app connection, calibration, and troubleshooting. Learn how to fly your Ruko F11 safely and effectively.</p>
 <p>The image shows the cover of the OPPO Smartphone ColorOS 6.0 User Guide. It features the title 'OPPO Smartphone ColorOS 6.0 User Guide' at the top, followed by a 'Content' section listing various topics and their corresponding page numbers. The list includes sections like 'Introduction', 'Getting Started', 'Basic Operations', 'Advanced Features', 'Troubleshooting', and 'Appendix'.</p>	<p>OPPO Smartphone ColorOS 6.0 User Guide</p> <p>Comprehensive user guide for OPPO smartphones running ColorOS 6.0, covering features, settings, personalization, safety, and advanced usage for an optimal mobile experience.</p>