



[Manuals.plus](#) /

> [AIMADI](#) /

> AIMADI Wall Mount Kitchen Faucet AM14233N User Manual

AIMADI AM14233N

AIMADI Wall Mount Kitchen Faucet AM14233N User Manual

Model: AM14233N

1. INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your AIMADI Wall Mount Kitchen Faucet, Model AM14233N. This faucet is designed for modern kitchens, featuring an 8-inch center wall-mount design. It includes a pull-down sprayer with two water flow modes and a 360° swivel spout for enhanced functionality. Constructed from premium stainless steel, it offers durability and easy maintenance.



Figure 1: AIMADI Wall Mount Kitchen Faucet, Model AM14233N.

2. SAFETY INSTRUCTIONS

- Always turn off the main water supply before beginning any installation or maintenance.
- Wear appropriate personal protective equipment, such as safety glasses and gloves, during installation.
- Ensure all connections are secure to prevent leaks. Do not overtighten.

- If you are unsure about any part of the installation, consult a qualified plumber.
- Keep small parts away from children.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- AIMADI Wall Mount Kitchen Faucet Assembly
- Mounting Hardware (including gaskets, nuts, and adapters)
- Instruction Manual

4. SETUP AND INSTALLATION

The AIMADI Wall Mount Kitchen Faucet is designed for an 8-inch center wall mount setup. Follow these general steps for installation:

1. **Prepare the Wall:** Ensure your wall has pre-drilled holes with an 8-inch center distance for the hot and cold water lines.
2. **Install Adapters:** Attach the provided NPT 1/2 adapters to your existing water supply lines in the wall. Use thread sealant tape for a watertight connection.
3. **Mount the Faucet Body:** Secure the main faucet body to the wall adapters using the included mounting hardware. Ensure the faucet is level and firmly attached.
4. **Connect Sprayer Hose:** Connect the pull-down sprayer hose to the designated outlet on the faucet body.
5. **Test for Leaks:** Slowly turn on the main water supply and check all connections for any leaks. Tighten as necessary.

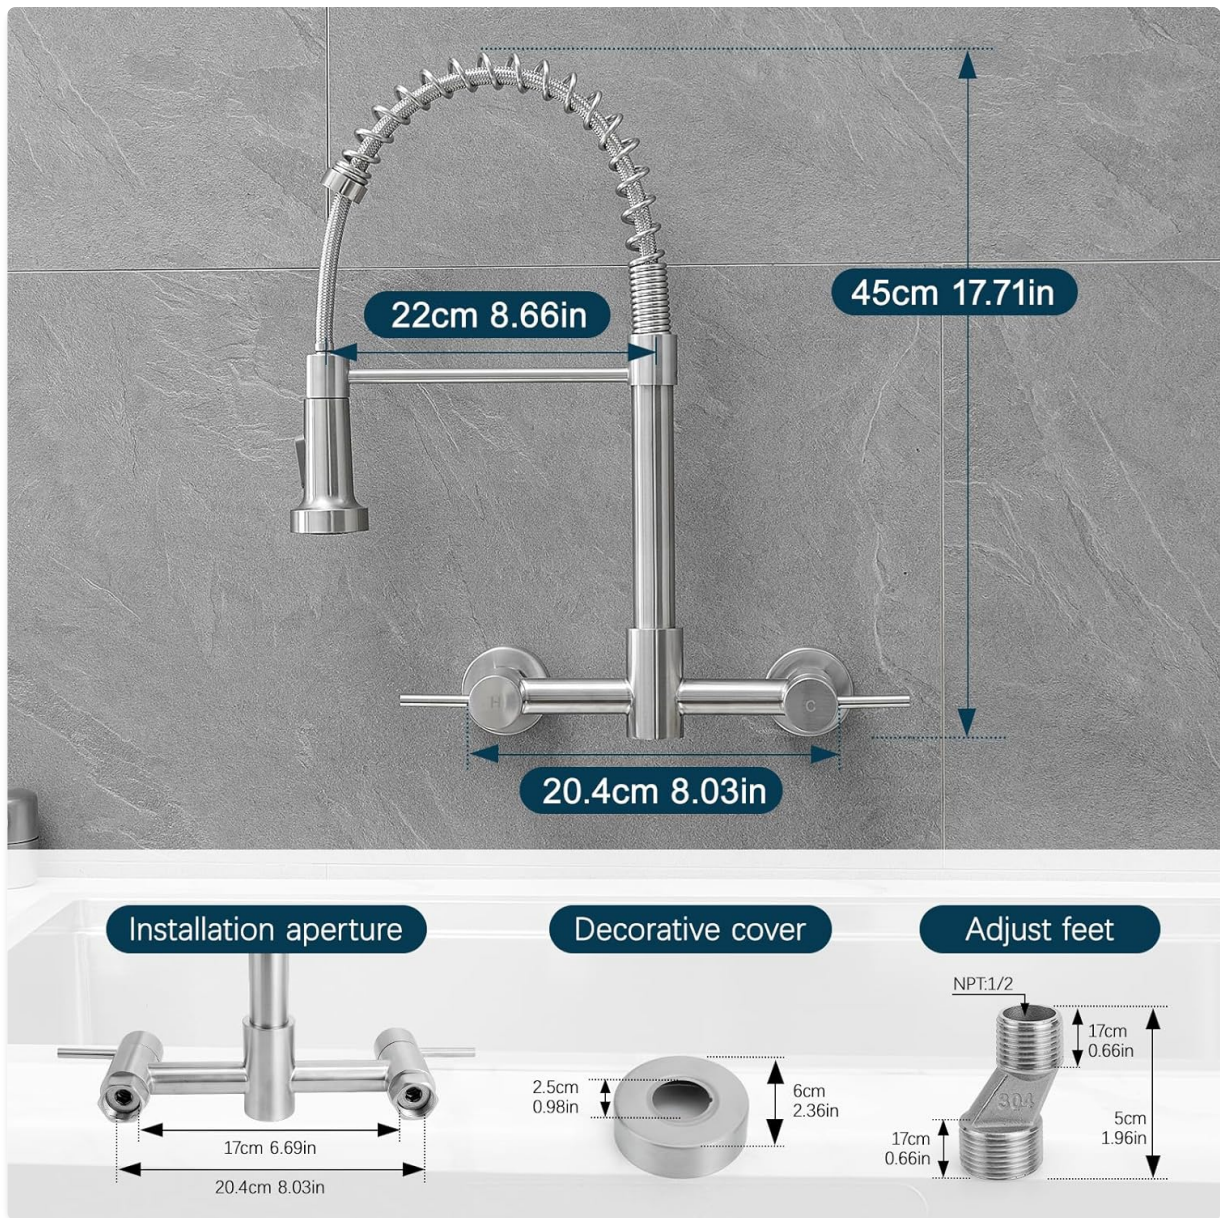


Figure 2: Faucet dimensions and installation components.

5. OPERATING INSTRUCTIONS

Your AIMADI faucet offers versatile functionality for various kitchen tasks:

- **Dual Lever Control:** The faucet features two levers for independent control of hot and cold water. Turn the 'H' lever for hot water and the 'C' lever for cold water. Adjust both to achieve your desired temperature.
- **Pull-Down Sprayer:** The integrated pull-down sprayer provides flexibility for cleaning and rinsing.
- **Two Water Flow Modes:** Switch between a steady stream for filling pots and a powerful spray for cleaning tasks using the button on the sprayer head.
- **360° Swivel Spout:** The spout can rotate 360 degrees, allowing you to easily access all areas of your sink and clean large items.



Hot and Cold Dual Control Faucet



Figure 3: Hot and Cold Dual Control Faucet operation.

Dual Mode



Spray Mode



Stream Mode



Figure 4: Dual water flow modes: Spray and Stream.

SWIVEL SPOUT

Two-way rotation can stretch and clean all corners of the sink



Figure 5: 360° Swivel Spout for full sink access.

6. MAINTENANCE

Proper care will ensure the longevity and performance of your faucet:

- **Cleaning:** Clean the faucet regularly with a soft cloth and mild soap. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the brushed stainless steel finish.
- **Ceramic Valve:** The faucet is equipped with an upgraded ceramic valve designed for drip-free performance and precise hot and cold water control. No special maintenance is typically required for the valve itself.
- **Sprayer Nozzles:** If mineral deposits build up on the sprayer nozzles, gently rub them with your finger or a soft brush to dislodge the deposits.



Stainless Steel

Two Modes

Save Water

Ceramic valve

Figure 6: Premium stainless steel construction for durability.

UPGRADED CERAMIC VALVE

No leakage hot and cold water control is more precise and smoother

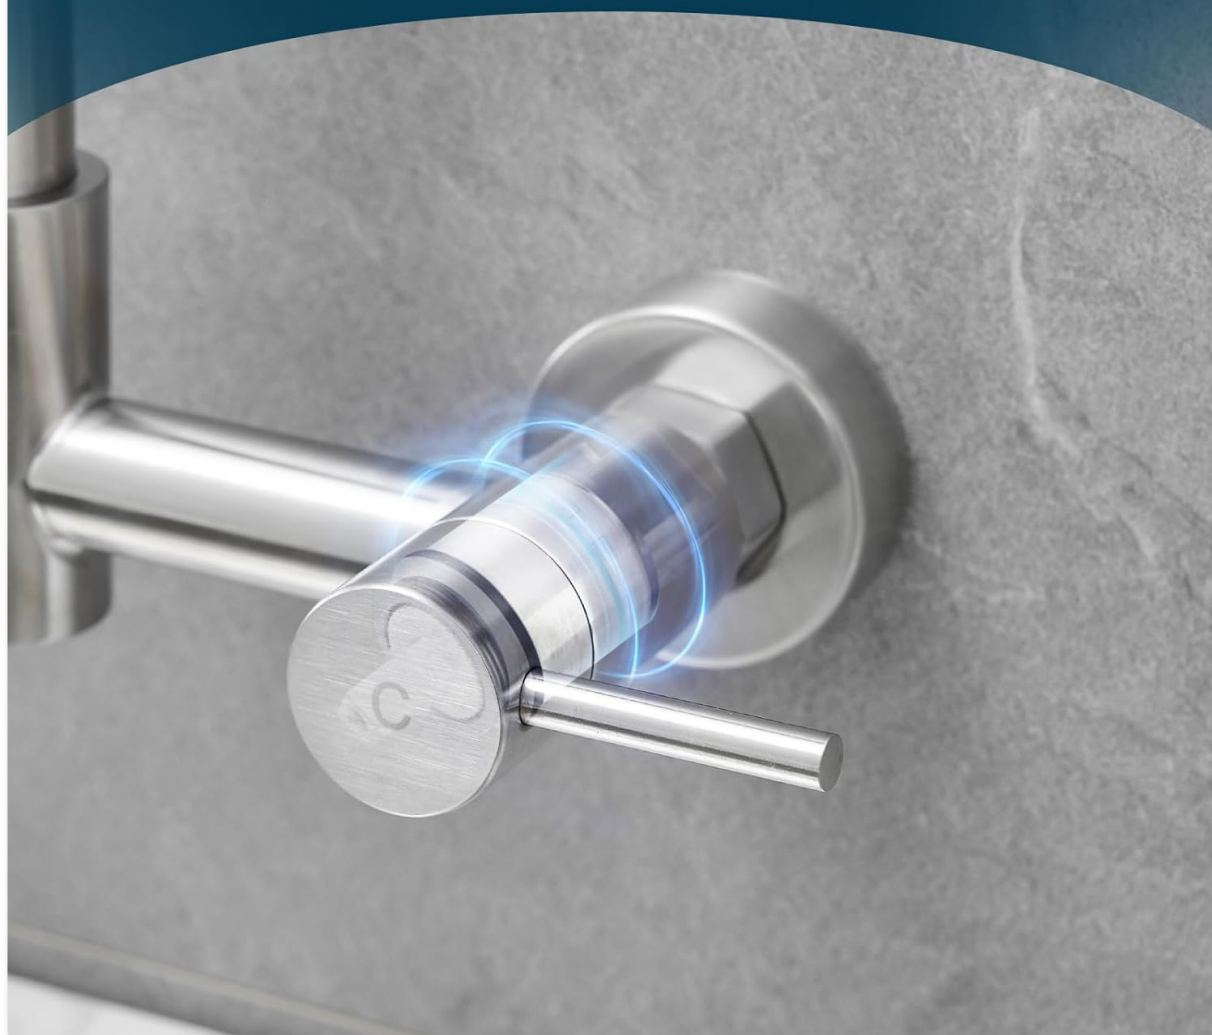


Figure 7: Upgraded ceramic valve for precise control and leak prevention.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Low Water Flow	Clogged aerator or mineral buildup.	Remove and clean the aerator. Check water supply valves for full opening.
Leaks from Faucet Base	Loose connections or damaged gaskets.	Ensure mounting nuts are tight. Check and replace gaskets if worn.
Sprayer Not Retracting Fully	Obstruction or insufficient weight.	Check for obstructions under the sink. Ensure the counterweight (if applicable) is properly positioned.
Water Temperature Issues	Incorrect hot/cold supply connections or water heater settings.	Verify hot and cold lines are connected correctly. Check your water heater settings.

8. SPECIFICATIONS

-
- **Brand:** AIMADI
 - **Model Name:** Wall Mount Kitchen Faucet
 - **Model Number:** AM14233N
 - **Mounting Type:** Wall Mount
 - **Finish Type:** Brushed
 - **Material:** Stainless Steel
 - **Color:** Wall Mount (Stainless Steel appearance)
 - **Number of Handles:** 2
 - **Hole Count:** 2
 - **Special Features:** 360° Swivel, Pull Down Sprayer, Two Water Modes (Stream/Spray)
 - **Spout Height:** 16 Inches
 - **Spout Reach:** 8 Inches
 - **Hose Length:** 20 Inches
 - **Item Weight:** 6 Pounds
 - **Product Dimensions:** 8"D x 8"W x 16"H
 - **UPC:** 665268644665

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official AIMADI website. Keep your proof of purchase for warranty claims.