

[Manuals.plus](#) /

> [Aecooly](#) /

> Aecooly Chic 01 Lite Touch Control Desk Fan User Manual

Aecooly Chic 01 Lite

Aecooly Chic 01 Lite Touch Control Desk Fan User Manual

Model: Chic 01 Lite (TB02)

1. SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Aecooly Chic 01 Lite Desk Fan and retain this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the fan or its power cord in water or other liquids.
- Keep the fan away from children and pets.
- Ensure the power supply voltage matches the specifications indicated on the fan.
- Do not block the air inlet or outlet during operation.
- Unplug the fan from the power source before cleaning or when not in use for extended periods.
- Do not attempt to repair or disassemble the fan. Contact qualified service personnel for repairs.
- Use only the charging cable provided or a certified USB-C cable.

2. PRODUCT OVERVIEW

2.1 Package Contents

- Aecooly Chic 01 Lite Desk Fan
- USB-C Charging Cable
- User Manual

2.2 Key Features

- **Smart Touch LED Screen:** Intuitive display for effortless control and adjustments.
- **100-Speed Precision Control:** Fine-tune airflow with 100 adjustable speed levels.
- **Gentle Forest Breeze:** Innovative mixed-flow fan design simulates natural airflow.
- **4000mAh Extended Battery Life:** High-capacity battery for long-lasting cordless operation.

- **Ultra-Quiet Operation:** Engineered for minimal noise at lower speeds.

2.3 Product Diagram



Figure 1: Front view of the Aeooly Chic 01 Lite Desk Fan.



Figure 2: Detail of the LED touch control panel with speed and power indicators.

Hybrid Flow Technology for a Natural Breeze

Powerful motor meets unique blade design,
strong yet gentle airflow for
ultimate comfort

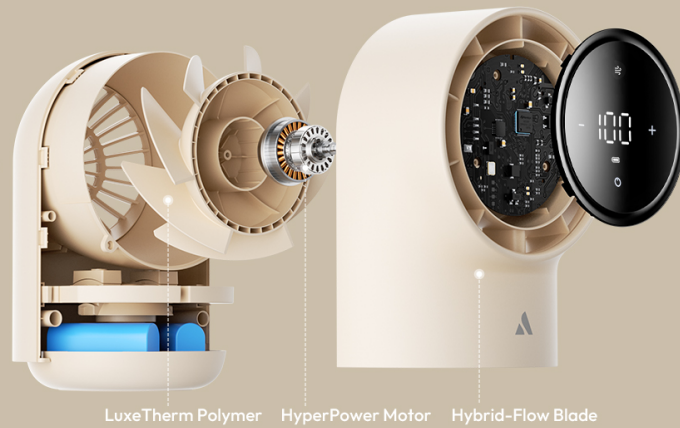


Figure 3: Internal structure of the fan, illustrating the hybrid-flow technology.

3. SETUP

3.1 Initial Charging

Before first use, fully charge the fan. Connect the provided USB-C cable to the charging port located at the base of the fan and plug the other end into a compatible USB power adapter (not included).

- The LED display will show the battery level during charging.
- A full charge typically takes approximately 3-4 hours.

Effortless Portability Take Comfort Anywhere



Figure 4: The fan's USB-C charging port, located at the base.

4. OPERATION

4.1 Power On/Off

- To turn the fan **ON**, lightly touch the power symbol (ⓘ) on the LED display.
- To turn the fan **OFF**, lightly touch the power symbol (ⓘ) again.

4.2 Adjusting Fan Speed

The fan offers two modes for speed adjustment:

- **Fine Adjustment (1-100 speeds):** Long press the '+' button to increase speed or the '-' button to decrease speed. Each long press adjusts the speed by 1 level.
- **Quick Adjustment (5 speeds: 20, 40, 60, 80, 100):** Short press the '+' button to increase speed or the '-' button to decrease speed. Each short press adjusts the speed by 20 levels.

4.3 Cordless Use

The built-in 4000mAh battery allows for portable use. Battery life varies depending on the selected speed setting:

- Up to 20 hours on the lowest speed setting.
- Approximately 5 hours on the highest speed setting.

Elegance in Silence
Excellence in Comfort

At low settings, savor tranquil operation,
perfectly paired with a gentle breeze for unparalleled comfort

20dB
Falling leaves

40dB
Fan working

60dB
Talking

Figure 5: The fan operating quietly on a bedside table.

5. MAINTENANCE

5.1 Cleaning

- Ensure the fan is turned off and unplugged before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces of the fan.
- For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals.
- Do not allow water to drip into the internal components.

5.2 Storage

- Store the fan in a cool, dry place when not in use.
- Keep it away from direct sunlight and extreme temperatures.
- If storing for a long period, charge the battery periodically (every 3-6 months) to maintain battery health.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan using the provided USB-C cable.
Fan stops unexpectedly.	Low battery.	Recharge the fan.
Weak airflow.	Fan speed is too low.	Increase the fan speed using the '+' button.
Unusual noise during operation.	Obstruction in the fan blades or motor.	Turn off and unplug the fan. Carefully check for and remove any obstructions. If the issue persists, contact customer support.
LED display is not working.	Fan is off or battery is very low.	Turn on the fan or charge the battery.

If you encounter any issues not listed here, please contact Aeooly customer support for assistance.

7. SPECIFICATIONS

Feature	Detail
Brand	Aeooly
Model Name	Chic 01 Lite
Item Model Number	TB02
Power Source	Battery Powered

Feature	Detail
Battery Capacity	4000mAh Lithium Ion (included)
Number of Power Levels	100
Control Method	Touch
Product Dimensions	5.43"D x 5.62"W x 8.21"H
Item Weight	2.07 pounds
Indoor/Outdoor Usage	Indoor, Outdoor
Certifications	FCC, CE, ROHS, UN38.3, KC

8. WARRANTY AND SUPPORT

Aecooly products are designed and manufactured to the highest quality standards. This product is covered by a limited warranty from the date of purchase. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, warranty claims, or general inquiries, please contact Aecooly customer service through the retailer where the product was purchased or visit the official Aecooly website.