

[Manuals.plus](#) /

› [Coleman](#) /

› Coleman Fold 'N Go 2-Burner Propane Stove Instruction Manual

Coleman 2157592

Coleman Fold 'N Go 2-Burner Propane Stove Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and care of your Coleman Fold 'N Go 2-Burner Propane Stove. Please read all instructions carefully before use and retain this manual for future reference.

SAFETY INFORMATION

WARNING: For outdoor use only. Do not operate this appliance indoors. Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Read the installation, operating, and maintenance instructions thoroughly before installing or servicing this equipment.

- Always operate the stove on a level, stable surface.
- Keep children and pets away from the stove during operation.
- Ensure adequate ventilation.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Always connect and disconnect the propane cylinder outdoors, away from ignition sources.
- Check for gas leaks using a soapy water solution before each use.

PACKAGE CONTENTS

- Coleman Fold 'N Go 2-Burner Propane Stove

SETUP

1. **Unfold the Stove:** Place the stove on a flat, stable surface. Release the latches and carefully unfold the stove until it lies flat, revealing the two burner areas. The integrated handle allows for easy transport when folded.



Folding Design and Handle

for easy carry and storage

Image: The Coleman Fold 'N Go stove in its compact, folded state, being carried by its handle. This design facilitates easy transport and storage.

2. **Connect Propane Cylinder:** Ensure both burner control knobs are in the 'OFF' position. Attach a 16 oz. propane cylinder (sold separately) to the regulator connection point on the side of the stove. Hand-tighten until snug. Do not overtighten.
3. **Place Grates:** Position the chrome-plated grates over each burner. Ensure they are seated correctly and securely.

OPERATING INSTRUCTIONS

1. **Ignition:** Turn the desired burner control knob slowly to the 'LIGHT' position. Press the InstaStart push-button ignition. If the burner does not light within 5 seconds, turn the knob to 'OFF', wait 5 minutes, and repeat the process.

PerfectFlow™ Pressure Control

keeps the heat steady



Image: The Coleman Fold 'N Go stove in operation, showing a propane tank connected and food being cooked on both burners. The InstaStart push-button ignition is visible for matchless lighting.

2. **Adjusting Burners:** Once lit, adjust the flame intensity by rotating the control knob. The stove features PerfectFlow pressure control technology to maintain steady heat and PerfectHeat technology for efficient cooking with less fuel.

PerfectHeat™ Technology

for cooking with less fuel

**2 ADJUSTABLE
BURNERS**

FITS TWO 10-INCH PANS

Image: A hand adjusting one of the two independent burner control knobs on the stove. The stove is designed to fit two 10-inch pans simultaneously.

3. **Cooking:** The stove provides 20,000 total BTUs of cooking power. It can accommodate two 10-inch pans simultaneously. A 16 oz. propane cylinder can provide up to 1 hour of burn time on high.



Image: A close-up view of food cooking on the stove, illustrating its powerful 20,000 BTUs of total cooking power. Note that a 16 oz. propane cylinder (sold separately) provides up to 1 hour of burn time on high.

4. **Shutting Down:** When finished cooking, turn both burner control knobs to the 'OFF' position. Allow the stove to cool completely before handling or storing. Disconnect the propane cylinder.

Your browser does not support the video tag.

Video: A product overview demonstrating the features and operation of the Coleman Fold 'N Go Stove, including setup and use.

MAINTENANCE

1. **Cleaning:** Allow the stove to cool completely. The durable, chrome-plated grates are removable for easy cleanup. Wipe down the stove surfaces with a damp cloth. Do not use abrasive cleaners.

Removable Chrome-Plated Grate

is easy to clean



Image: A hand cleaning the removable chrome-plated grate, demonstrating the ease of maintenance for the stove.



Image: A hand removing one of the grates from the stove, illustrating the removable design for thorough cleaning.

2. **Storage:** Ensure the stove is clean and dry before folding. Fold the stove compactly and secure the latches. Store in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Burner does not light:** Check if the propane cylinder is properly connected and has fuel. Ensure the control knob is turned to the 'LIGHT' position and the ignition button is pressed firmly.
- **Low flame:** Verify the propane cylinder has sufficient fuel. Ensure the regulator is securely attached.
- **Uneven flame:** Check that the grates are properly seated and not obstructing the flame.

SPECIFICATIONS

Brand	Coleman
Model Number	2157592

Fuel Type	Propane
Material	Alloy Steel
Product Dimensions (L x W x H)	16.1" x 9.3" x 17.1"
Item Weight	9 Pounds
Cooking Power	20,000 BTUs total
Pan Capacity	Fits two 10-inch pans

WARRANTY AND SUPPORT

This Coleman Fold 'N Go 2-Burner Propane Stove comes with a**3-Year Limited Warranty**. For warranty claims, technical support, or replacement parts, please contact Coleman customer service. Refer to the official Coleman website or your purchase documentation for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

My Coleman Fold 'N Go 2-Burner Propane Stove burns too hot; how can I adjust the flame for simmering?
To adjust the flame on your Coleman Fold 'N Go 2-Burner Propane Stove for simmering, follow these steps:Rotate the Control Knob: Once the burner is lit, you can adjust the flame intensity by slowly...
[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0DSJ8N19G>

More documents and user manuals: <https://manuals.plus/>