

Sekey 200L Oversized Foldable Cart

Sekey 200L Oversized Foldable Beach Wagon - Instruction Manual

Model: 200L Oversized Foldable Cart

[Introduction](#) [Safety](#) [Contents](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#)
[Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Sekey 200L Oversized Foldable Beach Wagon. This heavy-duty, all-terrain cart is designed to transport your gear with ease across various surfaces, including sand, gravel, and grass. Its large capacity and foldable design make it ideal for beach trips, camping, grocery hauling, and other outdoor activities. Please read this manual thoroughly before use to ensure proper assembly, operation, and maintenance.

2. SAFETY INFORMATION

- **Weight Capacity:** Do not exceed the maximum load capacity of 440 lbs (200 kg). Overloading can cause damage to the wagon and potential injury.
- **Children and Pets:** This wagon is not designed for transporting children or pets. Always supervise children around the wagon.
- **Assembly:** Ensure all parts are correctly assembled and secured before each use.
- **Brakes:** Always engage the wheel brakes when the wagon is stationary, especially on inclines, to prevent unintended movement.
- **Terrain:** While designed for all-terrain, exercise caution on extremely uneven or steep surfaces.
- **Handle:** Ensure the handle is securely locked in place at the desired height before pulling.
- **Storage:** Store the wagon in a dry, protected area when not in use to prevent rust and material degradation.

3. PACKAGE CONTENTS

Please check the package for the following items:

- Sekey Foldable Beach Wagon (main unit)
- 9-inch Balloon Wheels (4 pieces, may be pre-attached or require attachment)
- Air Pump for wheels
- Assembly Tools (wrench, hex key, screws/bolts as needed)
- User Manual



Image: Unfolded wagon with dimensions and included accessories like pump and tools.

4. SETUP INSTRUCTIONS

4.1 Unfolding the Wagon

1. Place the folded wagon on a flat, stable surface.

2. Release any securing straps or clips that hold the wagon in its folded position.
3. Gently pull the sides of the wagon outwards until the frame fully expands and locks into place. You may need to press down on the center of the wagon floor to ensure it is fully extended.



Image: Diagram illustrating the folding and unfolding mechanism of the wagon.

4.2 Attaching and Inflating Wheels

If the wheels are not pre-attached:

1. Locate the wheel axles on the wagon frame.
2. Slide each wheel onto its respective axle, ensuring the locking pin or mechanism engages securely.
3. Use the provided air pump to inflate the balloon tires. Inflate to the recommended pressure indicated on the tire or in the manual (typically low pressure for sand performance). Do not overinflate.

ALL-TERRAIN BALLOON WHEELS



Oversized wheels roll smoothly across sand without sinking.

Raised treads ensure a firm grip


Non-Slip


Flat Free


Wear Resistant


Load Capacity
220lbs

Image: Close-up view of the 9-inch balloon wheels, highlighting their width and tread for sand-proof performance.

5. OPERATING INSTRUCTIONS

5.1 Loading the Wagon

- Distribute weight evenly within the wagon to maintain balance and stability.
- Place heavier items at the bottom and center of the wagon.
- Secure loose items to prevent them from shifting or falling out during transport.

PACK IT ALL.



One Trip, Zero Hassle!



Beach Umbrella

x30



Surfboard

x4



Folding Chair

x20



Ice Bag

x6



Swimming Ring

x10



Beer Bottle

X440

Image: The wagon loaded with various beach items such as a surfboard, cooler, and bags, demonstrating its large capacity.

5.2 Adjusting the Handle

1. Locate the handle adjustment mechanism (typically a button or lever near the handle base).
2. Press or release the mechanism and extend or retract the handle to a comfortable pulling height.
3. Ensure the handle locks securely in place before pulling.



Turns Go.

Where You

Effortless Turning



Turns on a dime,
follows your lead

Height Adjust



Image: The wagon demonstrating its maneuverability with swivel front wheels and an adjustable handle for comfortable pulling.

5.3 Pulling and Steering

- The front wheels are designed to swivel 360 degrees for easy steering.
- Pull the wagon using the adjustable handle. For optimal control, especially on uneven terrain, maintain a steady pace.
- On soft sand, pulling the wagon may require more effort. The wide balloon wheels are designed to minimize sinking.

5.4 Engaging Brakes

- Each wheel is equipped with a brake.
- To engage, press down on the brake lever located near each wheel.
- To release, lift the brake lever.

5.5 Folding the Wagon for Storage

1. Ensure the wagon is empty.
2. Locate the pull strap or handle in the center of the wagon floor.

3. Pull upwards on this strap to collapse the wagon frame inwards.
4. Secure the folded wagon with any integrated straps or clips to keep it compact.



Image: The wagon in its compact folded state, shown fitting into a car trunk, illustrating space-saving storage.

6. MAINTENANCE

- **Cleaning:** After each use, especially after exposure to sand or saltwater, clean the fabric and frame with fresh water and a mild soap. Rinse thoroughly and allow to air dry completely before folding and storing.
- **Lubrication:** Periodically apply a silicone-based lubricant to moving parts, such as wheel axles and folding joints, to ensure smooth operation and prevent rust.
- **Tire Pressure:** Check tire pressure regularly. Inflate as needed using the provided pump.
- **Inspection:** Regularly inspect the frame, fabric, and wheels for any signs of wear, damage, or loose fasteners. Tighten any loose bolts or screws.
- **Storage:** Store the wagon in a cool, dry place away from direct sunlight and extreme temperatures to prolong its lifespan.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Wagon is difficult to pull or steer.	Uneven weight distribution, low tire pressure, debris in wheels, very soft sand.	Redistribute load, check and inflate tires, clear any obstructions from wheels, pull with steady motion.
Wagon does not fold or unfold smoothly.	Mechanism obstructed, joints stiff or dirty.	Ensure no items are blocking the folding mechanism. Clean and lubricate joints.
Wheels wobble or feel loose.	Axle not fully engaged, loose fasteners.	Ensure wheels are properly attached and locking pins are secure. Tighten any visible bolts or screws on the wheel assembly.
Brakes are not holding.	Brake mechanism dirty or worn.	Clean brake mechanism. If wear is significant, contact customer support for replacement parts.

8. SPECIFICATIONS

- **Product Dimensions (Unfolded):** 43.34"D x 24.63"W x 45.31"H
- **Folded Size:** Approximately 13.8"D x 18.1"W x 27.6"H
- **Brand:** Sekey
- **Material:** Alloy Steel frame, Oxford fabric
- **Color:** Black
- **Special Features:** 9-inch Balloon tires, Large Capacity (200L), Maneuverable, Sand Friendly, Adjustable Handle, Swivel Caster Type
- **Number of Wheels:** 4
- **Weight Capacity Maximum:** 440 Pounds (200 kg)
- **Handle Material:** Aluminum
- **Frame Material:** Metal

9. WARRANTY AND SUPPORT

Sekey products are designed for durability and performance. For specific warranty information, please refer to the warranty card included with your purchase or visit the official Sekey website. If you encounter any issues or require assistance, please contact Sekey customer support through the retailer where you purchased the product or via the contact information provided on the Sekey brand website.

Please retain your proof of purchase for warranty claims.

