

[Manuals.plus](#) /

> [SBS](#) /

> SBS PowerBank Laptop 20K Slim 20000 mAh User Manual

SBS TTBB20000PD100W

SBS PowerBank Laptop 20K Slim 20000 mAh User Manual

Model: TTBB20000PD100W

INTRODUCTION

Thank you for choosing the SBS PowerBank Laptop 20K Slim. This portable power bank is designed to provide reliable and fast charging for a wide range of devices, including smartphones, tablets, and laptops. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan.

The SBS PowerBank Laptop 20K Slim features a 20,000 mAh capacity, 100W Power Delivery (PD) via USB-C, and Adaptive Fast Charge (AFC) via USB-A, along with an integrated LCD display for real-time monitoring.

PACKAGE CONTENTS

- SBS PowerBank Laptop 20K Slim (Model: TTBB20000PD100W)
- USB-A to USB-C Charging Cable
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the components of your power bank.

100W



Image: Front view of the SBS PowerBank Laptop 20K Slim, highlighting its 100W output capability and LCD screen.

Recharge your devices

Ideal for Laptops and Macbooks

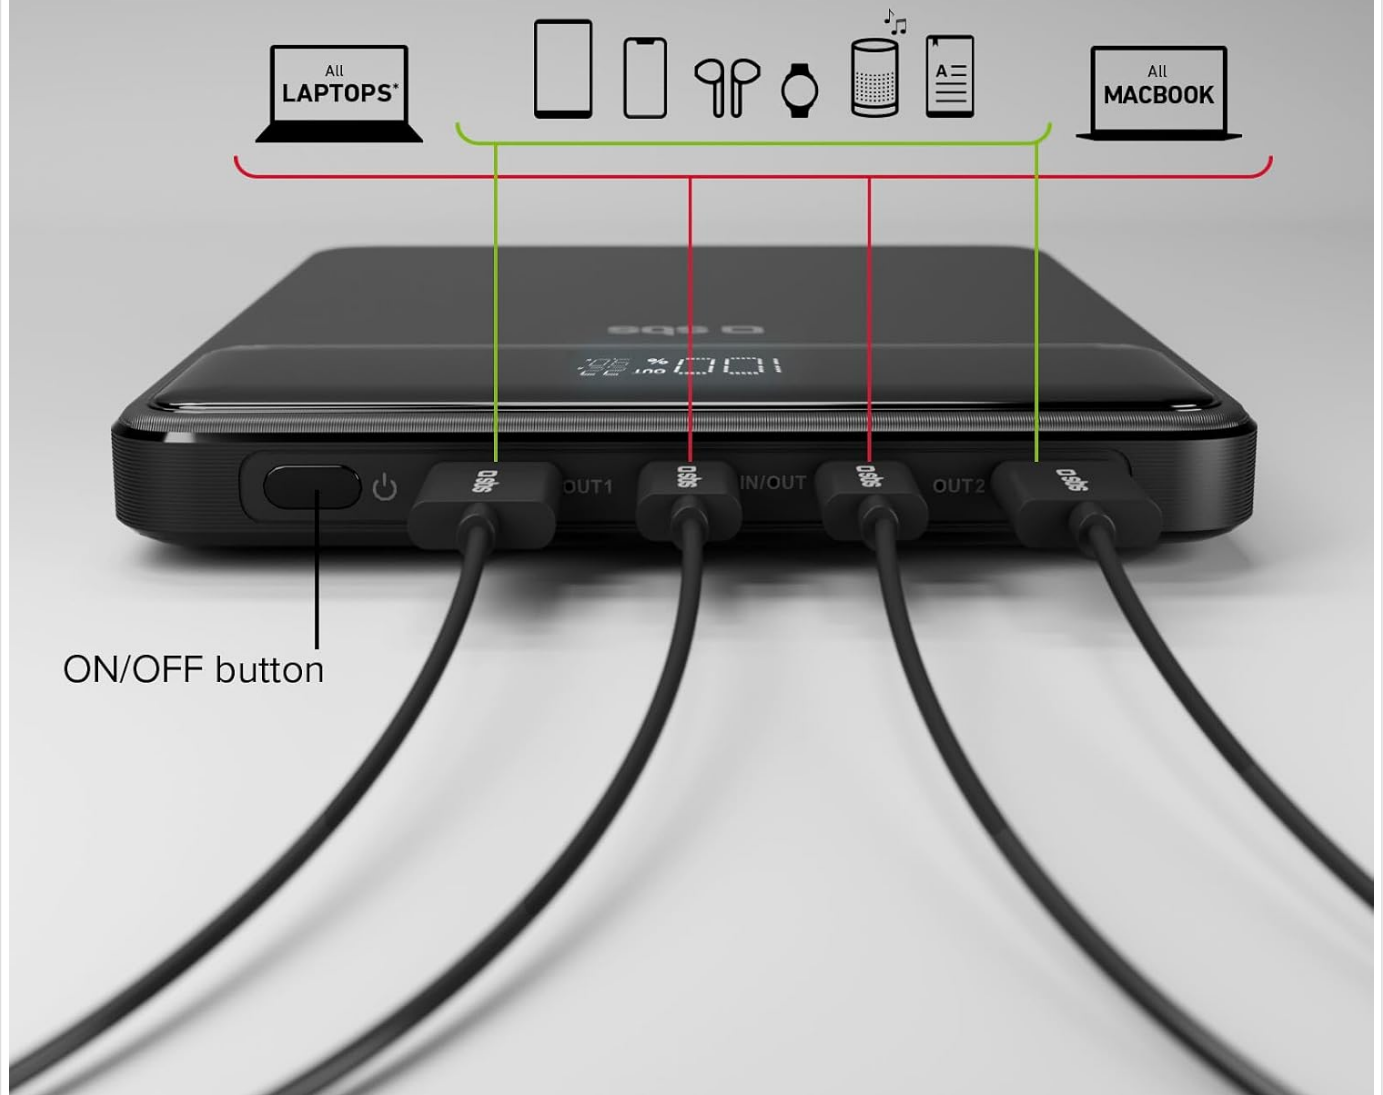


Image: Side view of the power bank showing the ON/OFF button, USB-A OUT1, USB-C IN/OUT, USB-C OUT2, and USB-A OUT2 ports.

- **Power Button:** Press to turn on the power bank and check the LCD display.
- **USB-C IN/OUT Port (100W Max):** Used for charging the power bank itself and for charging compatible devices with Power Delivery.
- **USB-C OUT2 Port (100W Max):** Used for charging compatible devices with Power Delivery.
- **USB-A OUT1 Port (30W Max):** Used for charging compatible devices with Adaptive Fast Charge.
- **USB-A OUT2 Port (30W Max):** Used for charging compatible devices with Adaptive Fast Charge.
- **LCD Display:** Shows remaining battery capacity and real-time charging voltage/current.

SETUP

Charging the Power Bank

1. Connect the provided USB-A to USB-C cable to a compatible wall charger (not included) and the USB-C IN/OUT port on the power bank. For faster charging of the power bank, use a USB-C to USB-C cable with a Power Delivery

compatible wall charger.

2. The LCD display will show the charging status and current battery percentage.
3. Once fully charged, the display will show 100%. Disconnect the power bank from the charger.



Image: Close-up of the LCD display showing remaining capacity and charging voltage/current.

OPERATING INSTRUCTIONS

Charging Your Devices

1. Press the power button once to activate the power bank and view the battery level on the LCD display.
2. Connect your device to one of the available output ports using an appropriate charging cable.
 - For devices supporting Power Delivery (e.g., laptops, MacBooks, some smartphones), use the USB-C IN/OUT or USB-C OUT2 ports.
 - For devices supporting Adaptive Fast Charge (e.g., many smartphones, tablets), use the USB-A OUT1 or USB-A OUT2 ports.

3. The power bank will automatically begin charging your device. The LCD display will show the output power.
4. To stop charging, disconnect your device. The power bank will automatically turn off after a period of inactivity.

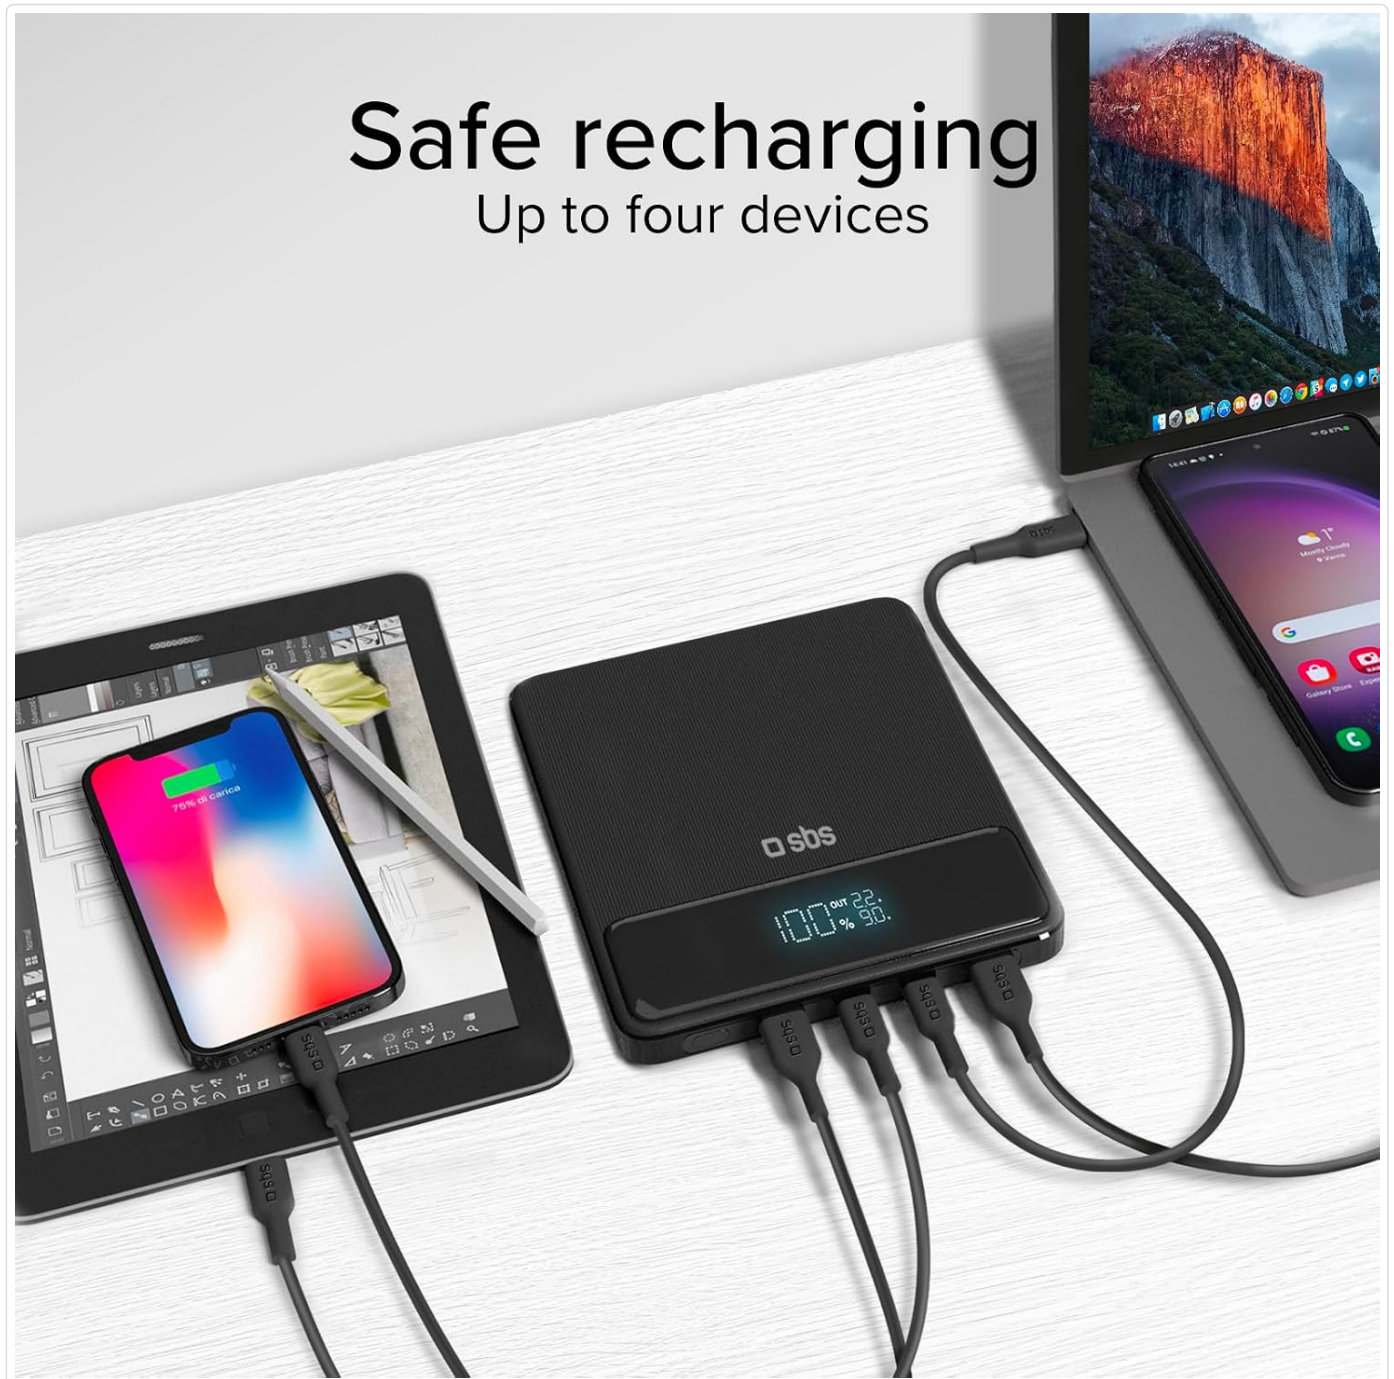 



Image: The power bank simultaneously charging a laptop, tablet, and smartphone, demonstrating its multi-device charging capability.

Port Usage Guide


The power bank supports various charging configurations. Refer to the diagrams below for maximum power output in single and simultaneous use scenarios.

Usb Port Usage Guide

 Maximum power output

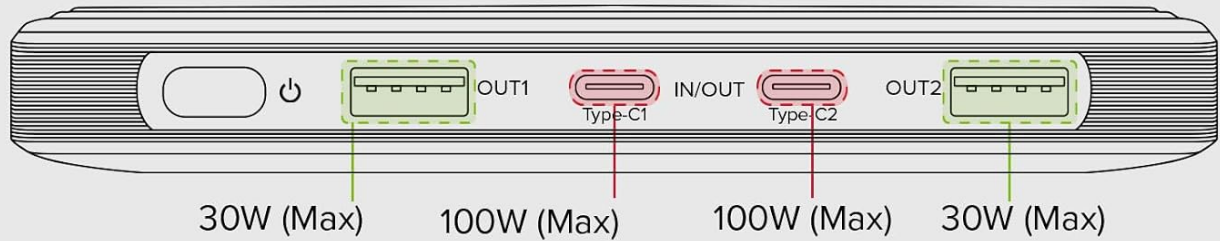

Single use

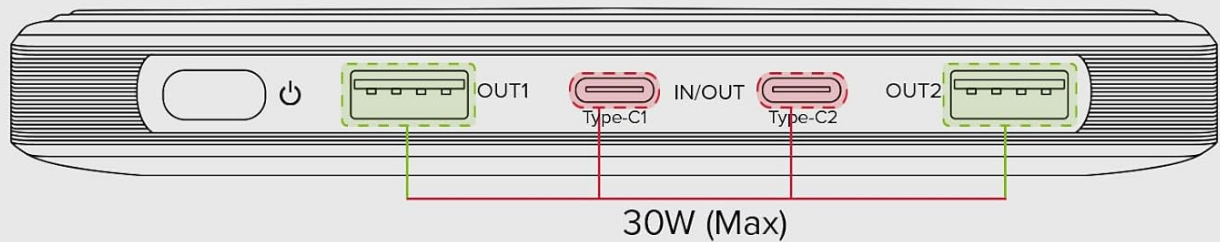

Simultaneous use

Image: Diagram illustrating maximum power output for single port usage: USB-A ports up to 30W, USB-C ports up to 100W.

Combined use of USB ports

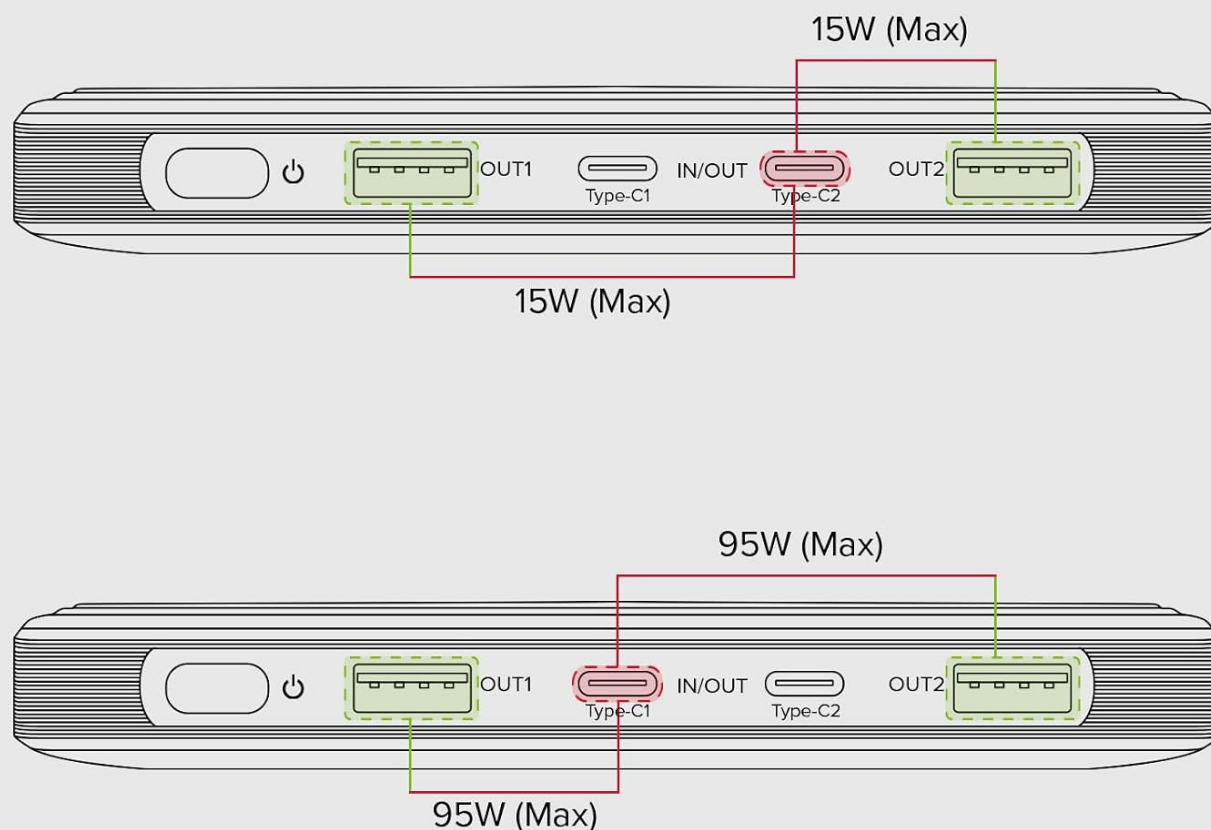


Image: Diagram illustrating combined power output for simultaneous port usage, showing reduced wattage per port when multiple ports are active.

SAFETY INFORMATION

- Do not expose the power bank to extreme temperatures, direct sunlight, or fire.
- Do not immerse the power bank in water or other liquids.
- Avoid dropping or subjecting the power bank to strong impacts.
- Do not attempt to disassemble, repair, or modify the power bank.
- Keep out of reach of children.
- Use only original or certified charging cables.
- Dispose of the power bank responsibly according to local regulations.

MAINTENANCE

- Clean the power bank with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the power bank in a cool, dry place when not in use.
- For optimal battery life, fully charge the power bank at least once every three months if stored for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging	Cable not connected properly; faulty cable/charger; power bank battery depleted.	Ensure cable is securely connected. Try a different cable or wall charger. Allow sufficient time for initial charge.
Device not charging from power bank	Power bank off; low power bank battery; incompatible cable; device charging port issue.	Press power button to activate. Recharge power bank. Use a different cable. Check device charging port.
Slow charging	Non-fast charging cable/charger; multiple devices connected; device not supporting fast charge.	Use PD/AFC compatible cables and chargers. Disconnect other devices. Ensure your device supports fast charging protocols.
LCD display not working	Power bank off; temporary glitch.	Press the power button. If issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	TTBB20000PD100W
Battery Capacity	20,000 mAh
Battery Type	Lithium-Polymer
USB-C Output (PD)	Up to 100W (2 ports)
USB-A Output (AFC)	Up to 30W (2 ports)
Total Ports	4 (2x USB-C, 2x USB-A)
Input (USB-C)	Up to 100W
Display	LCD (Battery % and Power Output)
Dimensions (L x W x H)	15.5 x 1.9 x 13.5 cm
Weight	500 g
Color	Black
Special Features	Digital display, Fast charging, Short-circuit protection, Discharge protection, Slim design

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the

warranty card included in your package or visit the official SBS website. If you encounter any issues or have questions regarding your SBS PowerBank Laptop 20K Slim, please contact SBS customer support.

SBS Official Website: www.sbsmobile.com

© 2026 SBS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DSJFXNYK>

More documents and user manuals: <https://manuals.plus/>