

Vikan 29089

Vikan 29089 Table & Floor Scraper

Instruction Manual

1. PRODUCT OVERVIEW

The Vikan 29089 Table & Floor Scraper is designed for efficient removal of stubborn debris from various surfaces. Its robust construction and specialized blade make it suitable for demanding environments such as the food industry, as well as for general cleaning tasks like removing labels or chewing gum from floors.

This scraper features a shorter, durable stainless-steel blade, which enhances its efficiency in tackling tough residues with less effort.



Image 1.1: Side view of the Vikan 29089 Table & Floor Scraper, highlighting its ergonomic design and blade angle.

2. SAFETY INSTRUCTIONS

- **Handle with Care:** The scraper features a sharp stainless-steel blade. Always handle with caution to prevent injury.
- **Protective Gear:** Consider wearing appropriate protective gloves, especially during prolonged use or when handling sharp edges.
- **Intended Use:** Use the scraper only for its intended purpose of removing debris from surfaces. Avoid using it as a prying tool or for tasks that could damage the blade or handle.
- **Storage:** Store the scraper in a safe place, away from children and in a manner that protects the blade from damage and prevents accidental contact.
- **Surface Compatibility:** Before use, ensure the surface to be scraped is compatible with a stainless-steel blade to avoid scratching or damage.

3. SETUP

The Vikan 29089 scraper is designed for use with a compatible Vikan handle (sold separately) featuring a Euro thread connection. This allows for extended reach and improved leverage.

1. **Select a Handle:** Choose a Vikan handle with a Euro thread that is appropriate for your task and desired reach.
2. **Attach the Handle:** Align the threaded end of the handle with the scraper's connection point. Twist the handle clockwise until it is securely fastened. Do not overtighten.
3. **Verify Connection:** Ensure the handle is firmly attached and does not wobble before beginning use.





Image 3.1: Front view of the Vikan 29089 Scraper, showing the blade and handle connection point.

4. OPERATING INSTRUCTIONS

Follow these steps for effective and safe operation of your Vikan 29089 scraper:

1. **Prepare the Area:** Clear any loose debris from the surface before scraping to prevent interference.
2. **Position the Scraper:** Hold the scraper firmly with the blade at a low angle (approximately 15-30 degrees) to the surface. A lower angle is generally more effective for stubborn, flat debris.
3. **Apply Pressure:** Apply steady, firm pressure to the scraper while pushing or pulling it across the debris. The shorter blade design allows for concentrated force, requiring less overall effort.
4. **Scraping Motion:** Use short, controlled strokes. For very stubborn material, multiple passes may be necessary.
5. **Collect Debris:** After scraping, collect the loosened debris using a brush, dustpan, or vacuum.

Applications:

- **Food Industry:** Ideal for removing baked-on food residues, grease, and other stubborn deposits from tables, floors, and processing equipment.
- **General Cleaning:** Effective for removing sticky substances like labels, tape residue, chewing gum, and dried

spills from hard floors and other non-delicate surfaces.



Image 4.1: Top view of the Vikan 29089 Scraper, illustrating the blade's width and overall profile.

5. MAINTENANCE

Proper maintenance ensures the longevity and effectiveness of your Vikan 29089 scraper.

- **Cleaning:** After each use, clean the blade and handle thoroughly. The scraper is dishwasher safe, with a maximum cleaning temperature of 199.4 °F (93 °C).
- **Drying:** Dry the stainless-steel blade completely after washing to prevent water spots or corrosion.
- **Inspection:** Regularly inspect the blade for any signs of dullness, nicks, or damage. A dull blade will be less effective and may require more force, increasing the risk of injury or surface damage.
- **Storage:** Store the scraper in a dry environment. If a handle is attached, ensure it is stored upright or in a manner that protects the blade.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Scraper not effectively removing debris.	Blade is dull or damaged. Incorrect scraping angle. Insufficient pressure.	Inspect blade for sharpness; replace if necessary. Adjust scraping angle to be lower (15-30 degrees). Apply more consistent, firm pressure.
Scraper leaves scratches on the surface.	Surface is too delicate for scraping. Blade is damaged or has burrs. Incorrect angle or excessive force.	Discontinue use on delicate surfaces. Inspect blade for imperfections; smooth with fine-grit sandpaper if minor, otherwise replace. Reduce force and adjust angle.
Handle becomes loose during use.	Handle not tightened sufficiently. Thread wear.	Retighten the handle securely. If loosening persists, inspect threads on both scraper and handle for wear; replace worn components.

7. SPECIFICATIONS

- Model Number:** 29089
- Brand:** Vikan
- Product Dimensions:** 9.6" W x 4.9" H (Scraper head only)
- Item Weight:** 0.38 Pounds (approx. 6 ounces)
- Blade Material:** Stainless Steel
- Blade Length:** 1.57 Inches
- Blade Width:** 1 Inch

Handle Material: Designed for use with Vikan Euro-threaded handles (handle not included)

Max Usage Temperature (non-food contact): 338 °F (170 °C)

Max Cleaning Temperature (Dishwasher): 199.4 °F (93 °C)

Color: Black (as per current product variant)

8. WARRANTY INFORMATION

Vikan products are manufactured to high standards. For specific warranty details, please refer to the official Vikan website or contact Vikan customer support directly. Keep your proof of purchase for any warranty claims.

9. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your Vikan 29089 Table & Floor Scraper, please visit the official Vikan website or contact their customer service department. Contact information can typically be found on the Vikan website or product packaging.

You can also visit the [Vikan Store on Amazon](#) for more product information.

© 2024 Vikan. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

