

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [COSTWAY](#) /

› [COSTWAY 4-Tier Slim Rolling Storage Cart \(M | 13 cm, Grey + Natural\) Instruction Manual](#)

COSTWAY VH33383FR

COSTWAY 4-Tier Slim Rolling Storage Cart (M | 13 cm, Grey + Natural) Instruction Manual

1. INTRODUCTION AND PRODUCT OVERVIEW

Thank you for choosing the COSTWAY 4-Tier Slim Rolling Storage Cart. This manual provides essential information for the safe assembly, operation, and maintenance of your product. Please read it thoroughly before use and retain it for future reference.

This 4-tier rolling cart is designed to offer organized storage in compact spaces. Its slim profile allows it to fit into narrow gaps, maximizing storage potential in areas such as kitchens, laundry rooms, bathrooms, or living rooms. The cart features four open shelves, protective side bars to prevent items from falling, and four smooth-rolling casters, two of which are lockable for stability. A convenient side handle facilitates easy movement.



Image 1.1: The COSTWAY Slim Rolling Storage Cart in a kitchen setting, demonstrating its ability to fit into narrow spaces.



Image 1.2: The versatile storage cart used in a living room, holding snacks and other household items.

2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent injury or damage, please observe the following safety guidelines:

- Exercise caution with any sharp edges during assembly and handling.
- Do not exceed the maximum weight capacity for each shelf:
 - Upper and Middle Shelves: 5 kg (11 lbs) each.
 - Bottom Shelf: 7 kg (15.4 lbs).
- Ensure all components are correctly assembled and securely fastened before placing any items on the cart or moving it.
- Keep children away from the cart during assembly and do not allow them to play on, with, or around the cart to prevent accidents.
- Distribute weight evenly across the shelves to maintain stability.

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all parts listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer service.

- 1 x Slim Rolling Storage Cart (disassembled components)
- 1 x Assembly Hardware Kit (screws, casters, etc.)
- 1 x Instruction Manual (this document)

4. SETUP AND ASSEMBLY

Follow these steps to assemble your COSTWAY Slim Rolling Storage Cart:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Refer to the included parts diagram (if available in the physical manual) to identify each component and piece of hardware.
3. **Attach Casters:** Securely attach the four casters to the bottom panel of the cart using the provided screws. Ensure two of the casters are the lockable type and are positioned where they can be easily accessed.
4. **Assemble Side Panels and Shelves:** Connect the side panels to the bottom panel, then slide the shelves into the designated slots. Ensure the protective bars on the shelves are facing upwards.
5. **Secure Connections:** Use the remaining screws to firmly connect all panels and shelves. Do not overtighten.
6. **Attach Top Panel and Handle:** Place the top panel onto the assembled structure and secure it. Attach the side handle to the designated side panel.
7. **Final Check:** Verify that all screws are tightened and the cart is stable before use.



Contrôlez la Direction comme Vous le Souhaitez

Roues Universelles Verrouillables

Image 4.1: Detail of the lockable caster wheel, showing the mechanism to engage and disengage the brake.

5. OPERATING INSTRUCTIONS

Using your COSTWAY Slim Rolling Storage Cart is straightforward:

- **Loading Items:** Place items on the shelves, ensuring that the weight is distributed evenly. Adhere to the maximum weight capacities specified in the Safety Instructions. The protective bars are designed to help keep items secure.
- **Moving the Cart:** To move the cart, unlock the two lockable casters by flipping their levers. Grasp the side handle and gently push or pull the cart to its desired location.
- **Securing the Cart:** Once the cart is in position, engage the brakes on the two lockable casters to prevent unintended movement.
- **Placement:** This cart is ideal for narrow spaces. Position it between appliances, furniture, or in tight corners to utilize otherwise unused space.

Étagères de Rangement de 3 Hauteurs Différentes

Pratique pour classer et stocker



Image 5.1: Visual guide to shelf heights and recommended item types, such as seasoning jars, canned goods, cups, snacks, and bottles.

6. MAINTENANCE

Proper maintenance will extend the life and appearance of your storage cart:

- **Cleaning:** The cart features an easy-to-clean surface. Wipe down the surfaces with a soft, damp cloth. Avoid using abrasive cleaners, harsh chemicals, or solvents, as these can damage the finish.
- **Regular Checks:** Periodically inspect all screws and connections to ensure they remain tight. Retighten any loose fasteners to maintain the cart's stability and structural integrity.
- **Caster Care:** Keep the casters free of hair, dust, and debris to ensure smooth rolling.



Poignée Pratique



Faciliter la poussée
du meuble

Garde-corps Antichute



Empêcher les
objets de tomber



Surface Facile à Nettoyer



Entretien quotidien simplifié

Image 6.1: Features highlighting the practical handle, anti-fall guardrail, and the easy-to-clean surface for simplified daily maintenance.

7. TROUBLESHOOTING

If you encounter any issues with your storage cart, refer to the following common problems and solutions:

- **Cart is Unstable or Wobbly:**
 - Ensure all assembly screws are fully tightened.
 - Verify that the cart is placed on a flat, level surface.
 - Check if the lockable casters are properly engaged when stationary.
- **Casters Not Rolling Smoothly:**
 - Inspect the casters for any trapped debris (e.g., hair, dust, small objects) and remove them.
 - Ensure the caster brakes are disengaged.
- **Items Falling Off Shelves:**

- Confirm that the protective side bars are correctly installed and facing upwards.
- Do not overload the shelves beyond their stated weight capacity.
- Ensure items are placed securely and not overhanging the edges.

8. SPECIFICATIONS

Brand	COSTWAY
Model Number	VH33383FR
Color	Grey + Natural
Overall Dimensions (L x W x H)	47.5 x 13 x 80.5 cm (18.7 x 5.1 x 31.7 inches)
Material	Engineered Wood, Metal
Item Weight	5.5 kg (12.1 lbs)
Max Weight Capacity (Upper/Middle Shelves)	5 kg (11 lbs) each
Max Weight Capacity (Bottom Shelf)	7 kg (15.4 lbs)
Shelf Heights (from top to bottom)	18.5 cm, 24.5 cm, 27.5 cm
Edge Heights (from top to bottom)	8 cm, 8 cm, 11.5 cm

Spécifications

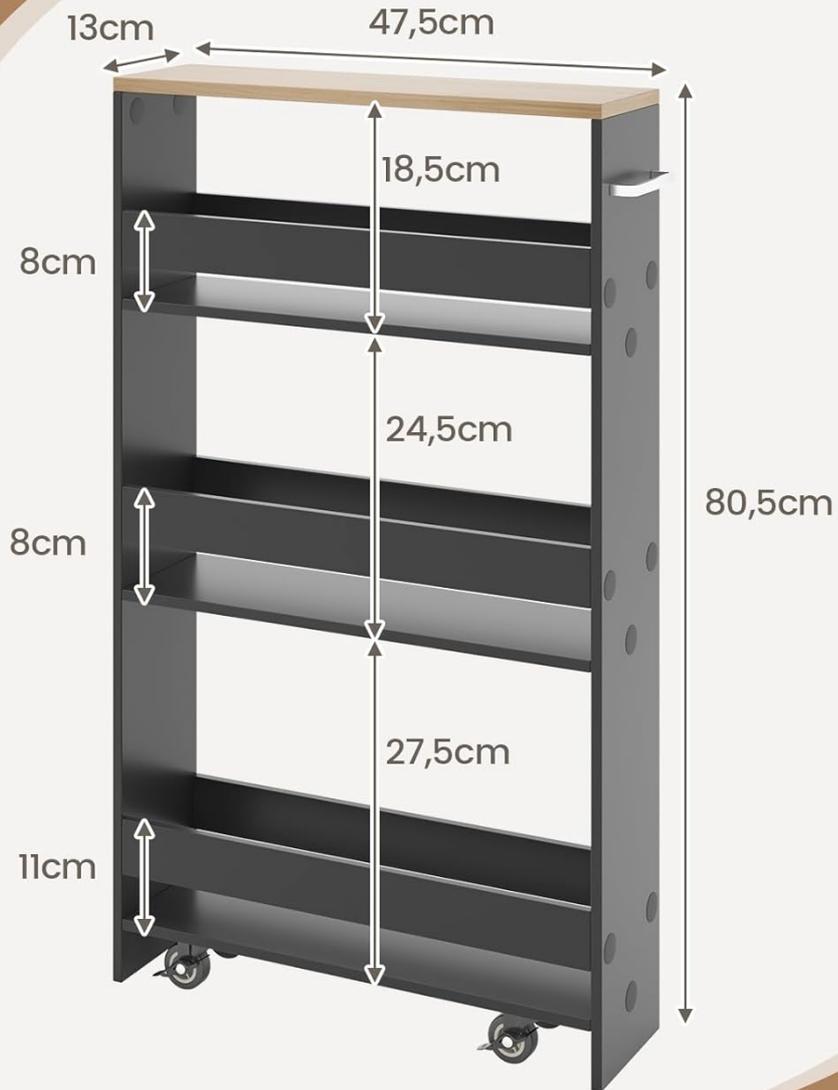


Image 8.1: Technical drawing with precise measurements of the cart's length, width, height, and individual shelf clearances.

9. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available data. For details regarding warranty coverage, returns, or technical support, please refer to the purchase documentation or contact COSTWAY customer service directly through their official website or the retailer where the product was purchased.