

Ninja AF180EUWH

Ninja Air Fryer MAX PRO 6.2L (AF180EUWH) Instruction Manual

1. IMPORTANT SAFEGUARDS

Please read all instructions carefully before using your Ninja Air Fryer MAX PRO. Failure to follow these instructions may result in property damage, personal injury, or death.

- Always ensure the appliance is placed on a stable, level, heat-resistant surface.
- Do not immerse the power cord, plugs, or main unit housing in water or other liquids.
- Keep the appliance and its cord out of reach of children.
- Do not block the air vents during operation.
- Always unplug the appliance when not in use and before cleaning.
- Allow the appliance to cool completely before handling or cleaning.
- Use only Ninja-recommended accessories and attachments.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

2. PRODUCT OVERVIEW

The Ninja Air Fryer MAX PRO AF180EUWH is designed for versatile cooking with minimal oil, offering 6 cooking functions and a generous 6.2L capacity.



Figure 1: Front view of the Ninja Air Fryer MAX PRO AF180EUWH, showing the digital control panel and handle.



Figure 2: Angled view of the Ninja Air Fryer MAX PRO AF180EUWH, highlighting its compact design and side vents.

What's in the Box:

- Ninja Air Fryer MAX PRO Main Unit
- 6.2L Non-stick Cooking Basket
- Non-stick Crisper Plate
- Instruction Manual (this document)
- Chef-created Recipe Booklet

Control Panel Overview:

The digital control panel features intuitive buttons for temperature, time, and cooking functions.

- **Power Button:** Turns the unit on/off.
- **TEMP Arrows:** Adjust cooking temperature.
- **TIME Arrows:** Adjust cooking time.
- **Function Buttons:** MAX CRISP, AIR FRY, ROAST, BAKE, REHEAT, DEHYDRATE.
- **START/STOP Button:** Begins or pauses cooking.

3. SETUP AND FIRST USE

1. **Unpack:** Remove all packaging materials, stickers, and labels from the unit.
2. **Clean Components:** Wash the cooking basket and crisper plate in warm, soapy water, then rinse and dry thoroughly. The main unit can be wiped with a damp cloth.
3. **Placement:** Place the main unit on a clean, dry, level, heat-resistant surface, ensuring adequate clearance around the unit for proper airflow.
4. **Initial Run (Optional but Recommended):** To eliminate any manufacturing odors, you may run the unit empty for 10-15 minutes on the 'Air Fry' setting at 200°C (390°F). A slight odor is normal during first use.

4. OPERATING INSTRUCTIONS

The Ninja Air Fryer MAX PRO offers 6 versatile cooking functions:

- **MAX CRISP:** Ideal for cooking frozen foods quickly at 240°C.
- **AIR FRY:** Circulates hot air for crispy results with little to no oil, reducing fat by up to 75% compared to traditional frying.
- **ROAST:** Perfect for tender meats and vegetables.
- **BAKE:** For cakes, pastries, and other baked goods.
- **REHEAT:** Gently warms leftovers without drying them out.
- **DEHYDRATE:** Removes moisture from foods for snacks like fruit leathers or jerky.

General Cooking Steps:

1. **Prepare Food:** Place your ingredients in the 6.2L cooking basket, ensuring the crisper plate is inserted if needed. Do not overfill.
2. **Insert Basket:** Slide the cooking basket into the main unit until it clicks securely into place.
3. **Select Function:** Press the desired cooking function button (e.g., AIR FRY).
4. **Set Temperature & Time:** Use the TEMP and TIME arrows to adjust to your desired settings. The unit will display default settings for each function.
5. **Start Cooking:** Press the START/STOP button to begin.
6. **Shake/Flip (Optional):** For even cooking, especially with Air Fry, you may pause the unit by pulling out the basket or pressing START/STOP, shake or flip ingredients, then reinsert the basket or press START/STOP to resume.
7. **Finish:** The unit will beep when cooking is complete. Carefully remove the basket and transfer food to a serving dish.





Figure 3: Top-down view of the Ninja Air Fryer MAX PRO AF180EUWH's 6.2L cooking basket with the crisper plate inserted, ready for food.

5. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and optimal performance of your air fryer.

1. **Unplug and Cool:** Always unplug the unit and allow it to cool completely before cleaning.
2. **Dishwasher Safe Parts:** The 6.2L cooking basket and crisper plate are non-stick and dishwasher safe. For best results, place them on the top rack.
3. **Hand Washing:** If hand washing, use warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before storing.
4. **Main Unit:** Wipe the main unit with a clean, damp cloth. Do not immerse the main unit in water or place it in a dishwasher.
5. **Stubborn Residue:** For stubborn food residue, soak the basket or plate in warm, soapy water for a few minutes before cleaning. Do not use metal scouring pads or abrasive cleaners.

6. TROUBLESHOOTING

If you encounter issues with your Ninja Air Fryer MAX PRO, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet.
Food is not cooking evenly.	Basket is overcrowded; food not shaken/flipped.	Cook in smaller batches; shake or flip food halfway through cooking.
Food is not crispy.	Too much moisture; insufficient oil (for some recipes).	Pat food dry before cooking; lightly spray with oil if desired; ensure crisper plate is used.
White smoke coming from unit.	Grease/oil residue from previous use; high-fat food.	Clean the basket and crisper plate thoroughly; remove excess fat from food.

7. SPECIFICATIONS

Detailed technical specifications for the Ninja Air Fryer MAX PRO AF180EUWH.

- **Model:** AF180EUWH
- **Capacity:** 6.2 Liters
- **Power Output:** 2000 Watts
- **Dimensions (P x L x H):** 36 cm x 28 cm x 30.5 cm
- **Weight:** 6.91 Kilograms
- **Material:** Plastic (housing), Non-stick coating (basket/plate)
- **Special Features:** 6 Cooking Functions (Max Crisp, Air Fry, Roast, Bake, Reheat, Dehydrate), Dishwasher-safe parts.
- **Color:** White

8. WARRANTY AND SUPPORT

Your Ninja Air Fryer MAX PRO AF180EUWH comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty duration and coverage details.

For customer support, troubleshooting assistance beyond this manual, or to order replacement parts, please visit the official Ninja website or contact their customer service department. Contact information can typically be found in the included warranty documentation or on the Ninja website.