

[Manuals.plus](#) /

> [VERMESS](#) /

> VERMESS 63-inch Wide Dresser with 11 Drawers and Charging Station (Model 353DSG)

VERMESS 353DSG

VERMESS 63-inch Wide Dresser with 11 Drawers and Charging Station

Model: 353DSG | Brand: VERMESS

1. INTRODUCTION

Thank you for choosing the VERMESS 63-inch Wide Dresser with 11 Drawers and Charging Station. This versatile furniture piece is designed to provide ample storage and serve as a functional TV stand, enhancing your living space. This manual contains important information regarding the assembly, operation, and maintenance of your new dresser. Please read it thoroughly before beginning assembly and retain it for future reference.



Image 1.1: The VERMESS 63-inch Wide Dresser with 11 Drawers and Charging Station.

2. SAFETY INFORMATION

- **Anti-Tip Kit:** Always install the included anti-tip kit to prevent accidental tipping, especially in households with children or pets. Securely fasten the dresser to a wall stud according to the detailed assembly instructions.
- **Weight Capacity:** Do not exceed the recommended weight capacity for the top surface or drawers. Overloading can compromise stability and cause damage.
- **Placement:** Place the dresser on a flat, level surface. Use the adjustable feet to ensure stability and prevent wobbling.
- **Electrical Safety:** When using the integrated charging station, ensure all connected devices and cables are in good condition. Do not overload the outlets. Keep liquids away from the charging station.
- **Children:** Do not allow children to climb on the dresser or hang from the drawers. Keep small parts out of reach during assembly.

3. PACKAGE CONTENTS

Your VERMESS dresser package includes all necessary parts and hardware for assembly. Please refer to the

separate detailed assembly instructions provided with your product for a complete list of components and to ensure all parts are present before beginning assembly.

4. SETUP AND ASSEMBLY

Assembly of your VERMESS dresser is designed to be straightforward and can typically be completed within 30 minutes. Follow the step-by-step instructions and diagrams in the dedicated assembly guide.

4.1 Key Assembly Steps:

1. **Unpack and Identify Parts:** Carefully unpack all components and verify against the parts list in your assembly guide.
2. **Assemble the Metal Frame:** Connect the metal frame components as instructed. Ensure all connections are secure.
3. **Install Wooden Top:** Attach the durable wooden top to the assembled frame.
4. **Insert Fabric Drawers:** Place the fabric drawers into their designated slots.
5. **Install Charging Station:** Integrate the charging station into the designated slot on the top surface.
6. **Adjust Feet:** Once assembled, adjust the leveling feet at the bottom of the dresser to ensure it stands stable and level on your floor. This also protects your floors from scratches.
7. **Secure with Anti-Tip Kit:** Crucially, install the anti-tip kit by securing the dresser to a wall stud. This step is vital for safety.



Image 4.1: Adjustable feet for leveling and floor protection.

Product Dimension



Image 4.2: Product dimensions and TV size compatibility (up to 75 inches).

5. OPERATING INSTRUCTIONS

5.1 Using the Drawers:

The dresser features 11 deep fabric drawers designed for smooth operation. Each drawer provides ample space for organizing clothes, media, accessories, and other items. Gently pull the handles to open and push to close. Avoid forcing drawers if they feel stuck; check for obstructions.



Image 5.1: Interior view of a fabric drawer.

5.2 Utilizing the Charging Station:

The integrated charging station includes 3 standard outlets, 1 USB port, and 1 Type-C port. Plug the dresser's power cord into a wall outlet. You can then connect your electronic devices to the charging station for convenient power access.



Image 5.2: Detail of the charging station ports.

5.3 TV Stand Functionality:

The dresser's wide top surface is designed to accommodate televisions up to 75 inches. Ensure the TV's base fits securely on the top surface and does not overhang. Route cables neatly to the charging station or other power sources.



Image 5.3: Dresser used as a TV stand.

6. MAINTENANCE

- **Cleaning the Frame and Top:** Wipe the metal frame and wooden top with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Cleaning Fabric Drawers:** For light cleaning, use a lint roller or a soft brush to remove dust and debris. For stains, spot clean with a mild detergent and a damp cloth, then allow to air dry completely. Do not machine wash the fabric drawers.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary. Verify the anti-tip kit remains securely fastened.

7. TROUBLESHOOTING

7.1 Dresser is Unstable/Wobbles:

- Ensure the dresser is placed on a flat, level surface.
- Adjust the leveling feet at the bottom of the dresser until it is stable.
- Check that all assembly screws are tightened securely.

7.2 Drawers Do Not Slide Smoothly:

- Verify that the dresser frame is assembled correctly and is not warped.
- Ensure drawers are inserted correctly into their designated slots.
- Check for any obstructions inside the drawer slots or on the bottom of the drawers.

7.3 Charging Station Not Working:

- Ensure the dresser's main power cord is securely plugged into a functional wall outlet.
- Check if the wall outlet itself is receiving power (test with another device).
- Verify that the charging station unit is properly installed and connected within the dresser.
- Avoid overloading the charging station with too many high-power devices.

8. SPECIFICATIONS

Brand	VERMESS
Model Number	353DSG
Colour	Black
Product Dimensions	160 x 30 x 68.5 cm (63 x 11.8 x 27 inches)
Material	Engineered Wood, Metal Frame, Fabric Drawers
Item Weight	20 kg (44 lbs)
TV Size Compatibility	Up to 75 inches
Charging Station	3 Outlets, 1 USB Port, 1 Type-C Port

9. WARRANTY AND SUPPORT

For any questions, concerns, or issues regarding your VERMESS dresser, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific warranty details and contact information. Please have your model number (353DSG) and purchase date available when contacting support.