

[Manuals.plus](#) /

> [VERMESS](#) /

> Vermess 63" W Dresser for Bedroom with Charging Station 11 Drawer Dressers & Chests of Drawers Dresser TV Stand for Bedroom for 65 70 75 Inch TV, Metal Frame & Fabric Drawers, White

VERMESS 353DSG

Vermess 63" W Dresser & TV Stand User Manual

Model: 353DSG | Brand: VERMESS

PRODUCT OVERVIEW

The Vermess 63-inch wide dresser is a versatile furniture piece designed to provide ample storage and serve as a TV stand. It features 11 deep fabric drawers, a robust metal frame, and a durable wooden top. This unit is suitable for various rooms, including bedrooms, living rooms, and hallways, helping to organize media, clothing, and other household items.



This image displays the Vermess 63-inch wide dresser in white, featuring 11 fabric drawers and a central open shelf designed to hold a television. The dresser is shown in a bedroom setting.



The dresser is shown in a living room environment, functioning as a TV stand with a large television placed on its top surface. The white finish complements the room's decor.

KEY FEATURES

- **Ample Storage:** Features 11 deep fabric drawers, providing significant space for various items.
- **TV Stand Functionality:** Designed to accommodate televisions up to 75 inches, making it suitable for large screens.
- **Integrated Charging Station:** Includes 3 power outlets, 1 USB port, and 1 Type-C port for convenient device charging.
- **Multi-functional Design:** Can be used in bedrooms, living rooms, closets, hallways, or nurseries as a storage dresser or TV console.
- **Sturdy Construction:** Built with a durable wooden top, robust metal frame, and high-quality fabric drawers.
- **Enhanced Stability:** Equipped with anti-tip kits for safety and 8 adjustable feet to ensure stability on uneven surfaces and protect floors.
- **Easy Assembly:** Designed for straightforward assembly, typically completed within 30 minutes.



This image illustrates the spacious interior of the fabric drawers, highlighting their capacity for storing various items like clothes, ornaments, socks, bags, and scarves.

Surprising Amount of Storage Drawers



Clothes



Ornaments



Socks



Bag



Scarf



A visual representation indicating the dresser's compatibility with television sizes ranging from 55 inches up to 75 inches, demonstrating its suitability as a large TV stand.



This close-up shows the built-in charging station on the dresser's surface, equipped with three power outlets, one USB port, and one Type-C port for convenient device charging.


SETUP AND ASSEMBLY

The Vermess dresser is designed for straightforward assembly, typically taking around 30 minutes. All necessary parts and detailed instructions are included in the package.

Assembly Steps:

1. Unpack all components and verify against the parts list in the instruction manual.
2. Assemble the metal frame according to the provided diagrams, ensuring all connections are secure.
3. Attach the wooden top panel to the assembled frame.
4. Insert the fabric drawers into their designated slots.
5. Install the anti-tip kits to secure the dresser to a wall, if desired, for added safety.
6. Adjust the leveling feet at the bottom of the dresser to ensure stability on your floor surface.

Product Dimension

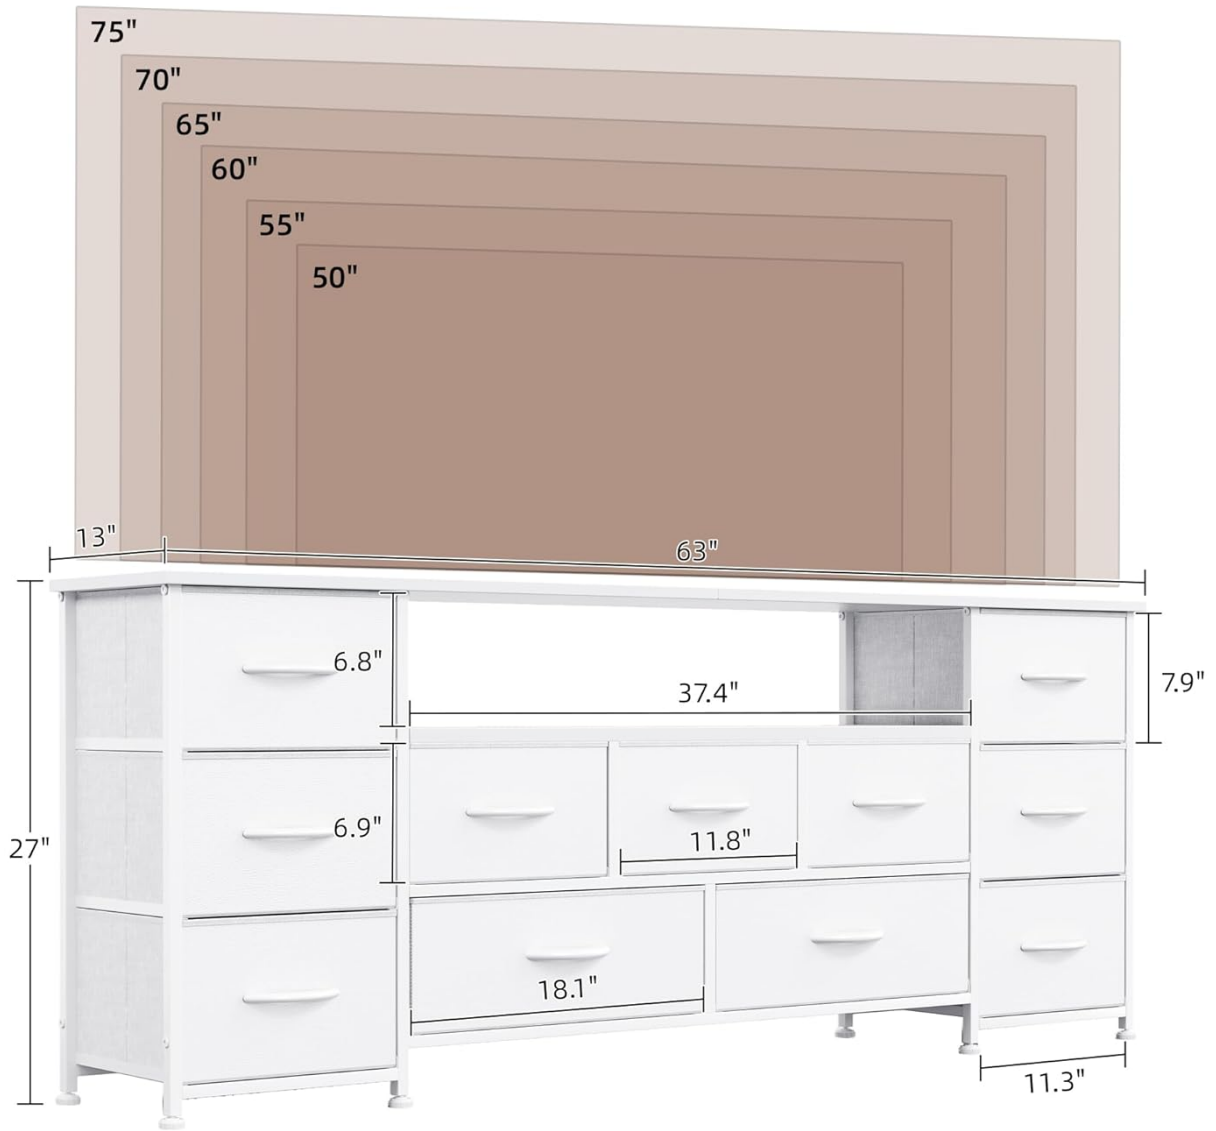

A diagram providing precise measurements of the dresser, including its width (63 inches), height (27 inches), and depth (11.8 inches), along with individual drawer dimensions.



This image highlights the adjustable feet at the base of the dresser, designed to ensure stability on uneven floor surfaces and protect floors from scratches.

OPERATING INSTRUCTIONS

Using the Drawers:

The fabric drawers are designed for smooth operation. To open, gently pull the handle. To close, push the drawer back into the slot until it is fully seated. Avoid overloading drawers to ensure longevity and ease of use. Distribute weight evenly within the drawers.

Using the Charging Station:

The integrated charging station provides convenient power access. Simply plug your devices into the available power outlets, USB port, or Type-C port. Ensure that the dresser is connected to a functional wall outlet. Do not exceed the maximum power rating of the charging station.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the wooden top and metal frame with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as they may damage the finish. For fabric drawers, spot clean with a mild detergent and allow to air dry.
- **Stability Check:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary to maintain the dresser's stability.
- **Drawer Care:** Avoid placing excessively heavy items in the fabric drawers. If a drawer becomes misshapen, gently reshape it by hand.
- **Placement:** Place the dresser on a level surface. Use the adjustable feet to compensate for any unevenness in the floor.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Drawers do not fit or slide smoothly.	Incorrect assembly of the frame; misaligned drawer supports; overloaded drawers.	Review assembly instructions to ensure the frame is square and supports are correctly installed. Do not force drawers. Reduce drawer contents if overloaded.
Dresser wobbles or is unstable.	Uneven floor surface; loose connections; adjustable feet not properly set.	Adjust the leveling feet at the bottom of the dresser. Ensure all screws and bolts are tightened securely. Place on a flat, stable surface.
Charging station is not working.	Dresser not plugged into a power source; loose connection; power outage.	Ensure the dresser's power cord is securely plugged into a functional wall outlet. Check if the wall outlet has power. Verify all device cables are fully inserted into the charging ports.
Strong odor from fabric drawers.	New product materials (common with fabric items).	Air out the drawers in a well-ventilated area for several days before use. Placing activated charcoal or baking soda sachets inside can help absorb odors.

SPECIFICATIONS

Attribute	Detail
Brand	VERMESS
Model Number	353DSG
Colour	White
Product Dimensions (L x W x H)	160 x 30 x 68.5 cm (approximately 63 x 11.8 x 27 inches)
Material	Engineered Wood, Metal Frame, Fabric Drawers
Item Weight	21.3 kg (approximately 47 lbs)

Attribute	Detail
Assembly Required	Yes, approximately 30 minutes
Mounting Type	Floor Mount
TV Compatibility	Up to 75 inches
Number of Drawers	11

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please contact the seller or manufacturer directly. Keep your purchase receipt as proof of purchase.

You can also visit the official VERMESS store for more information and contact options:[VERMESS Store on Amazon](#)