

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Outsunny](#) /

› [Outsunny Metal Outdoor Privacy Screen \(Model 84J-040V00BN\) User Manual](#)

Outsunny 84J-040V00BN

Outsunny Metal Outdoor Privacy Screen User Manual

Model: 84J-040V00BN

Brand: Outsunny

IMPORTANT SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Keep all packaging materials away from children.
- Ensure all components are present and undamaged before assembly.
- Assemble on a soft, level surface to prevent damage to parts.
- Always use appropriate tools and follow assembly steps in the specified order.
- Securely fix the privacy screen to the ground using the provided expansion screws to ensure stability, especially in windy conditions.
- Do not climb on or lean heavily against the screen.
- Regularly inspect the screen for any signs of wear or damage. Discontinue use if damaged.
- This product is designed for decorative use and space separation. It is not a solid barrier and is partially see-through.

PACKAGE CONTENTS

Verify that all parts are included and undamaged before beginning assembly.

- Privacy Screen Panels (3 vertical segments)
- Support Feet
- Expansion Screws (for ground fixation)
- Assembly Hardware (e.g., bolts, nuts, washers)



Image: The Outsunny Metal Outdoor Privacy Screen installed in a patio area, providing a visual barrier. Two individuals are seated on outdoor furniture near the screen.



Image: The Outsunny Metal Outdoor Privacy Screen functioning as a trellis, supporting climbing plants in a garden setting.

SPECIFICATIONS

Feature	Detail
Model Number	84J-040V00BN
Overall Dimensions	48" W x 17.7" D x 78" H
Individual Segment Dimensions	47.2" x 23.6" (each of three vertical segments)
Material	Alloy Steel
Color	Brown/Barcode
Item Weight	40 pounds
Assembly Required	Yes

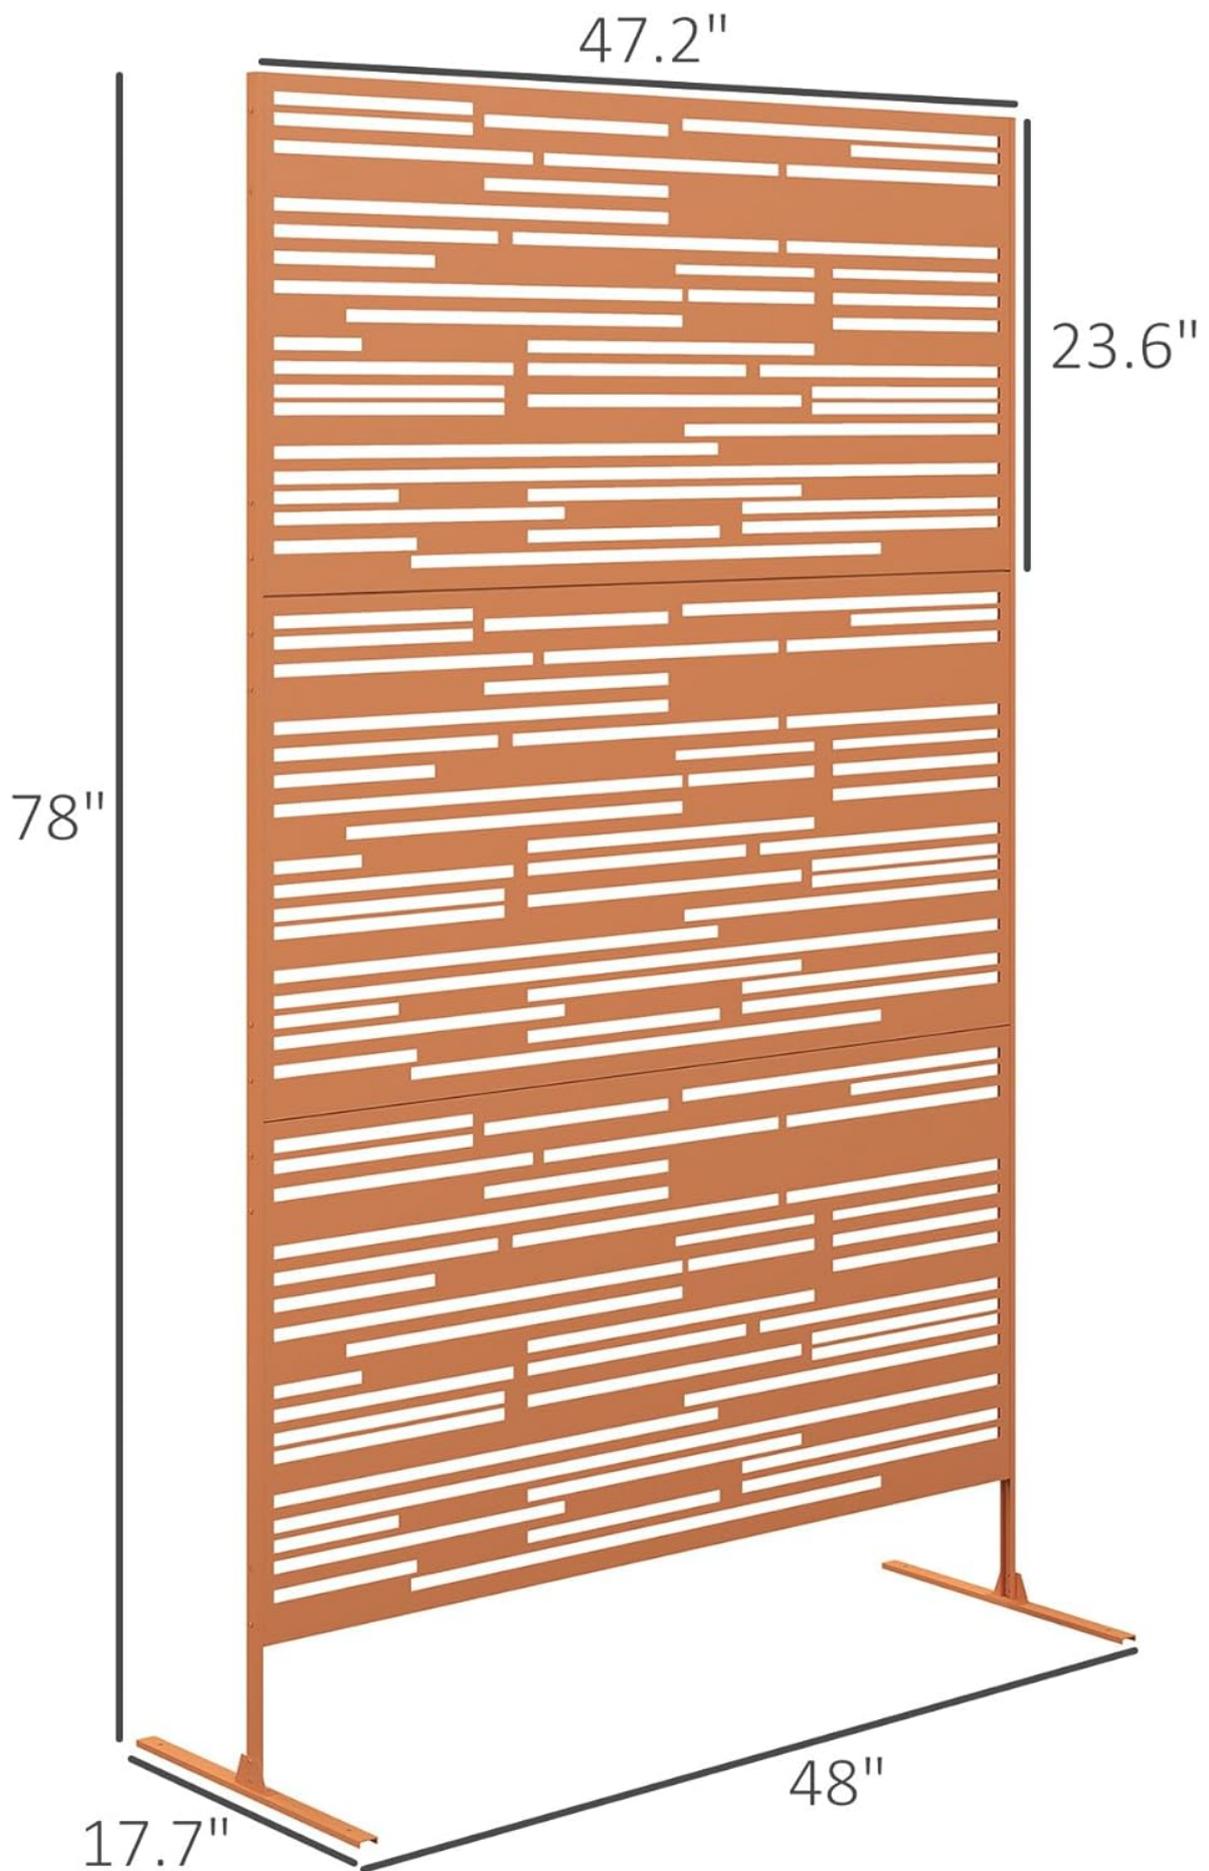


Image: A diagram illustrating the overall dimensions of the privacy screen, including width, depth, and height, as well as the dimensions of individual segments.

SETUP AND ASSEMBLY

Assembly is required for this privacy screen. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches.
2. **Identify Panels:** The screen consists of three vertical segments. Identify each panel and ensure they are oriented correctly.
3. **Attach Support Feet:** Securely attach the support feet to the bottom of the screen panels using the provided hardware. Ensure the feet are oriented correctly for stability.
4. **Connect Panels:** If the panels are separate, connect them according to the instructions, ensuring all bolts are tightened.
5. **Position the Screen:** Place the assembled privacy screen in your desired outdoor location.
6. **Secure to Ground:** Use the provided expansion screws to fix the support feet securely to the ground. This step is crucial for stability and preventing the screen from tipping over, especially in windy conditions.



Image: A detailed view of the privacy screen's base, showing the support feet and the expansion screws used to secure it to the ground for enhanced stability.

USAGE

The Outsunny Metal Outdoor Privacy Screen is designed for various outdoor applications:

- **Space Division:** Use to segment large outdoor areas, creating distinct zones for dining, lounging, or other activities.
- **Privacy Enhancement:** Provides a visual barrier for increased privacy on patios, balconies, or in gardens.
- **Climbing Plant Trellis:** The hollow design offers gaps suitable for supporting climbing plants like ivy or vines, integrating greenery into your outdoor decor.
- **Decorative Accent:** Enhances the aesthetic appeal of your outdoor space with its modern design.



Image: The hollow design of the privacy screen casting unique light and shadow patterns on the ground, demonstrating its decorative effect.

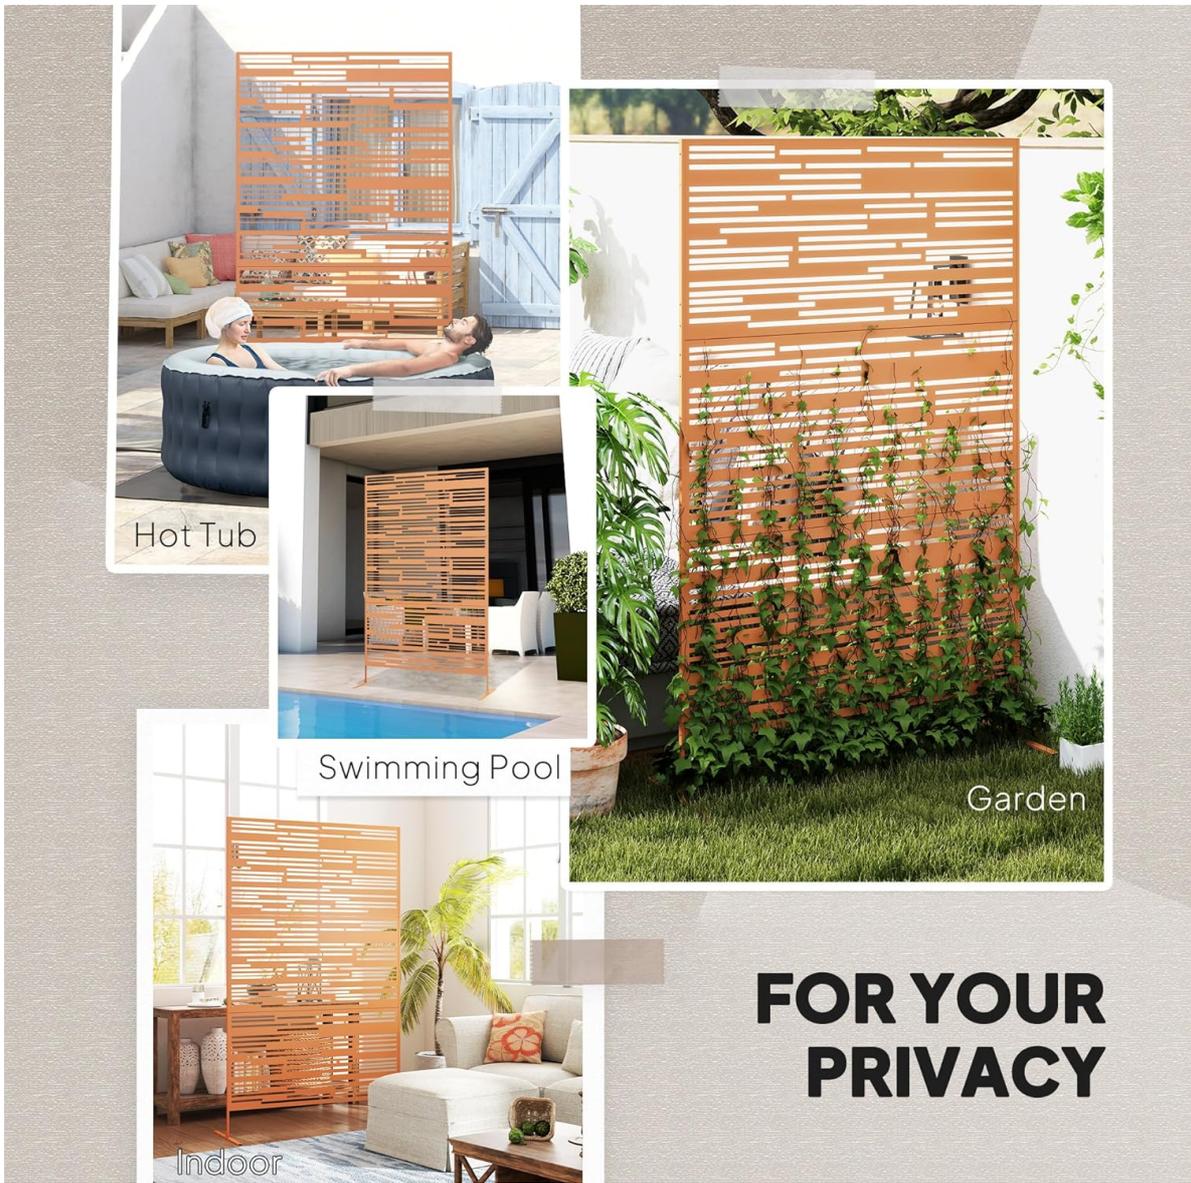


Image: A collage showing the versatility of the privacy screen in different environments, including beside a hot tub, near a swimming pool, in a garden, and as an indoor divider.

MAINTENANCE

- **Cleaning:** Wipe the metal frame with a damp cloth and mild soap as needed. Avoid abrasive cleaners or harsh chemicals that could damage the protective paint.
- **Inspection:** Periodically check all bolts and screws to ensure they remain tight. Re-tighten if necessary.
- **Rust Prevention:** The alloy steel construction includes protective paint. If any scratches or chips occur, touch up with appropriate outdoor metal paint to prevent rust.
- **Winter Storage:** In areas with harsh winter conditions, consider storing the screen indoors or covering it to prolong its lifespan.

TROUBLESHOOTING

Screen is unstable or wobbles:

Solution: Ensure all assembly bolts are tightened. Verify that the expansion screws are properly installed and secured into the ground. If placed on an uneven surface, reposition or shim the base for better stability. Consider additional anchoring in very windy areas.

Difficulty with assembly:

Solution: Review the assembly instructions carefully. Ensure all parts are correctly identified and oriented before attempting to connect them. Do not force components together. If a part appears damaged or missing, contact customer support.

Rust appearing on the frame:

Solution: Clean the affected area and apply a rust-inhibiting primer followed by outdoor-grade metal paint. Regular inspection and prompt touch-ups of any paint damage can prevent rust formation.

WARRANTY AND SUPPORT

For warranty information, replacement parts, or technical assistance, please contact Outsunny customer support. Refer to your purchase documentation for specific warranty terms and contact details.

Manufacturer: Aosom LLC

Website: www.aosom.com

UPC: 196393230893

ASIN: B0DSKC9T86