

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ZWP](#) /

› [ZWP Replacement Remote Control User Manual for Vibration Plate Exercise Machines \(Models: AXV FR78, GO 470, XR-348, AOVIECH, Sportstech VP250/VP275, KEMLDIVS/SAYGOGO/AORTD/ServeUmeal compatible\)](#)

ZWP 36846ab8-8028-481f-8501-2796fbb69e64

ZWP Replacement Remote Control User Manual

FOR VIBRATION PLATE EXERCISE MACHINES

Compatible with AXV FR78, GO 470, XR-348, AOVIECH, Sportstech VP250/VP275, KEMLDIVS/SAYGOGO/AORTD/ServeUmeal Models

INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your ZWP Replacement Remote Control. This remote is designed for use with various vibration plate exercise machines. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

SETUP

1. Battery Installation

The ZWP Replacement Remote Control requires two (2) 1.5V AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Requires Two 1.5V AAA Batteries

(Batteries are not included)



Figure 1: Battery installation for the ZWP Replacement Remote Control. Ensure correct polarity when inserting AAA batteries.

2. Initial Use

This replacement remote control is designed for immediate use without any programming. Once batteries are correctly installed, it should function directly with compatible vibration plate exercise machines.



Figure 2: Front view of the ZWP Replacement Remote Control, ready for use.

OPERATING INSTRUCTIONS

The ZWP Replacement Remote Control provides intuitive control over your vibration plate exercise machine. The operational distance is approximately 8 meters (26 feet).



Figure 3: The remote control in proximity to a vibration plate, illustrating its effective operational range.

Button Functions:

- **Power Button ():** Turns the vibration plate on or off.
- **Play/Pause Button ():** Starts or pauses the exercise program.
- **Speed/Intensity Control (/):** Adjusts the vibration speed or intensity. The central 'P' button may cycle through programs.
- **Previous Track ():** Skips to the previous track if the machine has audio playback.
- **Next Track ():** Skips to the next track if the machine has audio playback.
- **Volume Up ():** Increases audio volume.
- **Volume Down ():** Decreases audio volume.



Figure 4: The remote control offers a stable link and quick response for an enhanced user experience.

MAINTENANCE

Cleaning:

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the surface and internal components.

Battery Replacement:

Replace batteries when the remote's response becomes sluggish or it ceases to function. Always replace both batteries simultaneously with new 1.5V AAA batteries. Do not mix old and new batteries or different types of batteries.

Storage:

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage and potential damage to the remote control. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are installed correctly with the correct polarity.
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote control and the vibration plate's receiver.
- Verify that the vibration plate is powered on.

- **Short operational range:**

- Replace batteries, as low battery power can reduce range.
- Ensure a clear line of sight to the vibration plate.
- Minimize interference from other electronic devices.

SPECIFICATIONS

Feature	Detail
Brand	ZWP
Model Number	36846ab8-8028-481f-8501-2796fbb69e64
Item Weight	3.2 ounces
Package Dimensions	6.34 x 2.24 x 0.94 inches
Color	Black
Special Feature	Ergonomic design
Max Number of Supported Devices	1
Compatible Devices	Vibration Machine (AXV FR78, GO 470, XR-348, AOVIECH, Sportstech VP250/VP275, KEMLDIVS/SAYGOGO/AORTD/ServeUmeal)

WARRANTY AND SUPPORT

The ZWP Replacement Remote Control is manufactured with high-quality ABS material, ensuring durability

and a comfortable feel. If you encounter any questions or issues with your remote control, please do not hesitate to contact ZWP customer support. We are committed to assisting you with any concerns you may have.

For support, please refer to the contact information provided with your purchase or visit the official ZWP website.