

## BODACIOUS XQB201A-GREY6

# BODACIOUS Portable Washing Machine User Manual

Model: XQB201A-GREY6 (2.0 Cu.ft)

## 1. IMPORTANT SAFETY INFORMATION

---

Please read all instructions carefully before using the appliance. Retain this manual for future reference.

- Ensure the washing machine is placed on a stable, level surface.
- Do not operate the machine if the power cord is damaged.
- Keep children away from the appliance during operation.
- Do not immerse the electrical components in water.
- This appliance has an IPX4 waterproof rating, making it safe for use in humid environments.

## 2. PRODUCT OVERVIEW

---

The BODACIOUS XQB201A-GREY6 is a compact, full-automatic top-loading portable washing machine designed for small living spaces such as apartments, dorms, and RVs. It features 10 wash cycles, an LED display, and quiet operation.



Image 2.1: Front view of the BODACIOUS Portable Washing Machine.

### Key Features:

- **Ultra-Quiet Operation:** Operates at approximately 55dB.
- **Multiple Wash Modes:** 10 selectable wash cycles for various laundry needs.
- **IPX4 Waterproof Rating:** Ensures safety in humid conditions.
- **Dynamic Unbalance Detection:** Maintains stability during operation.

- **Energy Efficient:** High-efficiency motor with 24-hour delayed washing option.
- **Child Lock Protection:** Enhances safety during use.

### 3. SETUP AND INSTALLATION

---

#### 3.1 Unpacking

Carefully remove the washing machine from its packaging. Before initial use, it is crucial to remove all internal packing materials.

- Remove the bottom foam and plastic holder from underneath the machine. Failure to do so may affect performance and cause excessive vibration.



Image 3.1: Diagram illustrating the removal of the bottom foam and plastic bracket.

#### 3.2 Placement

Place the washing machine on a firm, level surface to minimize noise and vibration during operation. Ensure there is adequate space around the unit for ventilation and hose connections.

- **Dimensions:** 19.7" (D) x 19.7" (W) x 33.66" (H).
- Ideal for compact spaces.



Image 3.2: Product dimensions and IPX4 waterproof rating details.

### 3.3 Water and Drain Connections

1. Connect the water inlet hose to a cold water faucet. Ensure a tight connection to prevent leaks.
2. Position the drain hose into a sink or a suitable drain. The machine includes a drain pump, allowing the hose to be held upwards. If water gets stuck, temporarily lower the hose to initiate drainage, then reposition it.

## 4. OPERATING INSTRUCTIONS

## 4.1 Control Panel Overview

The control panel features an LED display and push buttons for program selection, water level, and operation control.



Image 4.1: Digital LED display and control buttons for easy operation.

## 4.2 Loading Laundry

Open the top lid and place laundry loosely into the stainless steel inner tub. Do not overload the machine to ensure optimal washing performance.

# Stainless Steel Roller



Image 4.2: Stainless steel inner tub with a 360° enhanced washing design for efficient cleaning.

## 4.3 Selecting a Wash Program

The machine offers 10 wash cycles to suit different fabric types and soil levels.

# 10 Cycle Programs



Image 4.3: Overview of the 10 available wash cycle programs.

1. Press the 'Power' button to turn on the machine.
2. Use the 'Program' button to cycle through the available wash modes: Standard, Soft, Quick Wash, Heavy Duty, Soak Wash, Wash Only, Spin Only, Tub Clean, Tub Air Dry, Water Recycle.
3. Select the appropriate water level (High, Middle, Low, Minimum) using the 'Water Level' button.
4. Add detergent and fabric softener as needed.
5. Press 'Start/Pause' to begin the cycle.

## 4.4 Delayed Start Function

The 24-hour delayed start function allows you to set the machine to begin a wash cycle at a later time.

- After selecting your desired program and water level, press the 'Delay Start' button to set the delay time.
- Press 'Start/Pause' to confirm the delayed start.

## 4.5 Child Lock

To activate the child lock, press and hold the 'Program' and 'Water Level' buttons simultaneously for a few seconds until the child lock indicator appears on the LED display. This prevents accidental changes to settings during operation.

## 5. MAINTENANCE

---

### 5.1 Cleaning the Tub

Regularly use the 'Tub Clean' cycle to maintain hygiene and prevent odor buildup. Follow the instructions for the 'Tub Clean' program on the control panel.

### 5.2 General Cleaning

- Wipe the exterior of the machine with a soft, damp cloth.
- Clean the detergent dispenser regularly to prevent residue buildup.
- Ensure the lint filter (if applicable) is cleaned after every few washes.

## 6. TROUBLESHOOTING

---

This section addresses common issues you might encounter with your washing machine.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed properly; Delayed start activated.	Check power connection; Ensure lid is fully closed; Check for delayed start setting.
Excessive vibration/noise	Machine not level; Overloaded; Bottom foam/bracket not removed.	Adjust leveling feet; Reduce load size; Ensure all packing materials are removed. The Dynamic Unbalance Detection system will attempt to correct imbalances.
Water not draining	Drain hose kinked or blocked; Drain pump issue.	Check drain hose for obstructions; Ensure hose is positioned correctly. If issue persists, contact support.
Water leakage	Hose connections loose; Overfilling.	Tighten all hose connections; Do not exceed maximum water level.

## 7. SPECIFICATIONS

---

Detailed technical specifications for the BODACIOUS Portable Washing Machine Model XQB201A-GREY6.

Feature	Specification
Brand	BODACIOUS
Model Info	XQB201A-GREY6
Capacity	2 Cubic Feet
Item Weight	43 pounds
Product Dimensions (D x W x H)	19.7 x 19.7 x 33.66 inches
Noise Level	55 dB
Installation Type	Freestanding
Special Features	Time Remaining Display, IPX4, Automatic, Compact, LED Display, Portable, Child Lock
Color	Grey
Control Console	Push Button
Standard Cycles	10 (Quick Wash, Heavy Duty, Spin, Tub Clean, Soak wash, Tub air dry, Water recycle)
Access Location	Top Load
Voltage	110 Volts
Material Type	Plastic
Included Components	Washing machine

## 8. WARRANTY AND SUPPORT

### 8.1 Warranty Information

The BODACIOUS Portable Washing Machine comes with a **1-Year Parts and Labor Warranty** and a **2-Year Warranty** on specific components. Please refer to your purchase documentation for full warranty terms and conditions.



Image 8.1: Visual representation of the 1-Year Parts and Labor and 2-Year Warranty.

**Quality Assurance:** Internal water present in the machine is a result of performance testing and does not indicate a used product. We do not sell previously used washing machines.

## 8.2 Customer Support

For any questions, concerns, or assistance with your BODACIOUS Portable Washing Machine, please contact our customer support team. You can find contact information on the official BODACIOUS website or

through your retailer.

Visit the official [BODACIOUS Store](#) for more information and products.

© 2025 BODACIOUS. All rights reserved.