

Sakugi CA661

Sakugi Double-Rod Metal Clothing Rack with Wheels

Model: CA661

1. INTRODUCTION

Thank you for choosing the Sakugi Double-Rod Metal Clothing Rack with Wheels. This manual provides essential information for the safe assembly, operation, and maintenance of your new clothing rack. Please read these instructions carefully before assembly and retain them for future reference.

This clothing rack is designed to provide a stable and spacious solution for organizing your garments. Its robust metal construction and thoughtful features ensure durability and convenience.

2. SAFETY INFORMATION

- Ensure all parts are securely fastened before use.
- Do not exceed the maximum load capacity of 77 kg (170 lb). Uneven weight distribution may affect stability.
- Keep small parts away from children during assembly to prevent choking hazards.
- Avoid placing the rack on uneven surfaces to prevent tipping.
- Use the wheel locks when the rack needs to remain stationary to prevent accidental movement.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Top Hanging Rods (2)
- Vertical Support Poles (4)
- Base Frame Components (4)
- Mesh Shelf (1)
- Side Bars with Hooks (2)
- Swivel Wheels (4, 2 with locks)
- Assembly Hardware (screws, Allen key, small spanner)
- Instruction Manual (this document)

4. ASSEMBLY INSTRUCTIONS


Assembly is designed to be straightforward with minimal parts and a snap-fit installation system. An Allen key and small spanner are included.

1. **Attach Wheels to Base:** Secure the four swivel wheels to the base frame components using the provided hardware. Ensure the two lockable wheels are positioned on the same side for easier access.
2. **Assemble Base Frame:** Connect the base frame components to form the rectangular base.
3. **Install Vertical Support Poles:** Insert the lower sections of the vertical support poles into the designated slots on the base frame.
4. **Place Mesh Shelf:** Position the mesh shelf onto the lower support poles, ensuring it sits securely.
5. **Connect Upper Vertical Poles:** Attach the upper sections of the vertical support poles to the lower sections using the snap-fit mechanism. Press firmly until they click into place.
6. **Attach Hanging Rods:** Secure the two double hanging rods to the top of the vertical support poles. Ensure the anti-slip beads are facing outwards.
7. **Install Side Bars:** Attach the side bars with hooks to the outer vertical poles.



Fast & Easy Assembly

Ours

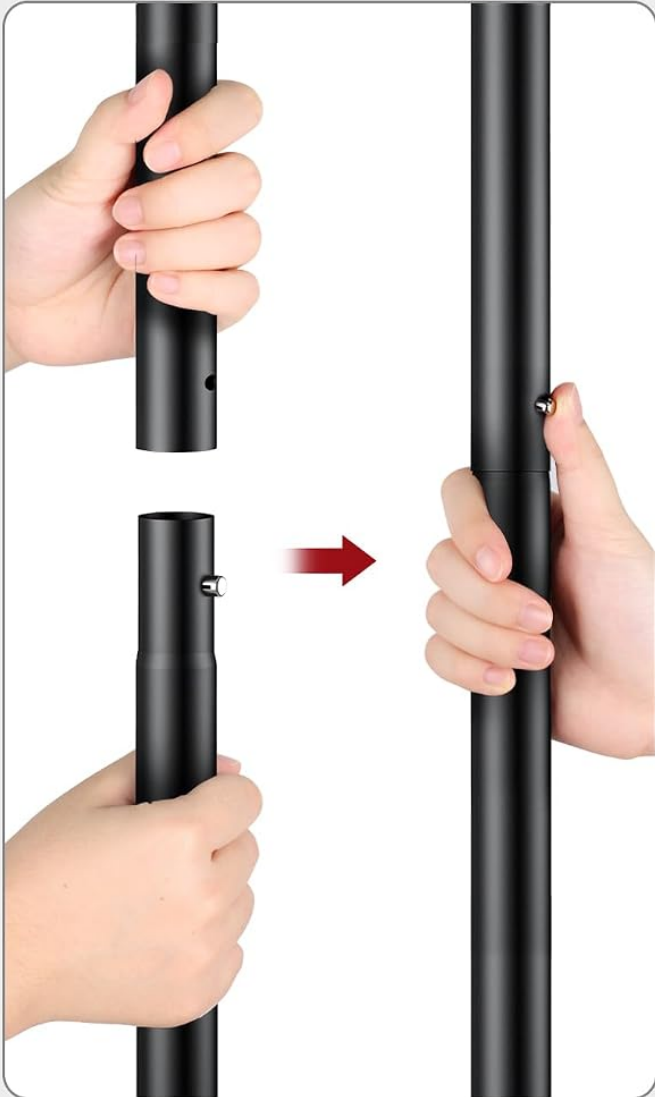

Snap-Fit Installation

Quick to connect, easy to assemble

Others



Screw Installation

Time-consuming and more complicated

Image: Snap-fit installation for quick and easy assembly.

The snap-fit design allows for quick connection, making assembly efficient compared to traditional screw-based installations.

5. OPERATING INSTRUCTIONS

5.1 Hanging Clothes

Utilize the double hanging rods to organize your clothing. The 150 cm height accommodates longer garments like dresses and trousers without touching the ground. The anti-slip beads on the rods help prevent hangers from sliding off.

Double the Space for Your Clothes



170lb

Total load capacity



53pcs

Holds 53 Tops



60pcs

Holds 60 Pants

Image: The rack offers ample space, supporting up to 170 lbs (77 kg) and accommodating numerous garments.

5.2 Accessory Storage

The four integrated hooks and side bars provide convenient storage for accessories such as handbags, hats, belts, and scarves.

5.3 Bottom Mesh Shelf

The enhanced mesh shelf at the base is designed to hold footwear, storage boxes, bags, or folded garments securely. Its solid surface prevents smaller items from falling through, unlike conventional tubular shelves.

Nothing Falls, Everything Stays

sakugi



Solid mesh
surface




Holds shoes &
boxes steady



Everything
stays in place

Others

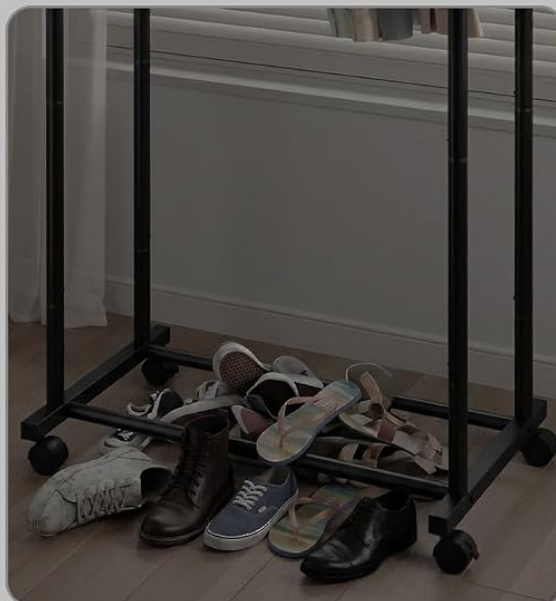

Open
bar base



Items slide
or fall



Hard to store
small items

Image: The solid mesh shelf ensures items remain securely in place.

5.4 Mobility and Locking

The four 360° swivel wheels allow for effortless movement of the rack. To secure the rack in a stationary position, engage the brakes on the two lockable wheels.

Anti-Slip Beads

Keep clothes from sliding or falling off



Reinforced Side Bars



Lockable Swivel Wheels

Image: Features include anti-slip beads, reinforced side bars, and lockable swivel wheels for stability and mobility.

6. MAINTENANCE

- **Cleaning:** Wipe the metal surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Inspection:** Periodically check all connections and screws to ensure they remain tight. Re-tighten if necessary.
- **Wheel Care:** Keep the wheels free of dust and debris to ensure smooth movement.

7. TROUBLESHOOTING

- **Rack wobbles:** Ensure all connections are fully engaged and tightened. Verify the rack is on a flat, even surface. Distribute weight evenly across both rods.
- **Wheels not rolling smoothly:** Check for debris caught in the wheels. Clean the wheels and their axles. Ensure the wheel locks are disengaged.
- **Items sliding off rods:** Utilize the anti-slip beads by positioning hangers between them.

8. SPECIFICATIONS

Feature	Detail
Model Number	CA661
Dimensions (W x D x H)	73 x 42 x 150 cm
Material	Iron
Color	Black
Load Capacity	77 kg (170 lb)
Number of Hanging Rods	2
Number of Shelves	1 (Mesh)
Wheels	4 (360° swivel, 2 lockable)





Image: Product dimensions including height, width, and depth.

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact your retailer. Keep your purchase receipt as proof of purchase.

© 2026 Sakugi. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question