



[Manuals.plus](#) /

› [SICOTAS](#) /

› SICOTAS 3-Piece Farmhouse Boho Shoe Cabinet (Obsidian) User Manual

SICOTAS 3-Piece Farmhouse Boho Shoe Cabinet

SICOTAS 3-Piece Farmhouse Boho Shoe Cabinet (Obsidian) User Manual

Model: B0DSL5FXJF

1. INTRODUCTION

Thank you for choosing the SICOTAS 3-Piece Farmhouse Boho Shoe Cabinet. This manual provides essential information for the assembly, use, and maintenance of your new shoe storage solution. Designed to combine rustic engineered wood with unique rattan mesh, this cabinet offers both functionality and aesthetic appeal for various spaces in your home.



Figure 1: The SICOTAS 3-Piece Farmhouse Boho Shoe Cabinet.

2. PRODUCT FEATURES

- **Farmhouse Boho Design:** Features rustic engineered wood grain elements and rattan mesh doors, complemented by metal circle pulls, adding a natural vintage and bohemian elegance to your decor.
- **Stable Structure:** Constructed from high-quality FSC-certified engineered wood and high-density boards for durability and stability. Thickened panels ensure superior load-bearing capacity.
- **Adjustable Storage:** Equipped with rattan doors, a storage cabinet, an open shelf, and adjustable height shelves. Dividers can be adjusted or removed to accommodate various shoe types, including flats, high heels, sneakers, and knee-high boots.
- **Large Capacity:** The 3-piece set offers overall dimensions of 14.17"D x 94.47"W x 38.97"H, including a large cabinet and a bottom open shelf. The spacious top surface provides additional space for keys, wallets, and other personal items.
- **Easy Assembly:** Hardware and instructions are fully provided, with each part numbered for straightforward assembly.

Adjustable & Removable Shelves

Varying Heights to Meet Different Storage Needs



Figure 2: Interior view of the cabinet showcasing adjustable and removable shelves.

Bottom Open Shelf

Extra Storage and Ample Bottom Room for Cleaning



Figure 3: The bottom open shelf provides convenient storage and ample space for cleaning.

3. COMPONENTS LIST

Before beginning assembly, ensure all parts and hardware are present. Refer to the assembly video for a visual guide to all components.

3.1. Parts

- Top Panel (1)
- Side Panels (2, 3)
- Adjustable Shelves (4)
- Fixed Shelves (5, 6)
- Back Panels (7, 9)
- Support Bar (8)
- Rattan Doors (10, 11)

3.2. Hardware

- Cam Bolts (A)
- Cam Locks (B)
- Wooden Dowels (C)
- Wall Anchors (D)
- Small Screws (E, I, N)
- Door Handles (F)
- Handle Screws (G)
- Corner Brackets (H)
- Magnetic Catches (J)
- Shelf Pins (L)
- Hinges (M)
- Adjustable Feet (O)
- Anti-tip Brackets (P)

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. A screwdriver is required (not included). It is recommended to have two people for assembly.

4.1. Assembly Video Guide

Video 1: Detailed assembly instructions for the SICOTAS Rattan Shoe Cabinet.

4.2. Step-by-Step Guide

1. **Prepare Top Panel (1):** Insert Cam Bolts (A) into the designated holes on the top panel. Attach Anti-tip Brackets (P) using Small Screws (E). Secure Magnetic Catch (J) using Small Screws (I).
2. **Prepare Side Panels (2, 3):** Insert Cam Bolts (A) into the designated holes on both side panels.
3. **Attach Fixed Shelves (5, 6) and Support Bar (8) to Side Panel (2):** Insert Wooden Dowels (C) into Side Panel (2). Connect Fixed Shelves (5, 6) and Support Bar (8) to Side Panel (2) using Cam Locks (B). Ensure the cam locks are tightened securely.
4. **Attach Side Panel (3):** Connect Side Panel (3) to the assembly from the previous step using Wooden Dowels (C) and Cam Locks (B). Tighten all cam locks.
5. **Install Adjustable Feet (O):** Screw the Adjustable Feet (O) into the bottom of the assembled base.
6. **Attach Back Panels (7, 9):** Slide the Back Panels (7, 9) into the grooves on the back of the cabinet structure. Secure them using Corner Brackets (H) and Small Screws (I). Ensure the back panels are flush and stable.
7. **Attach Top Panel (1):** Carefully place the Top Panel (1) onto the assembled structure, aligning the Cam Bolts (A) with the corresponding holes. Secure with Cam Locks (B).
8. **Install Shelf Pins (L):** Insert Shelf Pins (L) into the desired pre-drilled holes on the side panels to support the adjustable shelves.
9. **Insert Adjustable Shelves (4):** Place the Adjustable Shelves (4) onto the installed Shelf Pins (L).
10. **Attach Hinges to Doors (10, 11):** Attach Hinges (M) to the Rattan Doors (10, 11) using Small Screws (N).
11. **Attach Doors to Cabinet:** Mount the doors (10, 11) to the cabinet frame by securing the hinges (M) to the pre-drilled holes on the side panels using Small Screws (N). Adjust hinges as needed for proper door alignment.
12. **Install Door Handles (F):** Attach Door Handles (F) to the doors using Handle Screws (G).

5. USAGE INSTRUCTIONS

5.1. Organizing Shoes

The cabinet is designed to store various types of footwear. Utilize the adjustable shelves to customize compartment heights. For taller items like boots, remove or reposition shelves as needed.

5.2. Top Surface and Bottom Shelf

The spacious top surface can hold up to 77 lbs, making it ideal for decorative items, keys, wallets, or other frequently accessed personal belongings. The bottom open shelf is perfect for shoes that require easy access.



Figure 4: The cabinet is versatile for use in entryways, hallways, foyers, or closets.

5.3. Soft-Closing Doors

The cabinet doors feature magnetic catches for a soft-closing mechanism, ensuring quiet operation and secure closure.

Video 2: Demonstration of the SICOTAS Rattan Shoe Organizer's features.

6. MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Dusting:** Regularly dust the cabinet to prevent buildup.
- **Spills:** Clean spills immediately to prevent staining or damage to the wood.
- **Hardware:** Periodically check and tighten all hardware to ensure stability.

7. TROUBLESHOOTING

- **Wobbly Cabinet:** Ensure all cam locks and screws are fully tightened. Verify that the adjustable feet are evenly set on the floor.
- **Doors Not Closing Properly:** Check hinge alignment and adjust if necessary. Ensure the magnetic catches are correctly installed and aligned with the door plates.
- **Damaged Parts:** If any parts are damaged during shipping or assembly, contact customer support for replacements.

8. SPECIFICATIONS

Attribute	Value
Brand	SICOTAS
Model Number	Shoe Cabinet
Color	Obsidian
Material	Engineered Wood
Product Dimensions (D x W x H)	14.17"D x 94.47"W x 38.97"H
Number of Shelves	5
Number of Doors	2 (per individual cabinet unit)
Installation Type	Freestanding
Required Assembly	Yes
Top Load Capacity	Up to 77 lbs
Shelf Load Capacity	Up to 33 lbs per shelf
Bottom Shelf Load Capacity	Up to 55 lbs

9. SAFETY INFORMATION

- Always assemble the cabinet according to the provided instructions.
- Keep the cabinet away from heat sources.
- Do not place heavy objects on the top surface beyond the specified weight limit to prevent tipping.
- Be cautious when adjusting the shelves to avoid injury from pinch points.
- Ensure the cabinet is stable and level before use.
- Use the provided anti-tip brackets to secure the cabinet to a wall, especially in homes with children or pets, to prevent accidental tipping.

10. WARRANTY AND CUSTOMER SUPPORT

For any issues with assembly, missing parts, or product defects, please contact SICOTAS customer support. Refer to your purchase documentation for specific warranty details and contact information.