

## MoKo Desk Fan

# MoKo Desk Fan Instruction Manual

Model: Desk Fan

### 1. INTRODUCTION

Thank you for purchasing the MoKo Desk Fan. This portable fan offers versatile cooling with its 3-way design, powerful battery, and precise wind speed control. Please read this manual carefully before use to ensure proper operation and maintenance.

### 2. PRODUCT FEATURES

- **3-Way Versatility:** Use as a desk fan, handheld fan, or wall-mounted fan.
- **Stepless Wind Speed Adjustment:** Precise control from 0 to 100 levels.
- **Long-Lasting Battery:** Built-in 4800mAh battery provides up to 18 hours of continuous use (at low speed).
- **Quiet Operation:** Noise level as low as 40dB, suitable for office or sleep environments.
- **LCD Display:** Clearly shows battery level and current wind speed.
- **Compact and Portable:** Dimensions of 16.4 x 13.4 x 3.9 cm, easy to carry and store.
- **Efficient Airflow:** 5-blade design ensures strong airflow despite its compact size.

### 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- MoKo Desk Fan (Main Unit)
- USB-A to Type-C Charging Cable
- Instruction Manual

## 商品の寸法

L:164mm



W:134mm



iphone 15 Pro max

## パッケージ内容



本体



USB-A to TYPE-Cケーブル



日本語取扱説明書



オフィス卓上



台所掛け



外出時手持ち

Image: The package includes the MoKo Desk Fan, a USB-A to Type-C charging cable, and the instruction manual.

## 4. SETUP

### 4.1 Positioning the Fan

The MoKo Desk Fan offers three versatile positioning options:

1. **Desk Placement:** Unfold the integrated kickstand and place the fan on a flat surface. The stand can be adjusted 180 degrees to direct airflow as needed.
2. **Handheld Use:** Fold the kickstand flat for comfortable handheld use.
3. **Wall Mounting:** Utilize the integrated hook to hang the fan on a wall or rack.

壁掛け



卓上置き



# 3WAY 使用可能

場所に応じて  
自由に設置できる

手持ち



Image: The fan can be used on a desk, held by hand, or mounted on a wall.



Image: Visual guide for 180° stand adjustment, hanging on a wall/rack, and carrying by hand.

## 5. OPERATING INSTRUCTIONS

### 5.1 Power On/Off and Wind Speed Adjustment

The power and wind speed controls are integrated into a single knob located on the front of the fan.

1. **To Power On:** Rotate the knob clockwise from the 'OFF' position. The fan will start at a low speed.
2. **To Adjust Wind Speed:** Continue rotating the knob clockwise to increase the wind speed. The fan offers 100 levels of stepless adjustment. Rotate counter-clockwise to decrease the speed.
3. **To Power Off:** Rotate the knob counter-clockwise until it clicks into the 'OFF' position.

### 5.2 LCD Display

The fan features an LCD screen that displays important information:

- **Wind Speed:** When adjusting the speed, the display will show the current wind speed level (0-100).
- **Battery Level:** Approximately 3 seconds after adjusting the wind speed, the display will switch to show the remaining battery percentage.

# 風量無段階調節

0~100、お好きに調節可能



ご注意：LCD画面に保護フィルムがあります。  
フィルムを剥がせば画面はきれいになります。



風量表示



残量表示

Image: Adjusting the wind speed with the knob and viewing the LCD display.





Image: The LCD screen displays the wind speed level and battery charge percentage.

## 6. CHARGING

The MoKo Desk Fan is equipped with a 4800mAh battery and charges via a Type-C port.

- **Charging Time:** A full charge takes approximately 3-4 hours.
- **Charging Method:** Connect the included USB-A to Type-C cable to the fan's charging port and a 5V/2A power adapter (not included), computer USB port, power bank, or car charger.
- **Use While Charging:** The fan can be used while it is charging.

**Important: Please use a 5V/2A charger with the provided charging cable.**



大容量電池内蔵

- 満充電：約3-4時間
- 最大使用時間：約18時間  
(弱風の場合)



## TYPE-C充電

Image: The fan features a large 4800mAh battery and a convenient Type-C charging port.



## 風量表示

つまみスイッチを回して風量調節できる。

ご注意：数値と目盛りの間に若干の差があることをご容赦いただければ幸いです。



電池殘量表示

風量調節後、2～3秒間経てば電池残量の表示に変わる。



### LCD画面表示

風量・電池残量が一目瞭然

ご注意：LCD画面に保護フィルムがあります。  
フィルムを剥がせば画面はきれいになります。

Image: The fan can be charged using a laptop, power bank, wall adapter, or car charger via its Type-C port.

## 7. MAINTENANCE

To ensure optimal performance and longevity of your MoKo Desk Fan, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the exterior of the fan with a soft, dry cloth. Do not use abrasive cleaners or immerse the fan in water.
- **Dust Removal:** Use a soft brush or compressed air to carefully remove any dust accumulated on the fan blades or grille. Ensure the fan is turned off before cleaning.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place away from direct sunlight and extreme temperatures.

## 8. TROUBLESHOOTING

If you encounter any issues with your MoKo Desk Fan, please refer to the following common problems and solutions:

| Problem                         | Possible Cause                                    | Solution                                                                                        |
|---------------------------------|---------------------------------------------------|-------------------------------------------------------------------------------------------------|
| Fan does not turn on.           | Battery is depleted.                              | Charge the fan using the provided Type-C cable and a 5V/2A adapter.                             |
| Fan stops working unexpectedly. | Low battery or internal malfunction.              | Charge the fan fully. If the issue persists, contact customer support.                          |
| Wind speed cannot be adjusted.  | Control knob issue.                               | Ensure the knob is rotated correctly. If unresponsive, contact customer support.                |
| LCD display is not working.     | Protective film still on, or display malfunction. | Remove the protective film from the LCD screen. If still not working, contact customer support. |

If the problem persists after trying these solutions, please contact MoKo customer support for assistance.

## 9. SPECIFICATIONS

| Feature | Specification |
|---------|---------------|
| Brand   | MoKo          |
| Model   | Desk Fan      |
| Color   | White         |



| Feature                | Specification                 |
|------------------------|-------------------------------|
| Dimensions (D x W x H) | 16.4 x 13.4 x 3.9 cm          |
| Weight                 | 10.42 ounces                  |
| Power Source           | Battery Powered               |
| Battery Capacity       | 4800mAh                       |
| Charging Port          | Type-C                        |
| Max Runtime            | Up to 18 hours (at low speed) |
| Wind Speed Levels      | 100 (Stepless Adjustment)     |
| Noise Level            | 40 dB (minimum)               |
| Power Consumption      | 15 W                          |
| Material               | Plastic                       |
| Motor Type             | Brushless                     |
| Mounting Type          | Portable, Wall Mount          |

## 商品の寸法

L:164mm



W:134mm



iphone 15 Pro max

## パッケージ内容



本体



USB-A to TYPE-C ケーブル



日本語取扱説明書



オフィス卓上



台所掛け



外出時持ち

Image: Product dimensions: 164mm (height) x 134mm (width) x 39mm (depth).

## 10. WARRANTY AND SUPPORT

MoKo is committed to providing high-quality products and excellent customer service.

- **1-Year Manufacturer Warranty:** Your product is covered by a 1-year warranty from the date of purchase. During this period, if any product defects occur (excluding damage caused by customer misuse), we will offer a refund or exchange.
- **30-Day Return/Refund Guarantee:** If you are not satisfied with your purchase within 30 days, you may be eligible for a full refund or exchange.
- **24/7 Customer Support:** Our support team is available 24 hours a day, 365 days a year. If you have any questions or concerns, please do not hesitate to contact us.

For any inquiries or support requests, please contact the seller through your order history.



Image: MoKo offers a 30-day return/refund guarantee, 24/7 support, and a 1-year manufacturer warranty.

## 11. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Do not insert fingers or any objects into the fan grille while it is operating.
- Keep the fan away from water and other liquids. Do not use it in wet environments.
- Do not disassemble or attempt to repair the fan yourself. Contact customer support for service.
- Keep out of reach of children and pets.
- Do not block the air inlet or outlet.
- Avoid dropping or subjecting the fan to strong impacts.