

[Manuals.plus](#) /

> [DRSYXCS](#) /

> DRSYXCS Mini Karaoke Machine User Manual

DRSYXCS drs-K32

DRSYXCS Mini Karaoke Machine User Manual

Model: drs-K32



Image: The DRSYXCS Mini Karaoke Machine, featuring its main speaker unit and two wireless microphones, ready for use.

INTRODUCTION

Welcome to the user manual for your new DRSYXCS Mini Karaoke Machine. This guide provides essential information for setting up, operating, and maintaining your device to ensure optimal performance and enjoyment. Please read this manual thoroughly before using the product.

WHAT'S IN THE BOX

- Karaoke Machine x 1
- Wireless Microphones x 2
- USB Charging Cable x 1
- User Manual x 1

PRODUCT OVERVIEW AND FEATURES

The DRSYXCS Mini Karaoke Machine is a portable entertainment system designed for both kids and adults, offering a vibrant audio-visual experience.

Your browser does not support the video tag.

Video: This video provides a quick overview of the Mini Karaoke Machine, highlighting its compact design and ease of use for both kids and adults.

Dazzling Lights and Fun Sound Modes

The karaoke machine features large atmosphere lights with 7 distinct lighting modes, creating an immersive karaoke experience. The wireless microphones support 5 different sound modes: female, male, kids, magic, and original sound, allowing for diverse vocal effects.

COLORFUL LIGHTS



Image: The karaoke machine illuminates with colorful LED lights, enhancing the party atmosphere. The microphones offer various voice-changing effects for added fun.

Microphone supports 5 voices bringing more joy to children



Baby Sounds



Your voice



Monster voice



Women's Voices



Male voice

Image: The microphone offers five distinct voice modes, including baby sounds, original voice, monster voice, women's voice, and male voice, providing versatile entertainment options.

Shocking Dual Speakers

Equipped with 9D panoramic sound effect, built-in amplified aperture full-range speaker, low-frequency diaphragm, and a digital signal processor, this portable Bluetooth speaker delivers superior high and low bass with clear, zero-distortion sound quality.

3D STEREO SPEAKERS



Image: An internal view of the speaker system, illustrating its advanced audio components for 3D surround sound, DSP processing, and HiFi sound quality.

Versatile Connectivity

The machine utilizes Bluetooth 5.1 technology for instant pairing and stable transmission up to 50 feet. It also supports TF card, USB, and AUX input connections, making it compatible with mobile phones, TVs, tablets, and car karaoke systems.



Image: The karaoke machine seamlessly connects to multiple devices such as smartphones, televisions, laptops, and tablets, offering flexible entertainment options.

Wireless Microphones and Portability

The two wireless microphones are lightweight and compact, designed for easy portability. The unit is equipped with a 2000 mAh rechargeable battery, providing 6-10 hours of singing time on a full charge.

Kids karaoke machine battery can be used for

5-10 H



3-4 H

Charging time

5-10 H

of singing time

Battery capacity: **2000 mAh**

Image: Information on the karaoke machine's battery, showing a 2000 mAh capacity that provides 5-10 hours of use after a 3-4 hour charge.

SETUP INSTRUCTIONS

Charging the Device

Before first use, fully charge the karaoke machine and both wireless microphones using the provided USB charging cable.

- Connect the USB Type-C cable to the charging port on the karaoke machine.
- Connect the other end to a compatible USB power adapter (not included).
- The charging indicator light will show charging status.



Image: The karaoke machine's charging details, indicating a Type-C charging port and a 2000 mAh battery providing 5-10 hours of use.

Powering On/Off

Press and hold the power button on the karaoke machine and each microphone to turn them on or off.

Bluetooth Pairing

To connect your device via Bluetooth:

1. Turn on the karaoke machine. It will automatically enter Bluetooth pairing mode.
2. On your mobile phone, tablet, or other Bluetooth-enabled device, go to Bluetooth settings.
3. Search for "K8" or "DRSYXCS K32" (or similar model name) in the list of available devices.
4. Select the device to pair. A confirmation sound will indicate successful pairing.

Your browser does not support the video tag.

Video: This video demonstrates the Bluetooth pairing process for the DRSYXCS Mini Karaoke Machine, showing how to connect it to a smartphone for wireless audio streaming.

Other Connections

The karaoke machine supports additional input methods:

- **TF Card:** Insert a TF (microSD) card with your music files into the designated slot. The machine will automatically play the content.
- **AUX Input:** Use a 3.5mm AUX cable (not included) to connect external audio devices.
- **USB Input:** Connect a USB drive with music files to the USB port.

OPERATING INSTRUCTIONS

Speaker Controls

The main unit features control buttons for various functions:

- **Power Button:** Press and hold to turn on/off.
- **Volume Control:** Use '+' and '-' buttons to adjust the speaker volume.
- **Light Modes:** Press the 'M' button to cycle through the 7 different LED light modes.

Microphone Controls

Each wireless microphone has its own controls:

- **Power Button:** Press and hold to turn on/off.
- **Volume Control:** Use the up/down buttons to adjust microphone volume.
- **Sound Modes:** Press the dedicated button to switch between the 5 voice modes (female, male, kids, magic, original).
- **Sound Cancellation:** The microphone supports one-click sound cancellation for enhanced vocal performance.

MAINTENANCE

- Keep the device clean by wiping it with a soft, dry cloth.
- Avoid exposing the device to extreme temperatures, humidity, or direct sunlight.
- Store the device in a cool, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from speaker.	Low battery; Volume too low; Not connected.	Charge the device; Increase volume; Ensure proper Bluetooth/wired connection.
Microphone feedback (harsh sound).	Microphone too close to the speaker.	Move the microphone further away from the speaker.
Bluetooth connection unstable.	Device too far; Interference.	Ensure devices are within 50 feet; Reduce interference from other wireless devices.
Lights not working.	Light mode off; Malfunction.	Press 'M' button to activate/change light modes; Contact support if issue persists.

SPECIFICATIONS

Feature	Detail
Brand	DRSYXCS
Model Number	drs-K32
Power Source	Battery Powered
Connector Type	USB Type C
Product Dimensions	3.7 x 3 x 3.7 inches
Item Weight	1.28 pounds
Battery Capacity	2000 mAh (included)
Singing Time	6-10 hours
Charging Time	3-4 hours
Connectivity Technology	Bluetooth 5.1, USB, TF Card, AUX
Microphone Sound Modes	Female, Male, Kids, Magic, Original
LED Light Modes	7 modes

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided with your product packaging or visit the official DRSYXCS website. Keep your purchase receipt for warranty claims.