

[Manuals.plus](#) /

> [Horsepower](#) /

> Horsepower Pocket Pony Cordless Oscillating Power Scrubber Instruction Manual

Horsepower 18038

Horsepower Pocket Pony Cordless Oscillating Power Scrubber

Model: 18038

INTRODUCTION

The Horsepower Pocket Pony is a compact, cordless, and rechargeable oscillating power scrubber designed for deep cleaning in tight spaces, grout lines, corners, and other hard-to-reach areas. Its powerful oscillating action and interchangeable brush heads make it a versatile tool for various cleaning tasks around your home.



Image: The Horsepower Pocket Pony in use, demonstrating its compact size and oscillating cleaning action on a tiled surface.

IMPORTANT SAFETY INSTRUCTIONS

- Read and follow all warnings and instructions before using this product.
- Injury or property damage can result from improper use.

- Keep out of reach of children.
- Do not submerge the Pocket Pony in water for more than 30 minutes or at a depth greater than 36 inches.
- Always ensure the charging port is securely closed before use in wet conditions.
- Do not operate or charge the Pocket Pony in hot water above 110°F (43°C).
- Use only the charging cable provided with the product.
- Do not use metal objects, abrasive cleaners, or corrosive liquids with the product.
- Wear appropriate protective eyewear and gloves when using certain cleaning agents.

PACKAGE CONTENTS

Your Horsepower Pocket Pony package includes the following items:

- Horsepower Pocket Pony main unit
- USB-C Charging Cable
- Grout Brush
- Soft Bristle Brush
- Hook & Loop Head
- X-Large Head
- Large Head
- 4 Scouring Pads
- 4 Polishing Pads

What's in the Box:

Includes: Horsepower Pocket Pony, Charging Cable, Grout Brush, Soft Bristle Brush, Hook & Loop Head, X-Large Head, Large Head, 4 Scouring Pads, 4 Polishing Pads



Image: A visual representation of all items included in the Horsepower Pocket Pony package, laid out neatly.

SETUP

Charging the Battery

1. Plug the supplied USB-C charging cable into the charging port on the Horsepower Pocket Pony.
2. Connect the other end of the charging cable to a USB wall adapter (not included) and plug it into a wall outlet.
3. The battery will fully charge in approximately 4-5 hours.

4. The charging indicator light will flash red while charging and turn steady green when fully charged.
5. Once fully charged, unplug the charging cable and securely close the charging port cover to maintain waterproofing.



Image: The Horsepower Pocket Pony connected to its charging cable, illustrating the charging process.

Attaching Brush Heads

1. Ensure the Pocket Pony is powered off.
2. Align the groove on the desired brush head with the connector on the main unit.
3. Push the brush head down and turn it clockwise until it locks securely into place.
4. To remove a brush head, turn it counter-clockwise and pull up.



Image: A display of the five different brush heads included with the Pocket Pony, highlighting their variety for different cleaning tasks.

OPERATING INSTRUCTIONS

Power On/Off

- To power on the Pocket Pony, press the Power Button once.
- To power off, press the Power Button a second time.

Using the LED Light

- To turn on the LED light, press the Light Button once.
- To turn off the LED light, press the Light Button a second time.



Image: The Pocket Pony with its built-in LED light illuminated, providing better visibility during cleaning.

Using Different Attachments

The Pocket Pony comes with various brush heads and pads for different cleaning needs:

- **Grout Brush:** Ideal for cleaning corners, narrow spaces, and grout lines. Run time: approx. 180 minutes.
- **Soft Bristle Brush:** Suitable for small surfaces and delicate fixtures. Not recommended for painted or polished surfaces, plastic, or faux leather. Run time: approx. 180 minutes.
- **X-Large Head:** For larger surfaces. Not recommended for painted or polished surfaces, plastic, or faux leather. Run time: approx. 50 minutes.
- **Large Head:** For moderate coverage, such as stovetops and refrigerators. Not recommended for painted or polished surfaces, plastic, or faux leather. Run time: approx. 60 minutes.
- **Hook & Loop Head with Scouring/Polishing Pads:** Use the Hook & Loop Head to attach the Scouring Pads for tough grime on pots and pans, or Polishing Pads for glass and smooth surfaces. **Do not use the Hook & Loop Head alone.** Run time: approx. 120 minutes.



Image: An illustration showing the different interchangeable heads and their recommended uses for customized cleaning.

Your browser does not support the video tag.

Video: An official instructional video from BulbHead, the manufacturer, demonstrating the features and usage of the Horsepower Pocket Pony.

MAINTENANCE

Cleaning

- After each use, wash the brush head under running water.
- For thorough cleaning, turn the product on and allow the brush head to clean itself in water for no more than 5 minutes.
- Dry the product and attachments with a soft cloth after cleaning.

- The main unit can be wiped clean with a damp cloth.

Storage

- Store the Horsepower Pocket Pony and its accessories in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not turning on	Low battery	Charge the device for 4-5 hours.
Brush head detaches during use	Brush head not securely attached	Ensure the brush head is pushed down and twisted clockwise until it locks.
Reduced cleaning performance	Worn brush head or incorrect attachment for task	Replace worn brush heads or select the appropriate attachment for the cleaning task.

SPECIFICATIONS

Feature	Detail
Product Dimensions	2.17 x 1.38 x 3.74 inches
Item Weight	1 pounds
Manufacturer	Bulbhead
Item Model Number	18038
Power Source	Rechargeable Battery
Waterproof Rating	IPX7 (Do not submerge more than 30 minutes or 36 inches deep)
Included Components	Horsepower Pocket Pony, Charging Cable, Grout Brush, Soft Bristle Brush, Hook & Loop Head, X-Large Head, Large Head, 4 Scouring Pads, 4 Polishing Pads

WARRANTY & SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or contact the manufacturer directly. Keep your purchase receipt for warranty claims.

