

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [YOUTHINK](#) /

› [YOUTHINK Electronic Digital Magnetic Timer - Model youtWqwRHQbpa7-12 User Manual](#)

## YOUTHINK youtWqwRHQbpa7-12

# YOUTHINK Electronic Digital Magnetic Timer User Manual

Model: youtWqwRHQbpa7-12

## INTRODUCTION

---

This manual provides instructions for the YOUTHINK Electronic Digital Magnetic Timer, Model youtWqwRHQbpa7-12. This device is designed for precise time management in various settings, including cooking, baking, studying, and office tasks. Please read this manual thoroughly before using the timer to ensure proper operation and longevity.

## SETUP

---

### Battery Installation

1. Locate the battery compartment on the back of the timer.
2. Gently slide the battery compartment cover downwards to open it.
3. Insert three (3) AAA batteries (not included) into the compartment, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Rear view of the YOUTHINK Electronic Timer with the battery compartment open, showing slots for three AAA batteries.

## OPERATING INSTRUCTIONS

---

### Setting the Timer

1. The timer features a rotating outer ring. Turn the ring clockwise to increase the time and counter-clockwise to decrease the time.
2. The display shows minutes (M) and seconds (S). The maximum setting is 99 minutes and 55 seconds.
3. To set a specific time, rotate the outer ring until the desired minutes and seconds are displayed. For example, to set 5 minutes, rotate until '05:00' is shown.



Image: Front view of the YOUTHINK Electronic Timer displaying '99:55', indicating the maximum time setting.

### **Starting and Pausing the Countdown**

- After setting the desired time, press the button located at the bottom center of the display to start the countdown.
- To pause the countdown, press the button again.
- To resume the countdown, press the button once more.

### **Clearing the Timer**

- To clear the current time setting or stop a running timer and reset it to '00:00', press and hold the button for approximately 3 seconds.

### **Alarm Function**

- When the countdown reaches '00:00', the timer will emit an audible alarm.
- To stop the alarm, press any button or rotate the outer ring.



Image: Front view of the YOUTHINK Electronic Timer displaying '00:00' with 'M' for minutes and 'S' for seconds.

## KEY FEATURES

- **Digital Display:** Large, clear black screen with white numbers for easy readability.
- **Magnetic Design:** The timer features a magnetic back, allowing it to be securely attached to metal surfaces such as refrigerators, freezers, or whiteboards.
- **Integrated Stand:** A foldable stand is included for convenient placement on flat surfaces like countertops or desks.
- **Simple Operation:** Intuitive 1-touch operation and rotary setting for ease of use.



Image: Side view of the YOUTHINK Electronic Timer, highlighting its integrated stand and magnetic back for versatile placement.



Image: The YOUTHINK Electronic Timer placed on a desk next to a person reading a book, demonstrating its use in a study environment.

## MAINTENANCE

---

### Cleaning

- Wipe the timer with a soft, dry cloth.
- Do not use abrasive cleaners or immerse the timer in water.

### Battery Replacement

- When the display dims or the timer functions erratically, it is time to replace the batteries.
- Follow the battery installation steps outlined in the 'Setup' section.
- Dispose of used batteries responsibly according to local regulations.

## TROUBLESHOOTING

---

- **Timer not turning on:** Ensure batteries are inserted correctly with the right polarity and are not depleted. Replace batteries if necessary.

- **Display is dim or flickering:** This indicates low battery power. Replace the AAA batteries.
- **Timer not responding to button presses:** Try removing and reinserting the batteries to reset the device. If the issue persists, replace the batteries.
- **Alarm is too quiet or not sounding:** Ensure the timer is not obstructed. Check battery level.

## PRODUCT SPECIFICATIONS

Feature	Specification
Item Type	Electronic Timer
Model Number	youtWqwRHQbpa7-12
Material	ABS
Power Source	3 x AAA Battery (not included)
Timing Range	Minutes 00-99, Seconds 00-55
Product Weight	Approx. 92g / 3.2oz
Package Dimensions	4.33 x 3.54 x 2.36 inches
Manufacturer	YOUTHINK

## WARRANTY INFORMATION

For information regarding the product warranty, please refer to the documentation provided at the time of purchase or contact YOUTHINK customer support directly.

## CUSTOMER SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact YOUTHINK customer support through the retailer's platform or the official YOUTHINK website for assistance.