

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY FR60XD Replacement Remote Control User Manual

ECONTROLLY RCEC-FR60XD

ECONTROLLY FR60XD Replacement Remote Control User Manual

Compatible with Intertek IF-32FSB and WF-1340 Heaters

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY FR60XD replacement remote control. This remote is designed to be compatible with Intertek IF-32FSB and WF-1340 heater models, offering a direct replacement without the need for complex programming. Please read this manual thoroughly before use to ensure proper operation and longevity of your device.





Figure 1.1: Front view of the ECONTROLLY FR60XD replacement remote control, showing the power, temperature, flame, timer, and light buttons.

2. SETUP AND BATTERY INSTALLATION

The ECONTROLLY FR60XD remote control requires two AAA batteries (not included) for operation. No programming or pairing is necessary; simply install the batteries, and the remote will be ready for use with compatible heater models.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.



Figure 2.1: Rear view of the remote control with the battery compartment open, showing the two AAA battery slots.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the

compartment.

4. Slide the battery compartment cover back into place until it clicks securely.





Figure 2.2: Rear view of the remote control with the battery compartment closed.

The remote is now ready for use. Point it towards your compatible heater and begin operation.

3. OPERATING INSTRUCTIONS

This remote control provides intuitive access to various functions of your compatible Intertek heater. The buttons are clearly labeled with universal symbols.

3.1 Button Functions

Button Symbol	Function	Description
(Power)	Power On/Off	Turns the heater on or off.
≈ (Temperature)	Temperature Control	Adjusts the heater's temperature setting.
F (Fahrenheit/Celsius)	Temperature Unit	Switches between Fahrenheit and Celsius display.
(Flame)	Flame Effect	Controls the flame effect settings (e.g., intensity, on/off).
(Timer)	Timer Function	Activates or adjusts the heater's timer function.
(Light)	Light Control	Controls additional lighting features of the heater.

For specific details on how each function interacts with your heater, please refer to your heater's original instruction manual.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the remote's finish or internal components.

4.2 Battery Replacement

Replace batteries when the remote's range decreases or if it becomes unresponsive. Refer to Section 2.1 for battery installation instructions. Always use new alkaline AAA batteries and dispose of old batteries responsibly according to local regulations.

5. TROUBLESHOOTING

If you experience issues with your ECONTROLLY FR60XD remote control, please consult the following table:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity.
Remote range is poor.	Low batteries; Obstruction between remote and heater.	Replace batteries. Ensure a clear line of sight to the heater's receiver.
Specific button not working.	Button malfunction; Heater not supporting the function.	Test other buttons. Confirm your heater model supports the specific function. If other buttons work, the remote may be faulty.
Heater not responding at all.	Heater power issue; Remote not compatible.	Check if the heater is powered on. Verify the remote's compatibility with your specific Intertek IF-32FSB or WF-1340 model.

6. SPECIFICATIONS

- **Model:** RCEC-FR60XD
- **Compatibility:** Intertek IF-32FSB, WF-1340 Heaters
- **Material:** ABS Environmental Protection Material
- **Color:** Black
- **Power Source:** 2 x AAA Batteries (not included)
- **Transmitting Distance:** Approximately 10 meters (33 feet)
- **Dimensions:** 5 x 1 x 0.25 inches (12.7 x 2.54 x 0.64 cm)
- **Item Weight:** 2 ounces (56.7 grams)
- **Special Feature:** Ergonomic design



Figure 6.1: Side view of the remote control illustrating its dimensions: approximately 10 cm (3.94 in) in length and 4.3 cm (1.69 in) in width.

7. WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the terms provided by the seller at the time of purchase. For technical support or further inquiries, please contact the seller directly through the platform where the purchase was made.

You can often find seller contact information by reviewing your order history on the purchasing platform.

© 2025 ECONTROLLY. All rights reserved.

This manual is for informational purposes only. ECONTROLLY is not affiliated with Intertek.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DSP3DJYW>

More documents and user manuals: <https://manuals.plus/>