



[Manuals.plus](#) /

› [NUTIKAS](#) /

› NUTIKAS BPLPEN-G-L-01 Large Playpen Instruction Manual

NUTIKAS BPLPEN-G-L-01

NUTIKAS BPLPEN-G-L-01 Large Playpen Instruction Manual

Model: BPLPEN-G-L-01

1. INTRODUCTION

Thank you for choosing the NUTIKAS BPLPEN-G-L-01 Large Playpen. This manual provides essential information for the safe assembly, operation, and maintenance of your playpen. Please read these instructions carefully before use and retain them for future reference.

Important Safety Warnings:

- Always supervise children when they are in the playpen. Never leave a child unattended.
- Ensure all parts are correctly assembled and securely fastened before placing a child in the playpen.
- Do not use the playpen if any parts are broken, torn, or missing. Contact customer support for replacement parts.
- Place the playpen on a flat, level, and stable surface.
- Keep the playpen away from open flames, heaters, and other sources of strong heat.
- Do not modify the product or use accessories not approved by the manufacturer.
- Regularly inspect the playpen for signs of wear, damage, or loose components.
- Ensure children do not wear clothing with drawstrings or loose items that could become entangled.

2. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- Metal Frame Tubes (various lengths for sides and connectors)
- Mesh Fabric Panels (with star pattern)
- Corner Connectors and T-Connectors
- Fabric Covers for frame tops

- Suction Cups (pre-attached to base connectors)
- Zippered Door Panel
- Instruction Manual (this document)

3. ASSEMBLY INSTRUCTIONS


Follow these steps to assemble your NUTIKAS playpen:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat surface to identify each component.
2. **Assemble Base Frame:** Connect the longest metal tubes using the corner and T-connectors to form the rectangular base of the playpen. Ensure each connection clicks securely into place.
3. **Attach Vertical Supports:** Insert the shorter vertical metal tubes into the connectors on the base frame.
4. **Install Mesh Panels:** Slide the mesh fabric panels onto the vertical tubes. The bottom edge of the mesh should align with the base frame, and the top edge will be secured later. Ensure the zippered door panel is placed in your desired location.
5. **Assemble Top Frame:** Connect the remaining metal tubes to the top of the vertical supports using the appropriate connectors, mirroring the base frame. This will secure the top edge of the mesh panels.
6. **Secure Fabric Covers:** Place the decorative fabric covers over the top frame tubes and connectors. These covers often have hook-and-loop fasteners to secure them in place.
7. **Engage Suction Cups:** Press down firmly on each corner and middle base connector to ensure the integrated suction cups adhere to the floor, providing additional stability.
8. **Final Check:** Before use, thoroughly inspect the entire playpen to ensure all connections are secure, the fabric is taut, and there are no loose parts.



Image 1: The fully assembled NUTIKAS playpen, demonstrating its spacious design suitable for multiple children and adults. Note the secure mesh sides and sturdy frame.

A Large Retreat for Babies and Toddlers

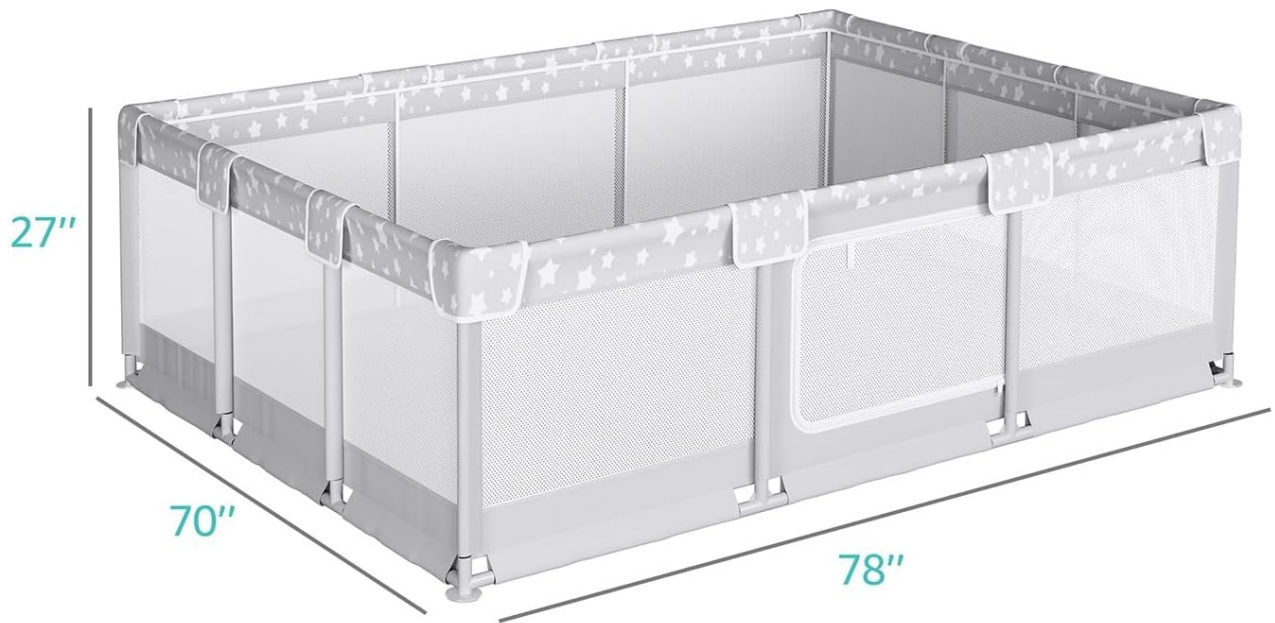

★ Cute Star Pattern



Kids love, joyful play!

👁️ Suction cups



Improve grip and prevent from shifting

Image 2: Visual representation of the playpen's dimensions (70" x 78" x 27"), highlighting the star pattern on the fabric and the suction cups at the base for enhanced stability.

4. OPERATING INSTRUCTIONS

Using the Zippered Door:

The playpen features a convenient zippered door for easy access. To open, simply pull the zipper downwards. To close, pull the zipper upwards, ensuring it is fully closed to prevent children from exiting unsupervised.

Visible Security

See-through sides let you watch safely as babies play



Image 3: A child demonstrating the use of the side-zipped door, which allows for easy entry and exit. Always ensure the zipper is closed when a child is inside.

Ensuring Stability with Suction Cups:

The playpen is equipped with suction cups on its base connectors to improve grip and prevent shifting. For optimal performance, ensure the floor surface is clean and dry before engaging the suction cups. Press down firmly on each base connector until the suction cup adheres to the floor.

Visibility and Interaction:

The mesh sides of the playpen provide clear visibility, allowing you to easily monitor your child while they play. This design also allows children to see their surroundings, promoting a sense of security and interaction.



Go In & Out, Easy Peasy!

The side-zippered door makes it easy for your little one to crawl in or out



Image 4: A parent and child interacting through the transparent mesh sides, illustrating the 'Visible Security' feature that allows constant supervision.

5. MAINTENANCE

Cleaning:

- **Fabric Panels:** Wipe clean with a damp cloth and mild soap. Rinse thoroughly with a clean, damp cloth to remove soap residue. Allow to air dry completely before reassembly or storage. Do not machine wash or tumble dry.
- **Frame:** Wipe metal frame tubes and plastic connectors with a damp cloth. Dry thoroughly.
- **Suction Cups:** Ensure suction cups are clean and free of dust or debris for optimal grip.

Storage:

When not in use, disassemble the playpen and store it in a clean, dry place away from direct sunlight and extreme temperatures. This will help prolong the life of the product.

Regular Inspection:

Periodically check all components for signs of wear, damage, or loose connections. Pay close attention to the mesh fabric for tears and the frame for bends or cracks. Discontinue use if any damage is found and contact customer support.

6. TROUBLESHOOTING

- **Playpen feels unstable:**

Ensure all frame tubes are fully inserted into their connectors. Verify that the suction cups at the base are clean and firmly pressed onto a smooth, dry, and level floor surface.

- **Parts do not fit together:**

Double-check that you are using the correct tubes and connectors for each section as per the assembly instructions. Some tubes may appear similar but have slight differences for specific positions. Do not force connections.

- **Zipper is difficult to operate:**

Ensure the fabric around the zipper is not caught. If the zipper is stiff, a small amount of zipper lubricant (e.g., beeswax or a silicone-based spray) can be applied carefully, avoiding contact with children.

- **Mesh fabric is loose:**

Confirm that the top and bottom frame tubes are correctly assembled and fully secured, pulling the mesh taut.

7. SPECIFICATIONS

Model Number	BPLPEN-G-L-01
Brand	NUTIKAS
Material Composition	Metal (frame), Mesh Fabric
Color	Gray
Approximate Dimensions (L x W x H)	78 inches x 70 inches x 27 inches
Age Range (Description)	Toddler
Batteries Required	No

8. WARRANTY AND CUSTOMER SUPPORT

For warranty information, replacement parts, or any questions regarding your NUTIKAS BPLPEN-G-L-01 Large Playpen, please contact NUTIKAS customer support through your retailer or the official brand website. Please have your model number (BPLPEN-G-L-01) and purchase details ready when contacting support.



