

[Manuals.plus](#) /

› [VersLife](#) /

› VersLife S7PLUS Cordless Stick Vacuum Cleaner with Mop Function User Manual

VersLife S7PLUS

VersLife S7PLUS Cordless Stick Vacuum Cleaner with Mop Function User Manual

Model: S7PLUS

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your VersLife S7PLUS Cordless Stick Vacuum Cleaner. Please read this manual thoroughly before first use and retain it for future reference. Proper use and care will ensure optimal performance and extend the lifespan of your appliance.



An overview of the VersLife S7PLUS cordless vacuum cleaner, showcasing its main unit, extension tube, floor brush, and several attachments including a crevice tool, 2-in-1 brush, and a wall mount.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, please observe the following safety precautions:

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow the appliance to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.

- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.

3. PACKAGE CONTENTS

Carefully unpack your VersLife S7PLUS and check that all items are present and in good condition. If any items are missing or damaged, please contact customer service.



This image illustrates all components included in the VersLife S7PLUS package: extension tube, motor unit, floor brush, two HEPA filters (one pre-installed), 2-in-1 brush, user manual, power adapter, long flat brush (crevice tool), and the water tank with mop pad.

1. Extension Tube
2. Motor (Main Unit)
3. Floor Brush
4. HEPA Filters (2, 1 pre-installed)
5. 2-in-1 Brush
6. User Manual
7. Power Adapter (Charger)
8. Long Flat Brush (Crevice Tool)
9. Water Tank (with mop pad)

4. PRODUCT OVERVIEW

The VersLife S7PLUS is a versatile cordless stick vacuum cleaner designed for comprehensive home cleaning. It features a powerful motor, a multi-stage filtration system, and a unique 2-in-1 vacuum and mop function. The appliance can be configured for various cleaning tasks using its interchangeable attachments.



This image displays the VersLife S7PLUS in multiple configurations, demonstrating its versatility for cleaning different areas such as floors, upholstery, and tight spaces using various attachments like the 2-in-1 brush and crevice tool.

5. ASSEMBLY

Follow these steps to assemble your VersLife S7PLUS vacuum cleaner:

1. **Attach the Extension Tube:** Insert the extension tube into the main motor unit until it clicks securely into place.
2. **Connect the Floor Brush:** Attach the floor brush to the other end of the extension tube, ensuring it locks firmly.
3. **Install Attachments (Optional):** For handheld use or specific cleaning tasks, detach the extension tube and floor brush. Connect the 2-in-1 brush or the long flat brush directly to the main motor unit.
4. **Attach Water Tank (for Mop Function):** If using the mop function, attach the water tank to the floor brush as indicated in the diagram. Ensure the mop pad is securely fastened to the water tank.

6. OPERATING INSTRUCTIONS

6.1. Charging the Battery

- Before first use, fully charge the vacuum cleaner for approximately 4-5 hours.
- Connect the power adapter to the charging port on the main unit and plug it into a wall outlet.
- The indicator lights will show the charging status. Once fully charged, the lights will indicate completion.

6.2. Power On/Off and Suction Modes

- Press the power button to turn the vacuum cleaner on. It will start in the standard suction mode.
- Press the power button again to switch to a higher suction mode for more intensive cleaning.
- Press the power button a third time to turn the vacuum cleaner off.

6.3. Using the 2-in-1 Vacuum and Mop Function



The VersLife S7PLUS vacuum cleaner in action, demonstrating its 2-in-1 capability to vacuum debris and mop the floor simultaneously, indicated by green light and water trails.

- Fill the water tank with clean water. Do not use corrosive liquids or detergents that may damage the tank or floor.
- Attach the filled water tank with the mop pad securely to the floor brush.
- Operate the vacuum cleaner as usual. The mop function will simultaneously clean the floor while vacuuming.

6.4. Green LED Light Feature



A close-up view of the vacuum cleaner head's green LED lights, effectively highlighting hidden dust and particles on a dark floor surface, making them visible for thorough cleaning.

- The floor brush is equipped with green LED lights that illuminate the cleaning path.
- These lights help to reveal hidden dust, debris, and pet hair on various floor types, especially in dimly lit areas or under furniture.

6.5. Using Attachments

- **2-in-1 Brush:** Ideal for cleaning upholstery, curtains, and delicate surfaces.
- **Long Flat Brush (Crevice Tool):** Suitable for reaching narrow gaps, corners, and tight spaces like car interiors or

between sofa cushions.

6.6. Self-Standing Feature

- The unique design of the S7PLUS allows it to stand upright independently without needing to lean against a wall or be placed on a dock.
- This feature provides convenience during cleaning interruptions, allowing you to pause and resume easily.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner.

7.1. Emptying the Dustbin



A user demonstrating the process of emptying the dustbin of the VersLife S7PLUS vacuum cleaner, showing how collected debris is released directly into a waste receptacle.

- Ensure the vacuum cleaner is turned off before emptying.
- Press the dustbin release button to detach the dustbin from the main unit.
- Hold the dustbin over a trash can and press the bottom release latch to open and empty the contents.
- Close the dustbin latch and reattach the dustbin to the main unit until it clicks.

7.2. Cleaning the Filters



A four-step visual guide detailing how to disassemble and clean the filters of the VersLife S7PLUS vacuum cleaner, including removing the dust cup, separating components, and cleaning the HEPA and mesh filters.

- The VersLife S7PLUS features a multi-stage filtration system including a stainless steel filter and a HEPA filter.
- Regularly check and clean these filters to maintain optimal suction power.
- Twist and pull to remove the filter assembly from the dustbin.
- Separate the HEPA filter and the stainless steel mesh filter.
- Rinse both filters under running water until clean. Do not use detergents.
- Allow all filter components to air dry completely for at least 24 hours before reassembling and placing them back into the vacuum cleaner. Using wet filters can damage the motor.

7.3. Cleaning the Brush Roll

- Turn off the vacuum cleaner and detach the floor brush.
- Locate the brush roll cover on the bottom of the floor brush and open it.
- Remove the brush roll and clear any tangled hair, threads, or debris using scissors or a cleaning tool.
- Reinsert the clean brush roll and close the cover securely.

7.4. Cleaning the Water Tank and Mop Pad

- After each use of the mop function, detach the water tank and empty any remaining water.
- Rinse the water tank with clean water and allow it to air dry.
- Remove the mop pad, rinse it thoroughly, and allow it to air dry. The mop pad can also be machine washed if necessary.

8. TROUBLESHOOTING

If you encounter any issues with your VersLife S7PLUS, please refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged Power button not pressed correctly	Charge the battery fully Ensure the power button is pressed firmly
Low suction power	Dustbin is full Filters are clogged Brush roll or tube is blocked	Empty the dustbin Clean or replace filters Check and clear any blockages
Water leakage from mop function	Water tank not properly attached Mop pad not correctly installed	Ensure water tank is securely clicked into place Verify mop pad is correctly fastened
Unusual noise during operation	Blockage in the brush roll or air path Loose component	Inspect and clear any blockages Check all connections and ensure components are secure

If the problem persists after attempting these solutions, please contact VersLife customer support for further assistance.

9. SPECIFICATIONS

Brand	VersLife
Model	S7PLUS
Product Dimensions	40 x 20 x 18 cm
Item Weight	3.27 Kilograms
Dustbin Capacity	900 Milliliters
Suction Power	Up to 35,000 Pa
Noise Level	60 Decibels
Runtime	15 to 40 minutes
Special Features	2-in-1 Vacuum & Mop, HEPA Filter, Rechargeable, Cordless, Green LED Light
Filter Type	HEPA
Surface Recommendation	Hard Floor, Carpet, Upholstery
Power Source	Battery Powered
Voltage	230 Volts
Wattage	400 Watts

10. WARRANTY AND SUPPORT

The VersLife S7PLUS Cordless Stick Vacuum Cleaner comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, warranty claims, or any questions regarding your product, please contact VersLife customer service through the retailer where you purchased the product or visit the official VersLife website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question