

[manuals.plus](#) /› [Biyoso](#) /› **Biyoso X61 5.4 Bluetooth Earbuds Instruction Manual****Biyoso X61**

Biyoso X61 5.4 Bluetooth Earbuds Instruction Manual

Model: X61 | Brand: Biyoso

1. INTRODUCTION

Thank you for choosing the Biyoso X61 5.4 Bluetooth Earbuds. This manual provides essential information for setting up, operating, and maintaining your new wireless earphones. Please read it carefully to ensure optimal performance and longevity of your device.

What's in the Box:

- 1 pair of Biyoso X61 Earbuds
- 1 USB-C Charging Case
- 1 USB-C Charging Cable
- 1 User Manual

2. PRODUCT OVERVIEW

The Biyoso X61 earbuds feature Bluetooth 5.4 technology for stable connectivity and HiFi stereo sound. They are designed for comfortable semi-in-ear wear and offer intuitive touch controls for managing audio and calls.

Model: X61

Metal headphones TWS alloy Bluetooth headset



Figure 2.1: Biyoso X61 Earbuds in their charging case, highlighting Bluetooth 5.4 technology.

Semi-in-ear design Smart touch · Easy to operate

Intelligent touch, fingers naturally fit on the touch point
To achieve accurate touch control

Power on/off: open the cover to turn on, close the cover to turn off
Pairing mode: The headset is automatically entered the pairing mode, connected to the name BIYOSO X61

—
Call operation

Voice assistant: long press the L/R touch key for 2s
Answer a call: single-click the L/R touch key to answer the call when there is an incoming call
Hang up a call: double-click the L/R touch key to hang up the call
Reject a call: long press the L/R touch key to reject the call when there is an incoming call

—
Music operation

Play/pause: single-click the L/R touch key
Previous song: triple-click the L touch key
Next song: triple-click the R touch key
Volume up: double-click the R touch key to increase the volume
Volume down: double-click the L touch key to decrease the volume



Figure 2.2: Detailed internal structure of a Biyoso X61 earbud, emphasizing its design for stable wear and sound quality.

Key Features:

- TWS Bluetooth 5.4:** Ensures stable, fast transmission with minimal signal loss.
- Long Battery Life:** Up to 4.5 hours of listening time per charge, with the charging case providing up to 20 hours total.
- Semi-In-Ear Design:** Offers comfortable wear and non-destructive high-definition sound.
- IPX5 Water Resistance:** Protects against dust, sweat, and water splashes.
- Intuitive Touch Control:** Manage playback, volume, and calls directly from the earbuds.

3. SETUP

3.1 Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Connect the provided USB-C cable to the charging port on the case and a power source. The charging case battery full time is approximately 1.2 hours.



Figure 3.1: The Biyoso X61 charging case connected via USB-C cable for power.

3.2 Pairing with Your Device

1. **Power On/Off:** Open the charging case cover to automatically power on the earbuds. Close the cover to power them off.
2. **Pairing Mode:** The earbuds will automatically enter pairing mode when the case is opened.
3. **Connect:** On your device, enable Bluetooth and search for "BIYOSO X61" in the list of available devices. Select it to connect.
4. **Automatic Reconnection:** Once paired, the earbuds will automatically connect to your device when removed from the charging case.

Wear lightness and indifference Patching the auricular more stable

Each upgrade
Every step is loud

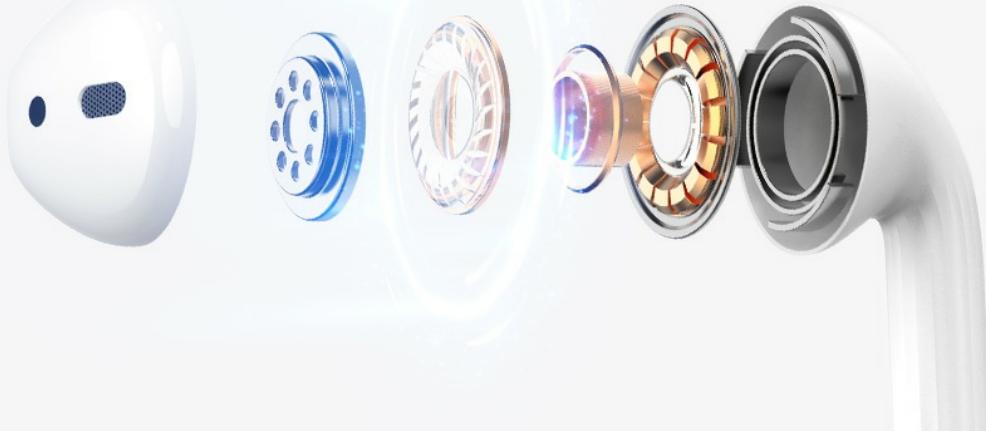


Figure 3.2: Earbuds ready for automatic connection after being removed from the case.

3.3 Product Introduction Video

Watch this official product introduction video for a visual guide to the Biyoso X61 Earbuds.

Your browser does not support the video tag.

Video 3.1: Official Biyoso X61 Earbuds Product Introduction. This video provides an overview of the earbuds' features and basic usage.

4. OPERATING INSTRUCTIONS

4.1 Touch Controls

The Biyoso X61 earbuds feature intuitive touch controls on the stem for easy management of audio and calls.

0 delay · high battery life Type-C port quickly charging

Professional acoustic optimization and tuning,
creating an immersive listening experience
Play and use longer

 Long
standby time



Figure 4.1: Visual guide to the touch control operations on the Biyoso X61 earbuds.

Call Operation:

- **Voice Assistant:** Long press the L/R touch key for 2 seconds.
- **Answer a Call:** Single-click the L/R touch key.
- **Hang Up a Call:** Double-click the L/R touch key.
- **Reject a Call:** Long press the L/R touch key.

Music Operation:

- **Play/Pause:** Single-click the L/R touch key.
- **Previous Song:** Triple-click the L touch key.
- **Next Song:** Triple-click the R touch key.
- **Volume Up:** Double-click the R touch key.
- **Volume Down:** Double-click the L touch key.
- **Switch Listening Modes:** Hold the stem.

4.2 Wearing the Earbuds

Gently insert the earbuds into your ears. The semi-in-ear design provides a comfortable and secure fit for various activities.

5. MAINTENANCE

5.1 Cleaning

Regularly clean your earbuds and charging case to ensure optimal performance and hygiene. Use a soft, dry, lint-free cloth. Do not use abrasive materials or harsh chemicals.

5.2 Storage

When not in use, store the earbuds in their charging case to protect them from dust and damage. Keep the case in a cool, dry place away from extreme temperatures.

5.3 Water Resistance

The Biyoso X61 earbuds and charging case are IPX5 rated, meaning they are resistant to dust, sweat, and water splashes. They are not designed for submersion in water. Avoid exposing them to heavy rain or showering with them.

6. TROUBLESHOOTING

If you encounter any issues with your Biyoso X61 earbuds, please refer to the following common solutions:

- **No Sound/Poor Sound Quality:**

- Ensure earbuds are properly seated in your ears.
- Check the volume level on both your device and the earbuds.
- Ensure earbuds are fully charged.
- Reconnect the earbuds to your device.

- **Earbuds Not Pairing:**

- Make sure Bluetooth is enabled on your device.
- Ensure earbuds are removed from the charging case.
- Turn off Bluetooth on other nearby devices to avoid interference.
- Try resetting the earbuds (refer to the full user manual for specific reset instructions if needed).

- **Charging Issues:**

- Verify the USB-C cable is securely connected to both the case and the power source.
- Ensure the charging contacts on the earbuds and inside the case are clean and dry.
- Try a different USB-C cable or power adapter.

If the problem persists, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Model Name	X61
Brand	Biyoso
Connectivity Technology	Wireless (Bluetooth 5.4)
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters
Ear Placement	In Ear
Form Factor	In Ear
Noise Control	Passive Noise Cancellation
Frequency Response	20 KHz

Feature	Specification
Sensitivity	90 dB
Impedance	32 Ohms
Audio Driver Size	8 Millimeters
Control Method	Touch
Battery Life (Earbuds)	Up to 4.5 hours (80% volume)
Total Listening Time (with case)	Up to 20 hours
Charging Case Battery Full Time	1.2 hours
Water Resistance Level	IPX5
Item Weight	0.15 ounces
Material	Metal, Plastic

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Biyoso products are covered by a limited warranty against defects in materials and workmanship. Please refer to the warranty card included in your product packaging for specific terms and conditions. Keep your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact Biyoso customer support. Contact details can be found on the official Biyoso website or on the warranty card.