

Lubluelu GX-2202-US-P

Lubluelu Cordless Vacuum Cleaner

USER MANUAL

Model: GX-2202-US-P

1. Product Overview

The Lubluelu Cordless Vacuum Cleaner is designed for efficient and versatile cleaning across various surfaces, including carpets, hardwood floors, and for pet hair. It features a lightweight design, a powerful motor, and a long-lasting battery for extended cleaning sessions. The vacuum is equipped with a touch screen for easy control and LED lights for improved visibility in dark areas.



Image: The Lubluelu Cordless Vacuum Cleaner, showcasing its main unit, various attachments, and product packaging.

2. Safety Instructions

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and

anything that may reduce air flow.

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.

3. Setup

3.1 Package Contents

Before assembly, ensure all components are present and undamaged. The package includes the following items:



Image: A visual guide to the package contents, including the main engine, electric floor brush, soft dusting brush, long suction nozzle, wall bracket, adapter, HEPA filter, hair cleaning tool, adjustable metal tube, battery, user manual, and gift package.

1. Main Engine
2. Electric Floor Brush
3. Soft Dusting Brush
4. Long Suction Nozzle (Crevice Tool)
5. Wall Bracket
6. Power Adapter
7. HEPA Filter
8. Hair Cleaning Tool
9. Adjustable Metal Tube
10. Battery
11. User Manual
12. Gift Package

3.2 Assembly

Follow these steps to assemble your Lubluelu Cordless Vacuum Cleaner:

1. Insert the adjustable metal tube into the main engine until it clicks into place.
2. Attach the electric floor brush to the other end of the metal tube, ensuring it is securely fastened.

3. For handheld use, attach desired accessories (soft dusting brush or long suction nozzle) directly to the main engine.

3.3 Charging the Battery

The vacuum cleaner is powered by a detachable lithium-ion battery. Ensure the battery is fully charged before first use.

- The battery can be charged while attached to the main engine or separately.
- Connect the power adapter to the charging port on the battery or main engine.
- Plug the adapter into a wall outlet. The charging indicator on the vacuum's touch screen will show charging status.
- A full charge takes approximately 4 hours.



Image: Illustration detailing the battery specifications, including 7x2200mAh Lithium-Ion Battery, Max 50 Min Running Time, and 4 Hours Quick Charge.

4. Operating Instructions

4.1 Power Modes and Runtime

The Lubblueu Cordless Vacuum offers three adjustable power settings to suit different cleaning needs:

- **Min Mode (10KPa):** Provides up to 50 minutes of runtime, ideal for light dust and everyday cleaning.
- **Mid Mode (17KPa):** Offers approximately 30 minutes of runtime for moderate cleaning tasks.
- **Max Mode (25KPa):** Delivers powerful suction for up to 12 minutes, suitable for tough debris and deep cleaning.



Image: The vacuum head positioned over different floor types (carpet, hard floor) demonstrating the 25kPa, 17kPa, and 10kPa suction levels with their respective runtimes.

4.2 Maneuverability and Features

The vacuum is designed for ease of use and thorough cleaning:

- **Flexible Swivel:** The vacuum head features a 160° flexible swivel, allowing you to easily navigate around furniture and obstacles.
- **90° Tilt:** The ability to tilt 90° enables cleaning under low-lying furniture.
- **LED Lights:** Three integrated LED lights illuminate dark corners and under furniture, ensuring no dust is missed.
- **Lightweight Design:** Weighing just 4.6 lbs, the vacuum is easy to handle for extended cleaning sessions without strain.

Powerful Cleaning. Effortlessly Agile



Image: A user demonstrating the agile cleaning capabilities of the lightweight vacuum, easily maneuvering it around a cat litter box.

4.3 Using Accessories

Utilize the included accessories for specialized cleaning tasks:

- **Electric Floor Brush:** Best for general floor cleaning, suitable for both hard floors and carpets.
- **Dusting Tool (Soft Dusting Brush):** Ideal for cleaning delicate surfaces, furniture, and shelves.
- **Long Crevice Tool (Long Suction Nozzle):** Perfect for reaching tight spaces, corners, and between cushions.



Electric Floor Brush



Dusting Tool



Long Crevice Tool



Image: A composite image illustrating the application of the Electric Floor Brush for general floor cleaning, the Dusting Tool for surfaces, and the Long Crevice Tool for narrow spaces.

5. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

5.1 Emptying the Dustbin

Empty the dustbin regularly to maintain strong suction power.

- Press the dustbin release button to detach it from the main engine.
- Position the dustbin over a trash can.
- Press the dustbin release lever to open the bottom flap and empty contents.
- Close the flap and reattach the dustbin to the main engine until it clicks.



Image: A hand demonstrating the one-click dustbin emptying feature, showing debris falling into a waste bin.

5.2 Cleaning Filters

The vacuum features a 5-layer filtering system, including a HEPA filter. Clean filters regularly to prevent clogging and maintain suction.

- Remove the dustbin and locate the filters inside.
- Remove the Cyclone Filter, Metal Mesh Filter, and Top H11 HEPA Filter.
- Tap off loose dirt from the filters. For thorough cleaning, rinse the filters under cold running water.
- Allow all filter components to air dry completely for at least 24 hours before reassembling. Do not use the vacuum with wet filters.



Image: An exploded view diagram showing the 5-layer filtering system, including the Cyclone Filter, Metal Mesh Filter, Top H11 HEPA Filter, and 220W Brushless Motor Filter, and Sponge Filter.

5.3 Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris.

- Turn off the vacuum and detach the electric floor brush.
- Locate the brush roll access cover on the bottom of the brush head.
- Open the cover and remove the brush roll.
- Use the included hair cleaning tool or scissors to cut and remove any tangled hair or fibers.
- Reinsert the brush roll and close the cover securely.

6. Troubleshooting

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum has no power	Battery is not charged; Battery not properly installed.	Charge the battery fully; Ensure battery is securely clicked into place.
Low suction power	Dustbin is full; Filters are clogged; Brush roll is tangled.	Empty the dustbin; Clean or replace filters; Remove tangled hair from brush roll.
Brush roll not spinning	Obstruction in brush roll; Brush roll not properly installed.	Remove any obstructions; Reinstall brush roll correctly.
Vacuum stops during operation	Battery low; Overheating protection activated.	Recharge the battery; Allow vacuum to cool down for at least 30 minutes before resuming use.

7. Specifications

Feature	Detail
Brand	Lubluelu
Model Name	GX-2202-US-P
Special Feature	7*2200mah Battery, 15-50Mins Running Time
Filter Type	HEPA Filter
Is Cordless?	Yes
Capacity	600 Milliliters
Runtime	50 minutes (Max)
Form Factor	Stick
Color	Purple
Product Dimensions	5"L x 5"W x 6"H
Item Weight	4.6 pounds
Number of Power Levels	3
Indoor/Outdoor Usage	Indoor
Batteries	7 AAA batteries required. (included)

8. Warranty and Support

Lubluelu provides comprehensive support for your product:

- **Warranty:** Your Lubluelu Cordless Vacuum Cleaner comes with a 2-year warranty.
- **Customer Service:** For any concerns or after-sales service, please contact us.
- **Phone Support:** +1 (256) 384-8884 (9AM to 5PM PST on weekdays).

Your satisfaction is our priority. We are committed to ensuring you have a worry-free experience with your cordless stick vacuum.

© 2025 Lubluelu. All rights reserved.