

MAGIC JOHN B0DSPHGLRP

MAGIC JOHN Phone Tripod Instruction Manual

Model: B0DSPHGLRP

1. PRODUCT OVERVIEW

The MAGIC JOHN Phone Tripod is a versatile 3-in-1 device designed for mobile photography and videography. It functions as a handgrip, an extendable selfie stick, and a stable tripod. Its compact and lightweight design makes it ideal for travel, live streaming, video recording, and capturing photos with ease.

Key features include a detachable Bluetooth remote control, a 360° rotatable phone holder, and a robust four-leg tripod for enhanced stability.

Mini Portable

Smaller than a mobile phone
easily fits into your pocket.

Ours



Lightweight zero burden
As short as 15 cm, easy to carry

Others



Heavy and hard to travel with
Up to 29 cm long, not easy to carry

Image 1: The MAGIC JOHN Phone Tripod demonstrating its compact, pocket-sized design, fitting easily into clothing pockets.

2. WHAT'S IN THE BOX

- Selfie Stick Tripod × 1
- USB Cable × 1
- Lanyard × 1

3. SETUP AND PAIRING

3.1 Attaching Your Phone

1. Gently pull apart the phone clip to expand it.

2. Insert your smartphone into the clip, ensuring it is securely held by the soft silicone pads.
3. The phone clip is 360° rotatable, allowing for both horizontal and vertical orientations. Adjust to your desired angle.



Image 2: A smartphone securely mounted on the tripod, highlighting the discreet design and wireless Bluetooth connectivity of the remote.

3.2 Bluetooth Remote Control Pairing

1. The remote control is detachable from the selfie stick handle. Gently slide it out.
2. Turn on the remote control (usually by pressing and holding the button). An indicator light will flash.
3. On your smartphone, go to Bluetooth settings and search for new devices.
4. Select 'VIP' from the list of available devices to pair. The indicator light on the remote will stop flashing once paired.
5. The remote control is compatible with both iPhone and Android devices.

4. OPERATING MODES

4.1 Handgrip Mode

For a stable handheld experience, keep the tripod legs folded and use the device as a comfortable handgrip. This mode is ideal for dynamic shots and provides a secure hold for your phone.



Image 3: A person using the handgrip mode, demonstrating how it feels like holding a DSLR camera for single-handed operation.

4.2 Selfie Stick Mode

Extend the telescopic rod to transform the device into a selfie stick. This allows you to capture wider angles and group photos. The rod extends up to 16.3 inches (41.5 cm).

4.3 Tripod Mode

To use as a tripod, press the button on the bottom of the handle to release and extend the four legs. Place the tripod on a flat, stable surface. This mode is perfect for hands-free recording, live streaming, video calls, and stable long-exposure shots.

DSLR-Level Four-Leg Stable Support

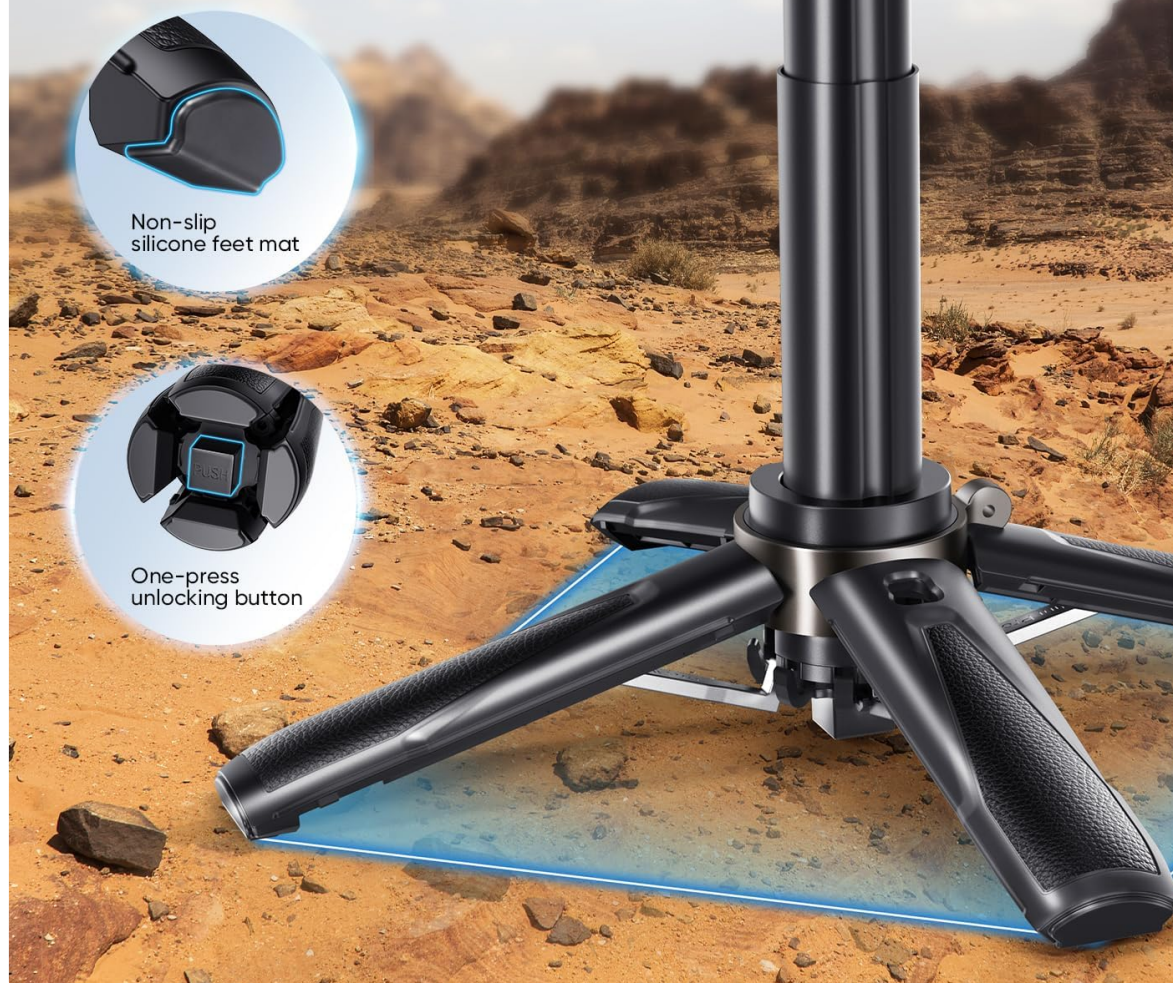


Image 4: The tripod in its four-leg stable support configuration, featuring non-slip silicone feet and a one-press unlocking button.

4.4 Adjustable Angle and Rotation

The phone holder offers 360° rotation and 225° elevated and overhead shot adjustment, providing flexibility to find the best shooting angle for diverse compositions.

360° Rotatable Selfie Stick

Mount Compatible with

Cold boot interface
can be paired with



Microphone



Fill Light



Cold Shoe Base



Image 5: Illustration of the 360° rotatable phone holder and 225° adjustable angle, along with cold shoe interfaces for accessories.

5. MAINTENANCE

- Keep the device clean by wiping it with a soft, dry cloth.
- Avoid exposing the device to extreme temperatures or direct sunlight for prolonged periods.
- Store in a cool, dry place when not in use.
- Ensure the phone clip and telescopic rod are free from dust and debris to maintain smooth operation.

6. TROUBLESHOOTING

6.1 Remote Control Not Pairing

- Ensure the remote control is charged and turned on.
- Check that your phone's Bluetooth is enabled.
- If 'VIP' does not appear, try turning the remote off and on again, and refresh your phone's Bluetooth device list.
- Ensure no other devices are actively connected to the remote control.

6.2 Instability in Tripod Mode

- Ensure all four legs are fully extended and locked into place.
- Place the tripod on a flat, stable surface. Uneven surfaces can cause instability.
- Verify that your phone is securely clamped in the holder and balanced.

7. SPECIFICATIONS

Feature	Detail
Brand	MAGIC JOHN
Model	B0DSPHGLRP
Material	Aluminum, Plastic
Item Weight	6.5 ounces (185 Grams)
Minimum Height	4.6 Inches
Maximum Height	16.3 Inches
Compatible Devices	For iPhone/Android
Special Features	Pocket Portable, Remote Control, Lightweight, Lanyard, 4 Legs Tripod

8. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video 1: An official product video from MAGICJOHN Direct-US, showcasing the portable selfie stick and phone tripod in various uses. This video highlights its compact size and versatility for different shooting scenarios.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided with your product packaging or visit the official MAGIC JOHN website. Ensure you retain your proof of purchase

for any warranty claims.

MAGIC JOHN is committed to user experience, creating high-quality products, and providing fast and responsive service. They offer 24/7 fast support and lifetime technical help.