



Manuals.plus /

› TeqHome /

› TeqHome 1500W Electric Indoor Grill Instruction Manual

## TeqHome 1500W Electric Indoor Grill

# TeqHome 1500W Electric Indoor Grill Instruction Manual

**Brand:** TeqHome | **Model:** 1500W Electric Indoor Grill

## 1. INTRODUCTION

---

Thank you for purchasing the TeqHome 1500W Electric Indoor Grill. This versatile 2-in-1 appliance is designed for convenient indoor grilling and raclette cooking, allowing you to prepare a variety of dishes from grilled meats and vegetables to melted cheese and side dishes. With its powerful heating element and adjustable temperature control, you can achieve optimal cooking results safely and efficiently. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or heating element in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- **Friendly Reminder:** Please pour clean water into the grease pan to help dissipate heat from the oven. Do not touch the heating tube.

### 3. PRODUCT OVERVIEW

---

#### Components

- Main Grill Unit with Heating Element
- Non-Stick Grill Plate (for frying mode)
- Grill Net (for grill mode)
- Grease Tray (stainless steel)
- 3 x Small Raclette Trays
- Temperature Control Knob
- Power Cable



Image 3.1: The TeqHome 1500W Electric Indoor Grill showcasing its 2-in-1 functionality with both the grill net and the non-stick cooking plate in use, alongside the three individual raclette trays.

## 4. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Ensure all parts listed in Section 3 are present.
2. **Placement:** Place the main grill unit on a stable, heat-resistant, and flat surface. Ensure there is adequate ventilation around the unit.
3. **Insert Grease Tray:** Slide the stainless steel grease tray into the designated slot beneath the heating element. This tray collects excess oil and drippings during cooking.
4. **Add Water to Grease Tray:** Pour a small amount of clean water into the grease tray. This helps to dissipate heat and reduce smoke during operation.
5. **Choose Cooking Mode:**
  - **Frying Pan Mode:** Place the non-stick grill plate directly on top of the heating element. This mode is ideal for frying, searing, and using the raclette trays.
  - **Grill Mode:** Place the grill net on top of the heating element. This mode is suitable for grilling skewers and larger items.

6. **Connect Power:** Ensure the temperature control knob is set to 'OFF' before plugging the power cable into a standard electrical outlet.

## 2-IN-1 Electric Indoor Grill



Image 4.1: Illustration of the two primary cooking modes: Frying Pan Mode, which utilizes the non-stick plate and allows for the use of the three small raclette trays, and Grill Mode, which uses the grill net over the grease tray.



## 5 Adjustable Temperature

Ensure optimal results of various foods



176°F



230°F



284°F



338°F



392°F

Image 4.2: A visual reminder to pour clean water into the grease pan before operation to aid in heat dissipation and to avoid touching the heating tube.

## 5. OPERATING INSTRUCTIONS

### Temperature Control

The TeqHome Electric Indoor Grill features a 5-level temperature control knob, allowing you to adjust the heat from 176°F (80°C) to 392°F (200°C) to suit various food types and cooking preferences. Turn the knob clockwise to increase the temperature.

- **Level 1 (176°F / 80°C):** Ideal for keeping food warm or very gentle cooking.
- **Level 2 (230°F / 110°C):** Suitable for delicate items or slow cooking.
- **Level 3 (284°F / 140°C):** Medium heat for general cooking.
- **Level 4 (338°F / 170°C):** Higher heat for faster cooking and browning.
- **Level 5 (392°F / 200°C):** Maximum heat for searing and grilling.

# Friendly Reminder

- \* Please pour clean water into the grease pan to help dissipate heat from the oven.
- \* Do not touch the heating tube.



Image 5.1: The 5-level adjustable temperature control knob, indicating the temperature range from 176°F to 392°F, designed to ensure optimal results for various foods.

## Cooking Modes

The 2-in-1 design allows for versatile cooking:

- **Frying Pan Mode:** Use the non-stick grill plate for cooking items like eggs, pancakes, or searing meats. The three small raclette trays can be inserted underneath for melting cheese or warming sauces simultaneously.
- **Grill Mode:** Use the grill net for cooking skewers, corn, or other items that benefit from direct heat and grill marks. Ensure the grease tray is in place below the heating element.

Video 5.1: This video demonstrates the TeqHome 1500W Electric Indoor Grill in action, showcasing its dual functionality for both frying/raclette and grilling. It highlights the ease of use, temperature control, and the variety of foods that can be prepared, including meats, vegetables, and seafood. The video also illustrates the removable components for cleaning.

## 6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your TeqHome Electric Indoor Grill and ensure optimal performance.

- **Always unplug the appliance** from the power outlet and allow it to cool completely before cleaning.
- **Removable Parts:** The grill plate, grill net, grease tray, and small raclette pans are designed for easy removal and cleaning.
- **Dishwasher Safe:** Both the grill plate and the raclette pans are dishwasher safe for convenient cleanup.
- **Hand Washing:** For hand washing, use warm, soapy water and a non-abrasive sponge or cloth. Rinse thoroughly and dry completely before storing.
- **Main Unit:** Wipe the main unit and heating element with a damp cloth. Do not immerse the main unit or electrical components in water.
- **Non-Stick Coating:** Avoid using metal utensils or abrasive cleaners on the non-stick grill plate to prevent damage to the coating.



*Image 6.1: The grill net, grill pan, grease tray, and three small trays are all removable and can be placed in a dishwasher for easy and convenient cleaning.*

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Grill does not heat up.	Not plugged in; power outlet malfunction; temperature knob set to 'OFF'; overheating protection activated.	Ensure plug is securely in a working outlet. Turn temperature knob to desired setting. If overheated, unplug and let cool for 15-20 minutes before restarting.
Excessive smoke during cooking.	Grease tray is empty or has insufficient water; food has high fat content; food residue from previous use.	Ensure water is added to the grease tray before cooking. Trim excess fat from meats. Clean the grill thoroughly after each use.
Food sticks to the grill plate.	Insufficient oil/butter; non-stick coating damaged; temperature too high.	Lightly grease the grill plate before adding food. Avoid using metal utensils. Adjust temperature setting.
Uneven cooking.	Food not spread evenly; grill not preheated sufficiently.	Ensure food is spread in a single layer. Allow the grill to preheat for 5-10 minutes before adding food.

## 8. SPECIFICATIONS

Feature	Detail
Brand	TeqHome
Model	1500W Electric Indoor Grill
Power	1500 Watts
Material	Aluminum (Non-Stick Coating)
Color	Green
Temperature Control	5 Levels (176°F - 392°F / 80°C - 200°C)
Product Dimensions	20.08"D x 8.66"W x 3.15"H (51cm D x 22cm W x 8cm H)
Item Weight	5.18 Pounds (2.35 kg)
Included Components	Grill Net, Non-Stick Grill Plate, Grease Tray, 3 Raclette Trays

# Product Size

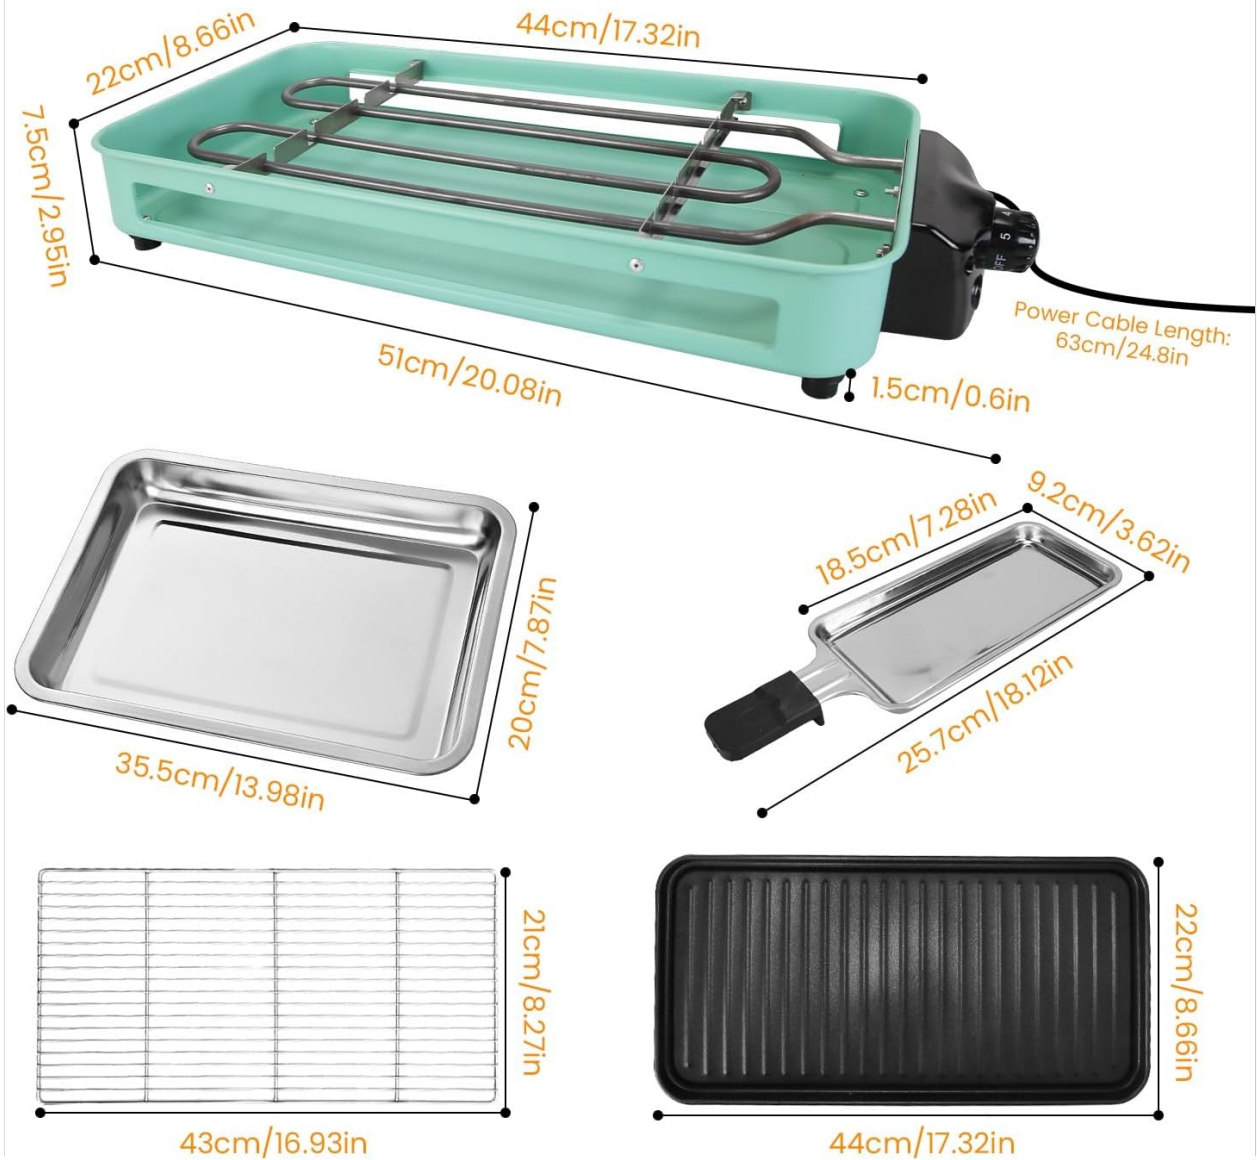


Image 8.1: Detailed product dimensions for the main grill unit, grill pan, grease tray, and small raclette trays.

## 9. WARRANTY AND SUPPORT

TeqHome stands behind the quality of its products. For warranty information, technical support, or any questions regarding your 1500W Electric Indoor Grill, please refer to the warranty card included in your product packaging or visit the official TeqHome website. Our customer service team is available to assist you with any concerns.