

Manuals.plus /

› COSTWAY /

› COSTWAY Upholstery Cleaner Machine User Manual

COSTWAY ES10448US-GR

COSTWAY Upholstery Cleaner Machine User Manual

Model: ES10448US-GR

1. PRODUCT OVERVIEW

The COSTWAY Upholstery Cleaner Machine is a portable spot cleaner designed for effective removal of dirt and stains from various surfaces such as couches, stairs, carpets, and pet messes. It features a powerful 600W motor with $\geq 15\text{kPa}$ suction for deep cleaning.



Image 1.1: The COSTWAY Upholstery Cleaner Machine shown with its various attachments, including the tough stain brush and upholstery nozzle.

2. SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Retain this manual for future reference.

- Always unplug the machine from the power outlet before cleaning or performing maintenance.
- Do not immerse the machine in water or other liquids.
- Keep hands, face, and body parts away from openings and moving parts during operation.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not handle plug or appliance with wet hands.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- This appliance is for household use only.

3. PACKAGE CONTENTS

Verify that all items are present and in good condition upon opening the package:

- 1 x Upholstery Cleaner Machine
- 1 x Tough Stain Brush
- 1 x Upholstery Nozzle
- 1 x Sewage Tank Brush
- 1 x User Manual

4. SETUP

1. **Unpack the Machine:** Carefully remove all components from the packaging.
2. **Identify Water Tanks:** The machine features dual removable water tanks: a 44 oz (1.3L) clean water tank and a 37 oz (1.1L) sewage tank.



Image 4.1: Illustration of the dual clean water and sewage tanks, indicating their capacities.

3. **Fill Clean Water Tank:** Remove the clean water tank and fill it with appropriate cleaning solution and water as per your cleaning solution's instructions. Do not overfill.
4. **Attach Desired Tool:** Select either the Tough Stain Brush or the Upholstery Nozzle based on your cleaning needs and securely attach it to the hose.

Multi-purpose Cleaning



Upholstery Nozzle



Tough Stain Brush



Image 4.2: The upholstery nozzle and tough stain brush, designed for various cleaning tasks.

5. **Connect Power:** Plug the 10 ft long power cord into a suitable electrical outlet.

5. OPERATING INSTRUCTIONS

1. **Power On:** Press the power button to turn on the upholstery cleaner.
2. **Spray Solution:** Press the spray trigger on the handle to dispense cleaning solution onto the stained area.

All-in-one Design

Remove deep and tough stains



Image 5.1: Visual representation of the spray, brush, and suck functions working together to remove stains.

3. **Brush and Suction:** Move the cleaning tool over the stained area, allowing the brush to agitate the stain and the powerful suction ($\geq 15\text{kPa}$) to lift the dirt and liquid into the sewage tank.



Image 5.2: Depiction of the machine's strong suction power, effectively removing liquid and dirt from a carpet.

4. **Extended Reach:** Utilize the 6 ft hose and 10 ft power cord for extended reach, allowing you to clean larger areas without frequently repositioning the machine.



Image 5.3: The long hose and power cord provide ample reach for cleaning various areas.

5. **Monitor Sewage Tank:** The sewage tank has a water-full indicator to alert you when it needs to be emptied.
6. **Repeat if Necessary:** For stubborn stains, repeat the spray, brush, and suction process until the area is clean.
7. **Power Off:** Once cleaning is complete, turn off the machine and unplug it from the power outlet.



Image 5.4: A user demonstrating the effective use of the upholstery cleaner on a carpet.

6. MAINTENANCE

1. **Empty and Clean Sewage Tank:** After each use, remove the sewage tank and empty its contents. Use the provided sewage tank brush to clean the interior thoroughly. Rinse with clean water.
2. **Rinse Clean Water Tank:** Rinse the clean water tank with fresh water after each use, especially if cleaning solution was used.
3. **Clean Attachments:** Rinse the tough stain brush and upholstery nozzle under running water to remove any debris or residue.
4. **Wipe Down Machine:** Wipe the exterior of the machine with a damp cloth.
5. **Store Properly:** The machine features a power cord hook and a hose holder for organized storage. Store in a dry, cool place.

Lightweight & Compact Design



Power Cord Hook

Hose Holder

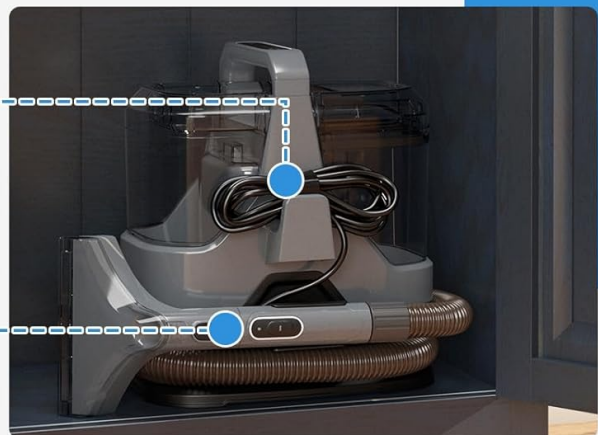


Image 6.1: The cleaner's compact design and integrated power cord hook and hose holder for convenient storage.

7. TROUBLESHOOTING

If you encounter issues with your upholstery cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet not working; power button not pressed.	Ensure power cord is securely plugged into a working outlet. Press the power button firmly.
No suction or weak suction.	Sewage tank full; hose or nozzle clogged; tank not properly seated.	Empty the sewage tank. Check hose and nozzle for blockages and clear them. Ensure tanks are securely in place.
No spray or weak spray.	Clean water tank empty; spray nozzle clogged; tank not properly seated.	Refill the clean water tank. Clean the spray nozzle. Ensure tanks are securely in place.
Water leaking.	Tanks not properly seated; tank caps loose; hose connection loose.	Ensure both clean and sewage tanks are correctly and securely seated. Check that tank caps are tightened. Verify hose connections are secure.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	COSTWAY
Model Name	Upholstery Cleaner Machine
Model Number	ES10448US-GR
Color	Gray
Material	ABS
Overall Dimensions (L x W x H)	12" x 8.5" x 12.5" (31 x 21.5 x 32 cm)
Sewage Tank Capacity	37 OZ (1.1L)
Clean Water Tank Capacity	44 OZ (1.3L)
Water Hose Length	6 ft (175 cm)
Power Cord Length	10 ft (300 cm)
Net Weight	8 lbs (3.5 kg)
Motor Power	600W
Suction Power	≥15kPa

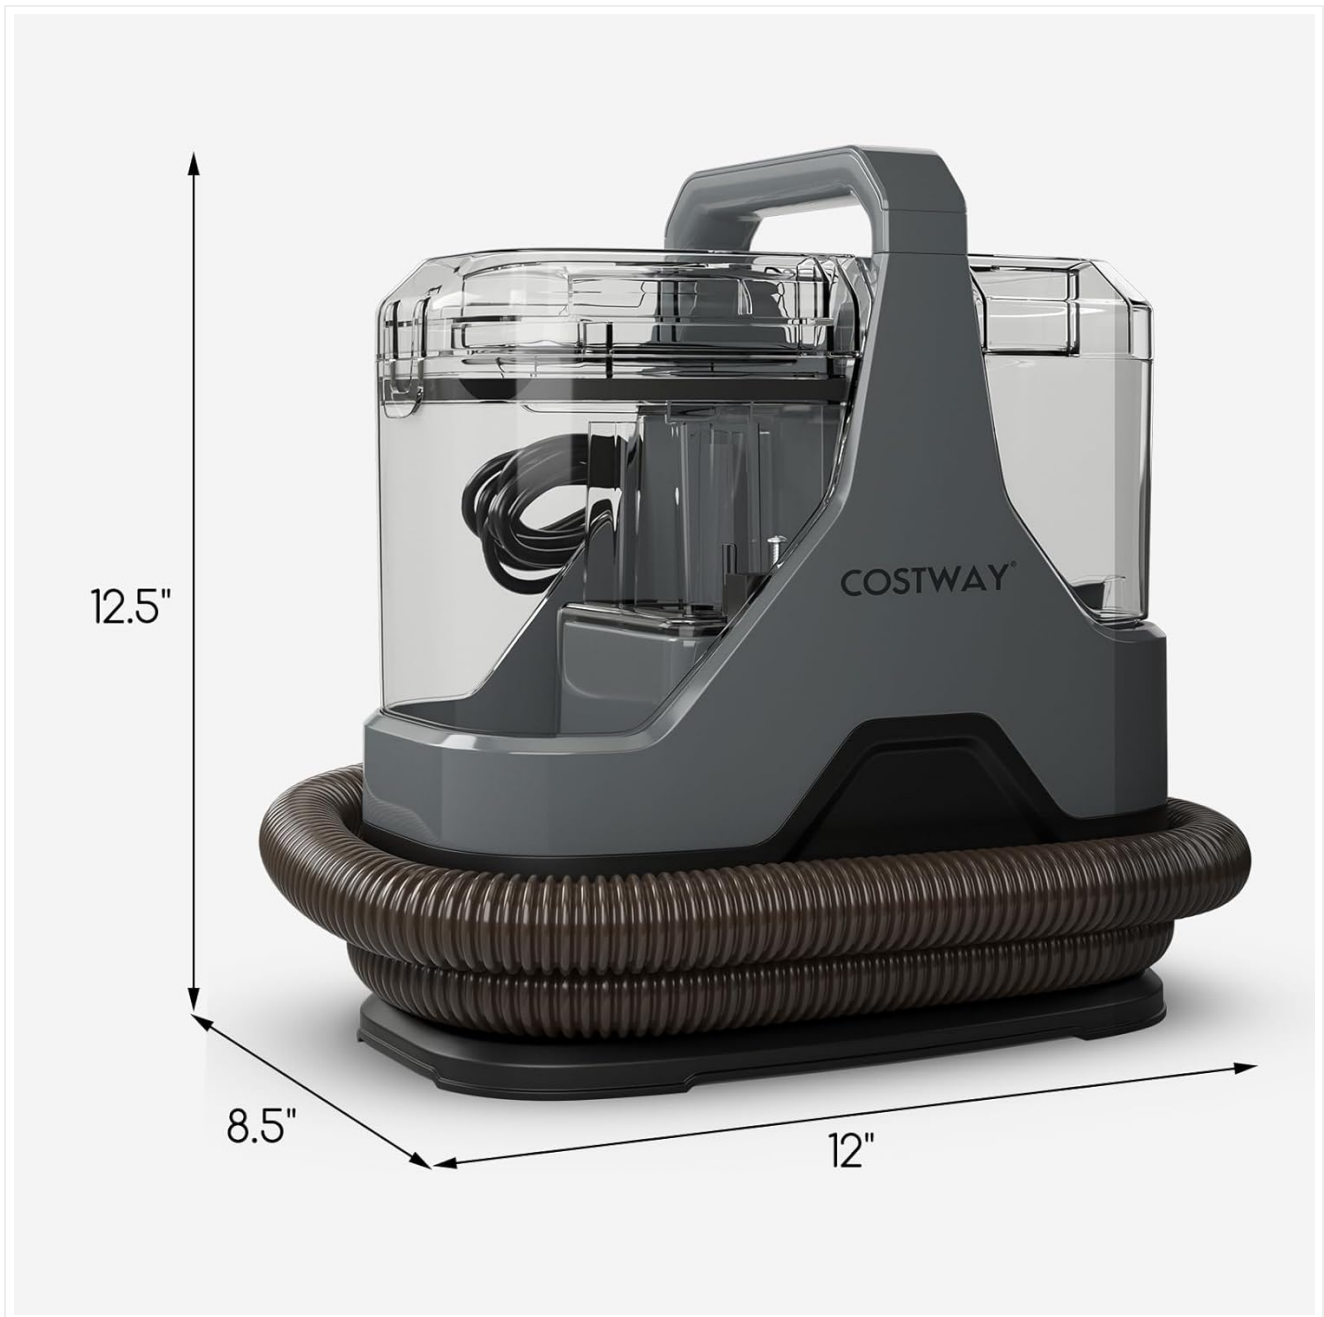


Image 8.1: Diagram showing the overall dimensions of the upholstery cleaner machine.

9. WARRANTY AND SUPPORT

Information regarding product warranty and customer support was not available in the provided product data. Please refer to the product packaging or the manufacturer's official website for detailed warranty terms and contact information for support.

10. OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were available in the provided data to embed in this manual. Only customer-uploaded videos were found, which are not included as per instructions.

