

[Manuals.plus](#) /

› [Jocca](#) /

› JOCCA Automatic Drip Coffee Maker Instruction Manual

Jocca 2497

JOCCA Automatic Drip Coffee Maker Instruction Manual

Model: 2497 | Brand: Jocca

INTRODUCTION

Thank you for choosing the JOCCA Automatic Drip Coffee Maker, Model 2497. This coffee maker is designed to provide you with fresh, delicious coffee with ease. Featuring a large 1500 ml capacity (up to 12 cups), a programmable timer, a washable filter, and convenient functions like Pause & Serve and Keep Warm, it ensures your coffee experience is always enjoyable. Please read this manual carefully before using the appliance to ensure safe and optimal operation.



Figure 1: Front view of the JOCCA Automatic Drip Coffee Maker.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before use.
- Do not touch hot surfaces. Use handles or knobs. The warming plate remains hot after brewing.

- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot liquids.
- The glass carafe is designed for use with this appliance only. It must never be used on a range top.
- Do not place a hot carafe on a cold or wet surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive material.

COMPONENTS

Familiarize yourself with the parts of your JOCCA Drip Coffee Maker:

1. Water Reservoir
2. Lid
3. Spray Head
4. Filter Basket
5. Permanent Washable Filter
6. Glass Carafe with Lid
7. Warming Plate
8. Control Panel with Digital Display
9. Power Cord



Figure 2: Detailed view of the control panel, showing ON/OFF, HR, MIN, SET, PROG, AUTO, and 1-4 CUP buttons, along with the digital display.



Figure 3: The glass carafe with clear markings for up to 12 cups (1500 ml).

SETUP

Before First Use

- Unpack the coffee maker and remove all packaging materials.
- Clean the glass carafe, filter basket, and permanent filter with warm, soapy water. Rinse thoroughly and dry.
- Wipe the exterior of the coffee maker with a damp cloth.
- To clean the internal components, run two full cycles of plain water through the coffee maker without coffee grounds. Discard the water after each cycle.

Placing the Coffee Maker

Place the coffee maker on a flat, stable, heat-resistant surface, away from the edge of the counter. Ensure there is adequate ventilation around the unit.



OPERATING INSTRUCTIONS

Brewing Coffee

1. Open the lid and fill the water reservoir with fresh, cold water up to the desired level indicated on the carafe (max 12 cups / 1500 ml).
2. Place the permanent washable filter into the filter basket. If using a paper filter, place it inside the permanent filter.
3. Add the desired amount of ground coffee into the filter. A general guideline is one tablespoon of coffee grounds per cup. Adjust to your taste.
4. Close the lid securely.
5. Place the empty glass carafe on the warming plate.
6. Plug the power cord into a standard electrical outlet.
7. Press the **ON/OFF** button to start the brewing process. The indicator light will illuminate.
8. The coffee maker will automatically brew the coffee. Once brewing is complete, the warming plate will keep the coffee hot.

Setting the Clock

- Plug in the coffee maker. The display will show "12:00 AM".
- Press the **HR** button to set the hour. Press and hold for faster adjustment.
- Press the **MIN** button to set the minute. Press and hold for faster adjustment.
- Ensure the AM/PM indicator is correct.

Programmable Timer (Delay Brew)

You can set the coffee maker to start brewing automatically at a later time.

1. Prepare the coffee maker for brewing as described in "Brewing Coffee" (water, coffee grounds, carafe in place).
2. Press the **PROG** button. The display will show "PROG" and flash.
3. Use the **HR** and **MIN** buttons to set the desired start time.
4. Press the **PROG** button again to confirm the setting. The "PROG" indicator will remain lit.
5. The coffee maker will automatically start brewing at the programmed time.

Pause & Serve Function

This feature allows you to pour a cup of coffee before the brewing cycle is complete.

- During the brewing cycle, you can temporarily remove the carafe from the warming plate. The flow of coffee will automatically stop.
- Replace the carafe within 20 seconds to prevent overflow from the filter basket. Brewing will resume automatically.

Keep Warm Function

After brewing, the warming plate will automatically keep the coffee hot for a period of time (typically 30 minutes to 2 hours, refer to specific product details if available, otherwise general). The coffee maker will then automatically shut off.

1-4 Cup Function

For brewing smaller quantities of coffee (1-4 cups) with optimized flavor.

- Prepare the coffee maker as usual with water and coffee grounds for 1-4 cups.
- Press the **1-4 CUP** button before pressing **ON/OFF**. An indicator light will show that the 1-4 cup function is active.
- Then press **ON/OFF** to start brewing.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

Daily Cleaning

- Always unplug the coffee maker before cleaning and allow it to cool completely.
- Remove the glass carafe, filter basket, and permanent filter. Wash them in warm, soapy water. The permanent filter is washable and reusable, eliminating the need for disposable filters.
- Rinse thoroughly and dry. These parts are generally top-rack dishwasher safe, but hand washing is recommended for longevity.
- Wipe the exterior of the coffee maker, warming plate, and control panel with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Never immerse the main unit in water or any other liquid.

Descaling (Mineral Deposit Removal)

Mineral deposits (calcium) can build up in your coffee maker over time, affecting its performance. Descale your coffee maker every 2-3 months, or more frequently if you have hard water.

1. Fill the water reservoir with a mixture of white vinegar and cold water (1:2 ratio, e.g., 1 part vinegar to 2 parts water).
2. Place the empty carafe on the warming plate.
3. Run a full brewing cycle with the vinegar solution.
4. After the cycle, turn off the coffee maker and let it sit for 15-30 minutes.
5. Discard the vinegar solution.
6. Run 2-3 full cycles of plain, cold water through the coffee maker to rinse thoroughly and remove any residual vinegar taste.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	Not plugged in. Power outage. ON/OFF button not pressed. Programmable timer set incorrectly.	Ensure the coffee maker is plugged into a working outlet. Check your household's power supply. Press the ON/OFF button. Verify the programmed time and ensure the PROG indicator is lit if using delay brew.
Coffee is too weak or too strong.	Incorrect coffee-to-water ratio. Coffee grounds too coarse/fine.	Adjust the amount of coffee grounds to your preference. Use medium-ground coffee for optimal results.

Problem	Possible Cause	Solution
Water overflows from filter basket.	Too much coffee grounds. Filter basket clogged. Carafe not properly placed on warming plate. Carafe removed for too long during Pause & Serve.	Reduce the amount of coffee grounds. Clean the filter basket and permanent filter thoroughly. Ensure the carafe is fully seated on the warming plate. Return the carafe to the warming plate within 20 seconds during Pause & Serve.
Coffee tastes bad.	Coffee maker needs cleaning/descaling. Stale coffee grounds. Poor water quality.	Clean and descale the coffee maker regularly. Use fresh, high-quality coffee grounds. Use filtered water.

SPECIFICATIONS

Feature	Detail
Brand	Jocca
Model Number	2497
Color	Black
Capacity	1500 ml (12 cups)
Power	900W
Dimensions (L x W x H)	26 x 19 x 31 cm (approx. 10.2 x 7.5 x 12.2 inches)
Weight	1.81 kg (approx. 4 lbs)
Special Features	Programmable Timer, Pause & Serve, Keep Warm Function, 1-4 Cup Function, Washable Filter
Included Components	Glass Carafe, Washable Filter
Operation Mode	Fully Automatic

WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, or technical support, please refer to the warranty card included with your product or visit the official Jocca website.

Website: [Visit the Jocca Store on Amazon](#) (This link is provided for general reference to the brand's presence, specific support contact may vary).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question