

[Manuals.plus](#) /

› [Bennett Read](#) /

› Bennett Read Cyclo-Tech 2-in-1 Upright Hand Vacuum Cleaner User Manual

Bennett Read HVC118

Bennett Read Cyclo-Tech 2-in-1 Upright Hand Vacuum Cleaner User Manual

Model: HVC118

1. INTRODUCTION

Thank you for purchasing the Bennett Read Cyclo-Tech 2-in-1 Upright Hand Vacuum Cleaner. This versatile cleaning appliance is designed for efficient home cleaning, easily converting from an upright vacuum to a portable handheld unit. Its cyclonic filtration system ensures effective dust collection and cleaner air output. Please read this manual thoroughly before first use to ensure safe and optimal operation.

Key Features:

- Thermal cut-off for motor protection, enhancing product longevity.
- Includes a crevice nozzle and upholstery tool for specialized cleaning tasks.
- Multi-surface floor nozzle suitable for both carpets and hard floors.
- Easy-empty dirt tank for convenient disposal of collected debris.
- Comes with a wall-mount bracket for compact and easy storage.
- Lightweight and compact design for effortless maneuverability.
- Premium quality adjustable extension wand for extended reach.

2. PRODUCT COMPONENTS

Familiarize yourself with the various parts of your Bennett Read Cyclo-Tech vacuum cleaner:



Figure 2.1: Included accessories for the Bennett Read Cyclo-Tech vacuum cleaner. This image displays the multi-surface floor nozzle, adjustable extension wand, crevice nozzle, upholstery tool, and wall-mount bracket.

- **Main Unit:** Contains the motor, dirt tank, and filtration system.
- **Adjustable Extension Wand:** Connects the main unit to the floor nozzle or other attachments for upright use.
- **Multi-Surface Floor Nozzle:** Designed for effective cleaning on both hard floors and carpets.
- **Crevice Nozzle:** Ideal for reaching tight spaces, corners, and edges.
- **Upholstery Tool:** Suitable for cleaning furniture, curtains, and other fabric surfaces.
- **Wall-Mount Bracket:** For convenient storage of the vacuum cleaner.
- **Power Cord:** For connecting the vacuum cleaner to an electrical outlet.

3. SETUP AND ASSEMBLY

Follow these steps to assemble your vacuum cleaner for first use:

1. **Unpack Components:** Carefully remove all components from the packaging. Ensure all parts listed in the "Product Components" section are present.
2. **Assemble Upright Vacuum:**
 - Insert the adjustable extension wand into the main unit until it clicks securely into place.
 - Attach the multi-surface floor nozzle to the bottom end of the extension wand, ensuring it is firmly connected.



Figure 3.1: The Bennett Read Cyclo-Tech vacuum cleaner fully assembled in its upright configuration, ready for use.

3. Wall-Mount Installation (Optional):

- Choose a suitable location on a wall, ensuring it is near a power outlet and at a convenient height.
- Mark the drilling points using the wall-mount bracket as a template.
- Drill holes and insert appropriate wall plugs (not included, depending on wall type).
- Secure the wall-mount bracket to the wall using screws.
- Hang the assembled vacuum cleaner on the bracket for storage.

4. OPERATING INSTRUCTIONS

Your Bennett Read Cyclo-Tech vacuum cleaner offers two primary modes of operation:

4.1. Upright Vacuum Mode

This mode is ideal for cleaning large floor areas, including carpets and hard floors.

1. Ensure the vacuum is fully assembled in the upright configuration (main unit, extension wand, floor nozzle).
2. Plug the power cord into a suitable electrical outlet.
3. Press the power button located on the main unit to turn on the vacuum cleaner.
4. Guide the floor nozzle over the surface to be cleaned. The multi-surface nozzle is designed to work effectively on various floor types without adjustment.
5. When finished, press the power button again to turn off the vacuum and unplug it from the outlet.



Figure 4.1: A user operating the Bennett Read Cyclo-Tech vacuum cleaner in its upright configuration, demonstrating its use for floor cleaning.

4.2. Handheld Vacuum Mode

The handheld mode is perfect for quick clean-ups, upholstery, car interiors, and hard-to-reach areas.

1. To convert to handheld mode, detach the extension wand from the main unit by pressing the release button and pulling it apart.
2. Attach the desired accessory (crevice nozzle or upholstery tool) directly to the main unit's suction opening.
3. Plug the power cord into a suitable electrical outlet.
4. Press the power button to activate the handheld vacuum.
5. Use the handheld unit with the attached tool to clean specific areas.
6. After use, turn off the vacuum and unplug it.



Figure 4.2: A user demonstrating the conversion of the Bennett Read Cyclo-Tech from an upright vacuum to a compact handheld unit, highlighting its 2-in-1 versatility.



Figure 4.3: The main unit of the Bennett Read Cyclo-Tech vacuum cleaner configured as a handheld device, with the crevice nozzle attached for detailed cleaning.

5. CARE AND MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner. Always unplug the vacuum before performing any maintenance.

5.1. Emptying the Dirt Tank

The dirt tank should be emptied regularly, ideally after each use or when the debris reaches the "MAX" fill line.

1. Ensure the vacuum cleaner is unplugged.
2. Locate the dirt tank release button on the main unit and press it to detach the dirt tank.
3. Position the dirt tank over a waste bin.
4. Open the bottom flap of the dirt tank to release the collected dirt and debris.
5. Close the flap securely and reattach the dirt tank to the main unit until it clicks into place.

5.2. Cleaning Filters

The Cyclo-Tech features a microparticle filter that requires periodic cleaning to maintain suction power and air quality.

1. With the dirt tank removed, locate the filter assembly inside the main unit.
2. Carefully remove the filter.
3. Tap the filter gently over a waste bin to remove loose dust and debris.
4. If necessary, rinse the filter under cool running water. Ensure the filter is completely dry before reinserting it into the vacuum cleaner. **Do not use detergents or hot water.**
5. Reinsert the dry filter into the vacuum cleaner and reattach the dirt tank.

5.3. General Cleaning and Storage

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Check the floor nozzle and attachments regularly for blockages or tangled hair/fibers and remove them.
- Store the vacuum cleaner in a cool, dry place, ideally using the provided wall-mount bracket to save space.

6. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Not plugged in; Power outlet faulty; Thermal cut-off activated.	Ensure power cord is securely plugged in; Test outlet with another appliance; Unplug and allow vacuum to cool for 30 minutes before restarting.
Loss of suction.	Dirt tank full; Filter clogged; Nozzle/hose blocked.	Empty dirt tank; Clean or replace filter; Check and clear any blockages in the nozzle, wand, or hose.
Unusual noise.	Blockage in nozzle or hose; Motor issue.	Check for and remove any blockages; If noise persists, contact customer support.
Dust escaping from vacuum.	Dirt tank not properly closed; Filter not installed correctly or damaged.	Ensure dirt tank is securely latched; Reinstall filter correctly or replace if damaged.

7. TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Bennett Read
Model Number	HVC118
Product Type	2-in-1 Upright Hand Vacuum Cleaner
Colour	Multicolor
Power Source	Corded Electric
Item Weight	3.06 kg
Product Dimensions	56L x 28W x 16H centimetres
Special Features	Lightweight, Thermal Cut-off, Cyclonic Filtration

Feature	Detail
Included Components	Main Unit, Extension Wand, Multi-Surface Floor Nozzle, Crevice Nozzle, Upholstery Tool, Wall-Mount Bracket

8. WARRANTY INFORMATION

This product is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for any warranty claims.

For detailed warranty information or to register your product, please visit the official Bennett Read website or contact their customer support.

9. CUSTOMER SUPPORT

Should you require further assistance, have questions not covered in this manual, or need to report a fault, please contact Bennett Read customer support.

Please have your model number (HVC118) and proof of purchase ready when contacting support to ensure a swift resolution.

For the most up-to-date contact information, please visit the official Bennett Read website.

© 2025 Bennett Read. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question