

[Manuals.plus](#) /

› [CORE](#) /

› CORE 10 Person Cabin Tent User Manual

CORE 40034

CORE 10 Person Cabin Tent User Manual

Model: 40034

INTRODUCTION

This user manual provides essential information for the proper setup, operation, and maintenance of your CORE 10 Person Cabin Tent. Designed for family camping and outdoor adventures, this tent offers a spacious interior with a nearly straight-wall design for ample standing room and features H2O Block Technology for weather protection. Please read this manual thoroughly before first use to ensure a safe and enjoyable experience.

INCLUDED COMPONENTS

Before beginning assembly, ensure all components are present:

- Tent Body
- Rainfly
- Poles (Alloy Steel)
- Stakes (18 Steel Stakes)
- Guylines (18 Guylines)
- Room Divider
- Carry Bag



Image: All components of the CORE 10 Person Cabin Tent, including the tent body, rainfly, poles, stakes, guylines, room divider, and carry bag.

SETUP INSTRUCTIONS

Follow these steps for quick and easy tent setup:

1. **Unpack and Lay Out:** Choose a flat, clear area. Unpack the tent and lay the tent body flat on the ground, spreading it out completely.
2. **Assemble Poles:** Connect the pole sections. Insert the poles into the sleeves or attach them to the clips on the tent body. The tent features a free-standing installation type.
3. **Raise the Tent:** Lift the tent structure by pushing up the poles. Secure the pole ends into the corner grommets.
4. **Stake Down:** Secure the tent to the ground using the provided 18 steel stakes. Ensure all corners and guylines are properly anchored for stability, especially in windy conditions.
5. **Attach Rainfly:** Drape the rainfly over the tent, aligning it with the doors and windows. Secure the rainfly to the tent

poles and stake out any additional guylines. The rainfly is water-resistant with a 1200mm rating.

6. **Install Room Divider (Optional):** If desired, attach the removable room divider inside the tent to create two separate spaces for privacy.



Image: The CORE 10 Person Cabin Tent fully set up, showing its spacious cabin design and rainfly.

OPERATING THE TENT

The CORE 10 Person Cabin Tent is designed for comfort and convenience during your camping trips.

Ventilation

The tent features adjustable ventilation. Lower vents allow cool air to enter from the ground, while the mesh ceiling facilitates the escape of hot air, maintaining comfortable airflow. Fully zipped windows can be opened for additional ventilation or closed during rain.



ADJUSTABLE VENTILATION



ELECTRICAL PORT



STORAGE POCKETS



REMOVABLE ROOM DIVIDER

Image: Detail of the tent's adjustable lower vent, designed to draw in cool air.

Interior Features

- **Storage Pockets:** Keep small items and accessories organized and off the floor with integrated storage pockets.
- **Gear Loft:** An overhead gear loft provides additional storage space for lightweight items.
- **Electrical Port:** A convenient electrical port allows for easy access to power inside the tent (extension cord not included).
- **Room Divider:** The removable room divider can be used to create two distinct living or sleeping areas within the tent.



Image: Interior view of the tent showing ample space, a chair, and various camping gear, highlighting the straight-wall design.



Image: A composite image showing close-ups of the tent's interior features: adjustable ventilation, electrical port, storage pockets, and the removable room divider.

MAINTENANCE AND CARE

Proper care will extend the life of your tent:

- **Cleaning:** Hand wash the tent with mild soap and water. Do not use harsh detergents or machine wash.
- **Drying:** Always ensure the tent is completely dry before packing it away to prevent mildew and odor.
- **Storage:** Store the tent in its carry bag in a cool, dry place away from direct sunlight.
- **Inspection:** Periodically inspect poles, stakes, zippers, and fabric for any damage and repair as needed.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tent not standing upright/stable	Poles not fully assembled or secured; insufficient staking.	Ensure all pole sections are fully connected and inserted into grommets/sleeves. Stake down all corners and guylines firmly.
Water leakage	Rainfly not properly installed; damaged seams or fabric.	Ensure rainfly is correctly positioned and secured. Check for tears or worn seams; apply seam sealer if necessary.
Condensation inside tent	Poor ventilation.	Open lower vents and windows (if weather permits) to increase airflow.

SPECIFICATIONS

Feature	Detail
Model Number	40034
Occupancy	10 Person
Product Dimensions (L x W x H)	168"L x 120"W x 86"H (14 ft x 10 ft x 7.2 ft)
Floor Area	140 Square Feet
Center Height	86 Inches (7.2 ft)
Item Weight	12.9 Kilograms (approx. 28.4 lbs)
Water Resistance Technology	1200mm H2O Block Technology
Material	Polyester (Tent Fabric), Polyethylene (Base Material), Alloy Steel (Poles), Steel (Stakes)
Number of Doors	2
Number of Rooms	2 (with removable divider)
Assembly Required	Yes



Image: A diagram illustrating the dimensions of the CORE 10 Person Cabin Tent, including its length (168 inches), width (120 inches), and height (86 inches).

WARRANTY INFORMATION

The CORE 10 Person Cabin Tent comes with a **1-Year Limited Warranty**. This warranty covers defects in materials and workmanship under normal use. For specific details regarding warranty claims and coverage, please refer to the official CORE website or contact customer support.

SUPPORT AND CONTACT

For further assistance, questions, or to report issues, please contact CORE customer support:

- **Official Website:** Visit the [CORE Store on Amazon](#) for product information and support resources.
- **User Manual (PDF):** A downloadable PDF version of the user manual is available [here](#).

© 2024 CORE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DSQSJ3FY>

More documents and user manuals: <https://manuals.plus/>