

[Manuals.plus](#) /
› [Deerma](#) /
› Multifunctional Cooking Blender NU500W User Manual

Deerma NU500W

Deerma Multifunctional Cooking Blender NU500W User Manual

Model: NU500W

PRODUCT OVERVIEW

The Deerma Multifunctional Cooking Blender NU500W is designed for versatile food preparation, offering a range of functions from blending to cooking. Its compact design and advanced features make it suitable for daily use.





Front view of the Deerma Multifunctional Cooking Blender NU500W, showcasing its white body, clear blending jar, and soundproof shield.

Soft Voice Blending
Enjoy Delicate Cuisine



The blender in operation, preparing a beverage, highlighting its quiet blending capability.

24-hour Smart Preset Sleep in comfortably

① Put in the ingredients
at 21:00 and one click
for preset

② Finish cooking the yummy
food at 7:00 and one click
for heat preservation



The blender filled with various fruits, demonstrating its capability for making fruit juices.

Full Encirclement of Light Sound Hood
Low decibel, not easy to disturb
the repose



* Light sound hood is optional, rather than a standard equipped component

Illustration of the 24-hour smart preset function, showing ingredients loaded for delayed start.

Five Menu Functions

Enjoy delicious food recipes constantly



The blender enclosed within its soundproof shield, emphasizing its low noise operation.

Capacity for 2-3 Persons
Drink your fill,
sufficient to share



The blender pouring a prepared beverage into multiple glasses, illustrating its 2-3 person capacity.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the motor base in water or other liquids.
- Ensure the lid is securely closed before operation.
- Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the blender.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning

use of the appliance by a person responsible for their safety.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging materials for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the blending jar, lid, and blades with warm soapy water. Rinse thoroughly and dry. Wipe the motor base with a damp cloth.
3. **Assembly:**
 - Place the motor base on a stable, flat, and dry surface.
 - Ensure the blending jar is properly seated on the motor base.
 - Place the lid securely on the blending jar.
 - If using, position the soundproof shield over the blender unit.
4. **Power Connection:** Plug the power cord into a standard 220V/50HZ electrical outlet.

OPERATING INSTRUCTIONS

General Operation

1. **Add Ingredients:** Place desired ingredients into the blending jar. Do not exceed the maximum fill lines indicated on the jar for hot or cold liquids.
2. **Secure Lid:** Ensure the lid is firmly in place.
3. **Select Function:** Use the touch control panel to select one of the five menu functions. The intelligent OLED dynamic display will guide you.
4. **Start:** Press the start button to begin the selected program.
5. **Completion:** The blender will automatically stop when the program is complete.

Five Menu Functions

The NU500W offers specialized programs for various recipes:

- **Soymilk (Dry Beans / Wet Beans):** For preparing fresh soymilk from soaked or unsoaked soybeans.
- **Rice Cereal:** Ideal for making smooth and nutritious rice cereal.
- **Non-staple Food:** Suitable for preparing baby food or other soft, blended meals.
- **Corn Juice:** For blending corn into a smooth, drinkable juice.
- **Fruit Juice:** Perfect for creating fresh fruit juices and smoothies.

24-Hour Smart Preset Function

This feature allows you to set a delayed start time for your blending program:

1. Add ingredients to the blending jar.
2. Select your desired menu function.
3. Activate the preset function and set the desired start time using the control panel. The blender will automatically begin operation at the set time.

Heat Preservation Function

After certain cooking programs, the blender can maintain the temperature of the contents for up to 8 hours.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your blender.

- Unplug:** Always unplug the blender from the power outlet before cleaning.
- Self-Cleaning:** The blender features a 1-minute high-speed self-cleaning function. Add a small amount of water and a drop of dish soap to the jar, select the self-clean program, and run.
- Manual Cleaning:**
 - Blending Jar and Lid:** Wash with warm soapy water using a non-abrasive sponge. Rinse thoroughly and air dry. Be cautious around the blades.
 - Motor Base:** Wipe the exterior of the motor base with a damp cloth. Do not immerse the motor base in water.
 - Soundproof Shield:** Wipe with a damp cloth and dry.
- Storage:** Store the blender in a clean, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outage; jar not properly seated; lid not closed.	Check power connection; ensure jar and lid are correctly assembled; check household circuit breaker.
Motor stops during operation.	Overload protection activated; ingredients too thick.	Unplug, remove some ingredients, add liquid, wait 15 minutes for motor to cool, then restart.
Loud noise during operation.	Ingredients too hard; improper assembly; soundproof shield not used.	Ensure ingredients are suitable; re-assemble jar and lid correctly; ensure soundproof shield is in place.
Food not blending smoothly.	Insufficient liquid; too many ingredients; dull blades.	Add more liquid; reduce ingredient quantity; contact customer support if blades are dull.

SPECIFICATIONS

Feature	Detail
Model Number	NU500W
Rated Voltage	220V/50HZ
Heating Power	400W
Motor Power	130W
Rated Capacity	0.45-1L (800 Milliliters)
Blades	12 Stainless Steel Blades

Feature	Detail
Noise Reduction	Six bass noise reduction, 48dB ultra-low noise
Display	Intelligent OLED Dynamic Display
Preset Function	24-hour Smart Preset
Heat Preservation	8 hours
Self-Cleaning	1-minute high-speed self-cleaning
Material	4MM thickened high borosilicate glass (jar), Plastic (body)
Dimensions	19D x 19W x 34H centimeters
Item Weight	2 Kilograms

WARRANTY AND SUPPORT

Deerma products are manufactured to high quality standards. For warranty information and customer support, please refer to the official Deerma website or contact your local distributor.

For further assistance, you may visit the official Deerma store:[Deerma Official Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DSSX268N>

More documents and user manuals: <https://manuals.plus/>