

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [OLEVS](#) /
- › [OLEVS Men's Quartz Analog Watch Model 3675 Instruction Manual](#)

OLEVS 3675

OLEVS Men's Quartz Analog Watch Model 3675 Instruction Manual

Model: 3675 (GJ-OS-G3675-JHUI)

1. PRODUCT OVERVIEW

Thank you for choosing the OLEVS Men's Quartz Analog Watch Model 3675. This timepiece combines classic design with modern functionality, featuring a durable stainless steel construction, precise quartz movement, and multiple useful complications.

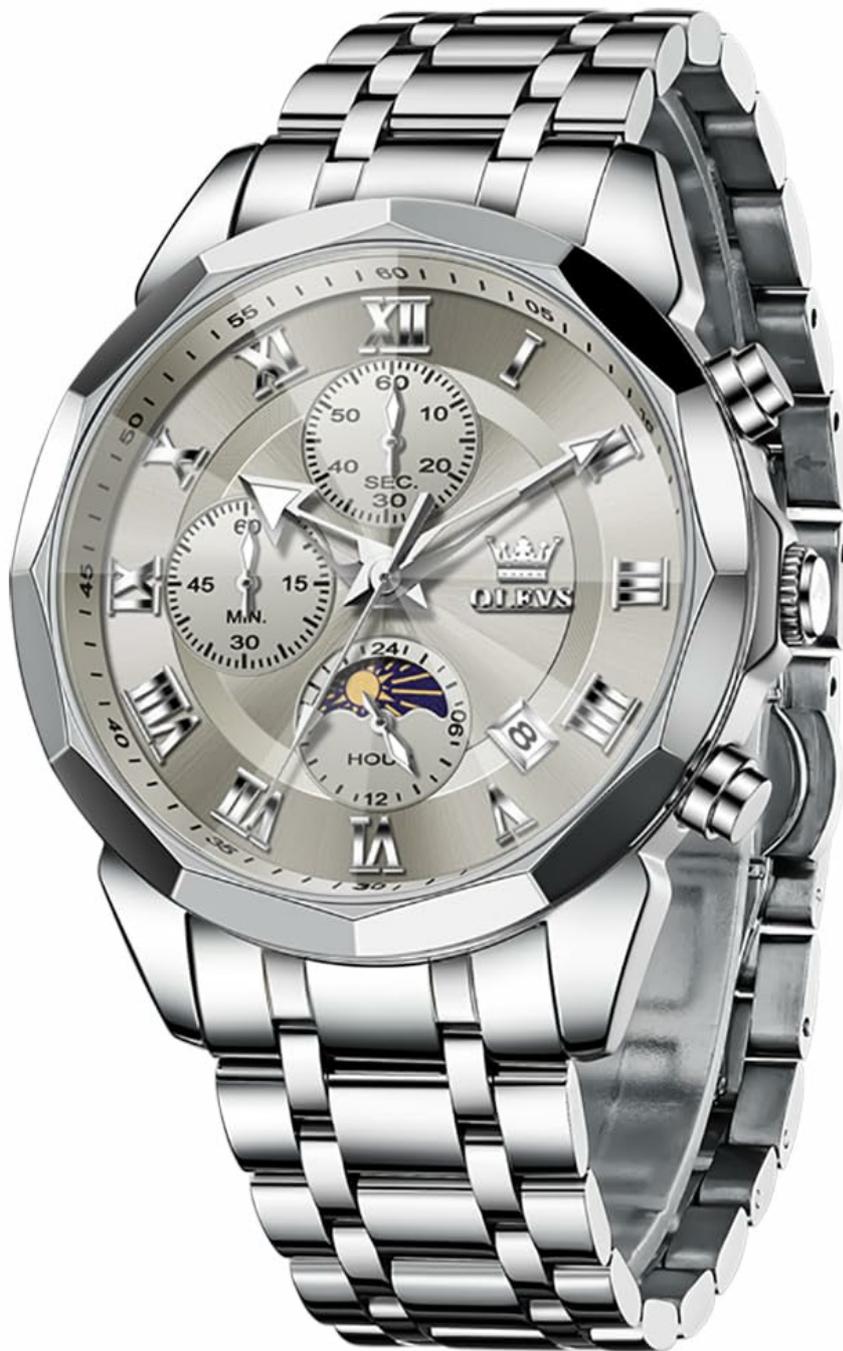


Image: OLEVS Men's Quartz Analog Watch Model 3675, featuring a silver band and a grey dial with Roman numerals and sub-dials.

Key features of your OLEVS watch include:

- **Quartz Movement:** Ensures accurate timekeeping.
- **Stainless Steel Construction:** Provides durability and a sophisticated appearance.
- **Water Resistance:** Rated for 30 meters (98 feet), suitable for daily use but not for swimming or diving.
- **Luminous Hands and Markers:** Allows for easy readability in low-light conditions.
- **Date Display:** Convenient calendar window.
- **Chronograph Function:** Measures elapsed time with precision.
- **Moon Phase Indicator:** Displays the current phase of the moon.
- **Hardlex Crystal:** Offers enhanced scratch resistance.

2. SETUP AND INITIAL ADJUSTMENT

Before wearing your watch, please follow these steps to set the time and date, and adjust the band if necessary.

2.1 Setting the Time

1. Pull the crown (B) out to position 2.
2. Rotate the crown to move the hour and minute hands clockwise until the correct time is displayed. Ensure the AM/PM is correctly set, especially when setting the date.
3. Push the crown back to position 0 to start the watch.



Image: Close-up of the watch dial highlighting the chronograph sub-dials, moon phase indicator, and calendar window. The crown (B) is used for time and date adjustments.

2.2 Setting the Date

1. Pull the crown (B) out to position 1.
2. Rotate the crown clockwise or counter-clockwise to set the correct date in the date window (D).
3. Once the date is set, push the crown back to position 0.
4. *Note:* Avoid setting the date between 9 PM and 3 AM, as this is when the watch's internal mechanism is engaged in changing the date, and manual adjustment can cause damage. If you need to set the date during this period, first set the time outside this range, adjust the date, then reset the time.

2.3 Adjusting the Watch Band

The stainless steel band features a push-button hidden clasp (E). For initial sizing, it is recommended to have the watch band adjusted by a professional jeweler to ensure a comfortable and secure fit. Links may need to be added or removed.



Image: A four-panel image showing the watch's 30M waterproof rating, high hardness coated mirror, textured strap, and luminous function in the dark.

3. OPERATING THE WATCH FUNCTIONS

3.1 Chronograph Function

The watch is equipped with a chronograph for measuring elapsed time.

1. **Start/Stop:** Press button (A) to start the chronograph. Press (A) again to stop it.
2. **Reset:** While the chronograph is stopped, press button (C) to reset all chronograph hands to their zero positions.
3. The sub-dials (F, G) indicate minutes and seconds for the chronograph.

3.2 Moon Phase Indicator

The moon phase indicator (H) automatically advances to show the current phase of the moon. This function is typically set during the initial time and date setup and does not require frequent manual adjustment.

3.3 Luminous Display

The hands and hour markers of your OLEVS watch are coated with a luminous material. After exposure to light, they will glow in the dark, allowing for easy time reading at night. The intensity and duration of the glow depend on the exposure time and intensity of light.



Image: The watch dial displaying its luminous function, with hands and markers glowing in low light conditions.

4. MAINTENANCE AND CARE

Proper care will ensure the longevity and performance of your OLEVS watch.

4.1 Water Resistance

Your watch is water-resistant to 30 meters (98 feet). This means it is suitable for daily use, such as hand washing, rain, or accidental splashes. However, it is **not** suitable for showering, bathing, swimming, diving, or any activities involving hot water or steam, as this can compromise the seals.

- Ensure the crown is fully pushed in to position 0 before any contact with water.
- Do not operate the crown or pushers while the watch is wet or submerged.



Image: The OLEVS watch submerged in a glass of water, illustrating its 30-meter water resistance.

4.2 Cleaning

Wipe the watch case and band regularly with a soft, dry cloth to remove dirt, sweat, and moisture. For stainless steel bands, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners or abrasive materials.

4.3 Battery Replacement

The watch is powered by a quartz battery. When the watch stops or the second hand begins to skip, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure the water resistance seal is maintained.

4.4 Storage

When not wearing your watch, store it in a cool, dry place, away from direct sunlight, extreme temperatures, and strong magnetic fields.

5. TROUBLESHOOTING

If you encounter any issues with your OLEVS watch, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Watch not running	Battery depleted; Crown not pushed in.	Replace battery (professional service recommended); Push crown fully into position 0.
Incorrect time/date	Time/date not set correctly; Accidental crown movement.	Refer to Section 2.1 and 2.2 to reset time and date.
Condensation inside crystal	Exposure to extreme temperature changes; Compromised water resistance.	Seek professional inspection immediately to prevent damage to the movement.
Chronograph hands not resetting to zero	Requires calibration.	Consult a professional watch repair service for calibration.

6. SPECIFICATIONS

Feature	Detail
Brand	OLEVS
Model Number	GJ-OS-G3675-JHUI
Movement Type	Quartz
Display Type	Analog
Case Material	Stainless Steel
Band Material	Stainless Steel
Water Resistance Depth	30 Meters (98 Feet)
Case Diameter	43 Millimeters
Case Thickness	10 Millimeters
Band Width	20 Millimeters

Feature	Detail
Band Length	22 Centimeters
Crystal Material	Hardlex
Clasp Type	Push Button Hidden Clasp
Special Features	Luminous, Date Display, Chronograph, Moon Phase Indicator

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Your OLEVS watch comes with a manufacturer's warranty. Please refer to the warranty card included in your watch packaging for specific terms, conditions, and duration. The warranty typically covers manufacturing defects but does not cover damage resulting from improper use, accidents, or unauthorized repairs.

7.2 Customer Support

For any questions, concerns, or service requests not covered in this manual, please contact OLEVS customer support or the authorized retailer from whom you purchased the watch. Keep your purchase receipt and warranty card handy for any service inquiries.

8. PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video showcasing the OLEVS Men's Watch Model 3675, highlighting its design, features, and various color options. This video demonstrates the watch's aesthetic appeal and functionality.