

## LIVOO DOC316

# LIVOO DOC316 Air Fryer Instruction Manual

Model: DOC316

## INTRODUCTION

Thank you for purchasing the LIVOO DOC316 Hot Air Fryer. This appliance is designed to cook a variety of foods using hot air circulation, offering a healthier alternative to traditional deep frying. Please read this manual carefully before use to ensure safe and efficient operation. Keep this manual for future reference.

## Important Safety Instructions

- Always place the appliance on a stable, heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Keep children and pets away from the appliance during operation.
- Do not block the air inlet or outlet vents during operation.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions.
- The appliance surfaces become hot during use. Use oven mitts when handling hot components.
- Do not place anything on top of the appliance.
- This appliance is for household use only.

## PRODUCT OVERVIEW

The LIVOO DOC316 Air Fryer features a dual-basket design, allowing for independent cooking of different foods. Familiarize yourself with the components:

- **Main Unit:** Houses the heating element and control panel.
- **Control Panel:** Digital touch screen for setting temperature, time, and cooking programs.
- **Cooking Baskets (x2):** Removable baskets with non-stick coating for holding food. Each has a capacity of 4.5 liters.
- **Crisper Plates (x2):** Inserted into the cooking baskets for optimal air circulation.
- **Handles:** Heat-resistant handles for safe removal of baskets.

- **Air Inlet/Outlet Vents:** For proper air circulation during cooking.
- **Transparent Windows:** Located on each basket to monitor cooking progress.



Image: The LIVOOC DOC316 Air Fryer with its two 4.5-liter cooking baskets extended, revealing the crisper plates. This view highlights the dual-basket design and the digital control panel.

## SETUP AND FIRST USE

1. **Unpacking:** Remove all packaging materials and stickers from the appliance.
2. **Cleaning:** Wash the cooking baskets and crisper plates with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface, ensuring there is at least 10 cm (4 inches) of free space around the back and sides for proper ventilation. Do not place it against a wall or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **Initial Run (Optional but Recommended):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight odor may be present, which is normal and will dissipate.

## OPERATING INSTRUCTIONS

### General Operation

1. **Prepare Food:** Place your ingredients into the cooking basket, ensuring not to overfill. For best results, food should not exceed the MAX fill line.
2. **Insert Basket:** Slide the cooking basket firmly back into the main unit until it clicks into place.
3. **Power On:** Press the power button on the digital touch screen.
4. **Select Program:** Choose one of the 7 preset cooking programs (Fries, Red Meat, Pizza, White Meat, Dessert, Seafood, Defrost) by tapping the corresponding icon.
5. **Adjust Settings (Manual Mode):** Alternatively, you can manually set the temperature and time.
  - **Temperature:** Adjust from 80°C to 200°C in 5°C increments using the temperature controls.

- **Time:** Set the timer up to 60 minutes in 1-minute increments using the time controls.
6. **Start Cooking:** Press the start/pause button to begin the cooking cycle. The internal light in the basket will illuminate, allowing you to monitor progress through the transparent window.
  7. **Shake/Flip Food:** For even cooking, some foods may require shaking or flipping halfway through the cooking time. The appliance may beep to remind you. Carefully pull out the basket, shake/flip, and reinsert.
  8. **End of Cooking:** The appliance will beep when the cooking time is complete and automatically shut off. Carefully remove the basket using the heat-resistant handle.

## Dual Basket Functionality and SYNC Feature

The LIVOO DOC316 allows for independent cooking in each of its two 4.5-liter baskets. You can set different programs, temperatures, and times for each basket.

- **Independent Cooking:** To cook different items, simply select the desired basket (left or right) on the control panel, then set its specific program, temperature, and time.
- **SYNC Function:** The "SYNC" function is designed to synchronize the completion times of both baskets. If you have two different items with different cooking times, activate SYNC, and the air fryer will adjust the start times of each basket so they finish cooking simultaneously.

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Cleaning Baskets and Crisper Plates:**
  - Wash the baskets and crisper plates with hot water, dish soap, and a non-abrasive sponge.
  - The baskets have a non-stick coating; avoid using metal utensils or abrasive cleaning materials.
  - **Note:** The product specifications state that the item is **NOT dishwasher safe**. Hand wash only.
  - For stubborn food residue, soak the baskets in warm, soapy water for about 10 minutes before cleaning.
3. **Cleaning the Main Unit:**
  - Wipe the exterior of the air fryer with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
  - Clean the interior of the appliance with a damp cloth and mild detergent if necessary. Ensure it is completely dry before storage or next use.
  - Never immerse the main unit in water or any other liquid.
4. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

## TROUBLESHOOTING

If you encounter issues with your LIVOO DOC316 Air Fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in. Power outlet malfunction. Basket not inserted correctly.	Ensure the power cord is securely plugged into a grounded outlet. Test the outlet with another appliance. Push the cooking basket firmly into the main unit until it clicks.

Problem	Possible Cause	Solution
Food is not cooked evenly.	Basket is overloaded. Food not shaken/flipped. Incorrect temperature/time.	Do not overfill the basket; cook in smaller batches. Shake or flip food halfway through cooking. Adjust temperature and time according to recipe recommendations.
White smoke coming from the appliance.	Greasy food residue in the basket. Excess oil/fat dripping onto the heating element.	Clean the basket and crisper plate thoroughly after each use. Remove excess oil from food before air frying.
Appliance emits a burning smell.	Food residue on heating element. First use odor.	Unplug and allow to cool. Clean the interior and heating element carefully. This is normal for the first few uses and will dissipate.

## SPECIFICATIONS

Technical details for the LIVOO DOC316 Air Fryer:

<b>Model Name</b>	DOC316
<b>Brand</b>	LIVOO
<b>Capacity</b>	9 Liters (2 x 4.5 Liters)
<b>Power Output</b>	2400 Watts
<b>Temperature Range</b>	80°C - 200°C (176°F - 392°F)
<b>Timer</b>	Up to 60 minutes
<b>Control Method</b>	Touch Screen
<b>Color</b>	Black
<b>Item Weight</b>	7.5 Kilograms
<b>Non-stick Coating</b>	Yes
<b>Dishwasher Safe</b>	No



Image: The LIVOOC DOC316 Air Fryer showing its approximate dimensions: 38.5 cm in width, 31.5 cm in depth, and 38.5 cm in height. This provides a visual reference for its physical size.

## WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the warranty card included with your purchase or contact LIVOOC customer support directly. Keep your proof of purchase for warranty claims.

If you require technical assistance or have questions not covered in this manual, please contact LIVOOC customer service through their official website or the contact information provided in your product packaging.