

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Outsunny](#) /

> [Outsunny Outdoor Rug Instruction Manual - Model 84J-061V02GY](#)

Outsunny 84J-061V02GY

Outsunny Outdoor Rug Instruction Manual

MODEL: 84J-061V02GY

[Introduction](#)

[Features](#)

[Safety](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

[Sup](#)

1. Introduction

Thank you for choosing the Outsunny Outdoor Rug. This manual provides essential information for the proper setup, operation, and maintenance of your new rug. Please read it thoroughly before use and retain it for future reference.



Image: The Outsunny Outdoor Rug, 8'11" x 17'11", featuring a black and gray geometric pattern, laid out on a patio.

2. Product Features

- **Reversible Design:** The rug features a double-sided design with different color schemes, offering versatility for various outdoor settings.
- **Easy Maintenance:** Constructed from 100% polypropylene with a protective coating, the rug is resistant to fading and sun damage. It can be easily cleaned by rinsing with water, sweeping, or wiping with a damp cloth, then air-dried.
- **Portable:** Designed to be lightweight and compactly foldable, it includes a carry bag for convenient transport and storage. Ideal for RV camping, beach trips, picnics, or backyard use.
- **Secure Placement:** Equipped with four corner loop straps to allow for staking (stakes not included), ensuring the rug remains in place even in windy conditions.

3. Safety Information

WARNING: This outdoor area rug is not fireproof. To prevent fire hazards, keep the rug away from open flames, embers, and ashes. Ensure adequate distance from heat sources such as fire pits, grills, or outdoor heaters.

4. Setup

1. **Unpack the Rug:** Carefully remove the rug from its carry bag.
2. **Unfold and Position:** Lay the rug flat on your desired outdoor surface. Allow some time for any creases from folding to relax and flatten.
3. **Secure (Optional):** If using in windy conditions or for prolonged outdoor placement, utilize the corner loop straps to secure the rug with ground stakes (not included).



Image: The rug is shown being folded and stored in its compact carry bag, highlighting its portability.

5. Operating Instructions

The Outsunny Outdoor Rug is designed for straightforward use in various outdoor environments.

- **Reversible Use:** To change the aesthetic, simply flip the rug over to display the alternative color scheme.

REVERSIBLE DESIGN

You can choose from different main color schemes

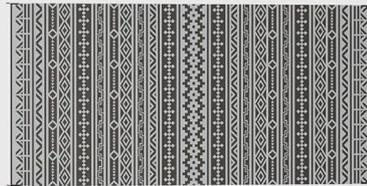


Image: A visual representation of the rug's reversible design, showcasing two distinct patterns on either side.

- **Placement:** Position the rug on patios, decks, lawns, or inside RV awnings. Ensure the surface beneath is relatively flat and clear of sharp objects to prevent damage.
- **Staking:** For added stability, especially in windy conditions, insert ground stakes (not provided) through the corner loops.

THOUGHTFUL DETAILS



Sturdy Edging

Corner Loops
(Ground stakes
are not included)

Image: A close-up view of the rug's sturdy edging and a corner loop strap, demonstrating where stakes can be inserted for secure placement.

6. Maintenance

Regular cleaning and proper storage will extend the life of your outdoor rug.

- **Routine Cleaning:** Sweep or vacuum the rug regularly to remove loose dirt and debris.
- **Spot Cleaning:** For spills or stains, wipe with a damp cloth. For more stubborn marks, a mild soap solution can be used, followed by rinsing with water.
- **Rinsing:** The rug can be rinsed with a garden hose. Ensure all soap residue is removed.
- **Drying:** Always allow the rug to air dry completely before folding or storing to prevent mildew.
- **Storage:** When not in use, especially during off-seasons, fold the rug compactly and store it in its provided carry bag in a dry, protected area.



FOR OUTDOOR USE



Fade-resistant



Waterproof



Anti-UV



Durable

Image: A person cleaning the outdoor rug with a hose, illustrating its waterproof and easy-to-clean properties.

7. Troubleshooting

Problem	Possible Cause	Solution
Rug not lying flat	Creases from packaging/folding	Allow time for the rug to relax in warm weather. Placing heavy objects on the corners can help.
Minor stains/dirt	Normal outdoor use	Wipe with a damp cloth or rinse with water. Use mild soap for tougher stains.
Rug shifting in wind	Insufficient anchoring	Use ground stakes (not included) through the corner loops to secure the rug.

8. Specifications

Brand: Outsunny

Model Name: Outdoor Rug

Model Number: 84J-061V02GY

Size: 8'11" x 17'11" (Rectangular) / 215.7"L x 107.9"W

Color: Black and Gray Geometric Wall

Material: 100% Polypropylene

Weave Type: Machine Made

Pile Height: Low Pile

Item Weight: 11 Pounds

Special Features: Foldable, Portable, Reversible design, UV Protected, Water Resistant, Stain Resistant

Indoor/Outdoor Usage: Outdoor

Product Care Instructions: Wipe Clean

UPC: 196393233153

9. Warranty

This Outsunny Outdoor Rug comes with a **Limited Warranty**. For specific details regarding warranty coverage, terms, and conditions, please refer to the warranty documentation included with your purchase or contact Outsunny customer support directly.

10. Customer Support

Should you have any questions, require assistance, or need to report an issue with your Outsunny Outdoor Rug, please contact our customer support team. Visit the official Outsunny website for contact information, FAQs, and additional resources.

Online: [Outsunny Store on Amazon](#)