

AN-20250111-01

Generic Corded Stick Vacuum Cleaner and Mop User Manual

Model: AN-20250111-01

Brand: Generic

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Retain this manual for future reference.

- This appliance is for indoor household use only. Do not use outdoors or on wet surfaces other than for mopping as instructed.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Always unplug the appliance from the electrical outlet before cleaning or performing maintenance.
- Do not handle the plug or appliance with wet hands.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Store the appliance indoors in a cool, dry area.

2. PRODUCT OVERVIEW

The Generic Corded Stick Vacuum Cleaner and Mop is a versatile 2-in-1 cleaning solution designed for hard floors. It features 18000Pa suction power, a 1.2L dust collection box, and an integrated water tank for simultaneous vacuuming and mopping.

Handheld / Pusher Corded Vacuum Cleaners
Vacuuming and Mopping Two in One
5 Meters/ 16.4 Ft Extra Long Power Cord

Vacuum Mop All in One

HEPA Filter Cartridge

With Water Tank

18000pa Powerful Suction Power



Image 1: The Corded Stick Vacuum Cleaner and Mop in action, demonstrating its ability to clean various floor types.

Clean up Without Dead Ends One Step Cleaning

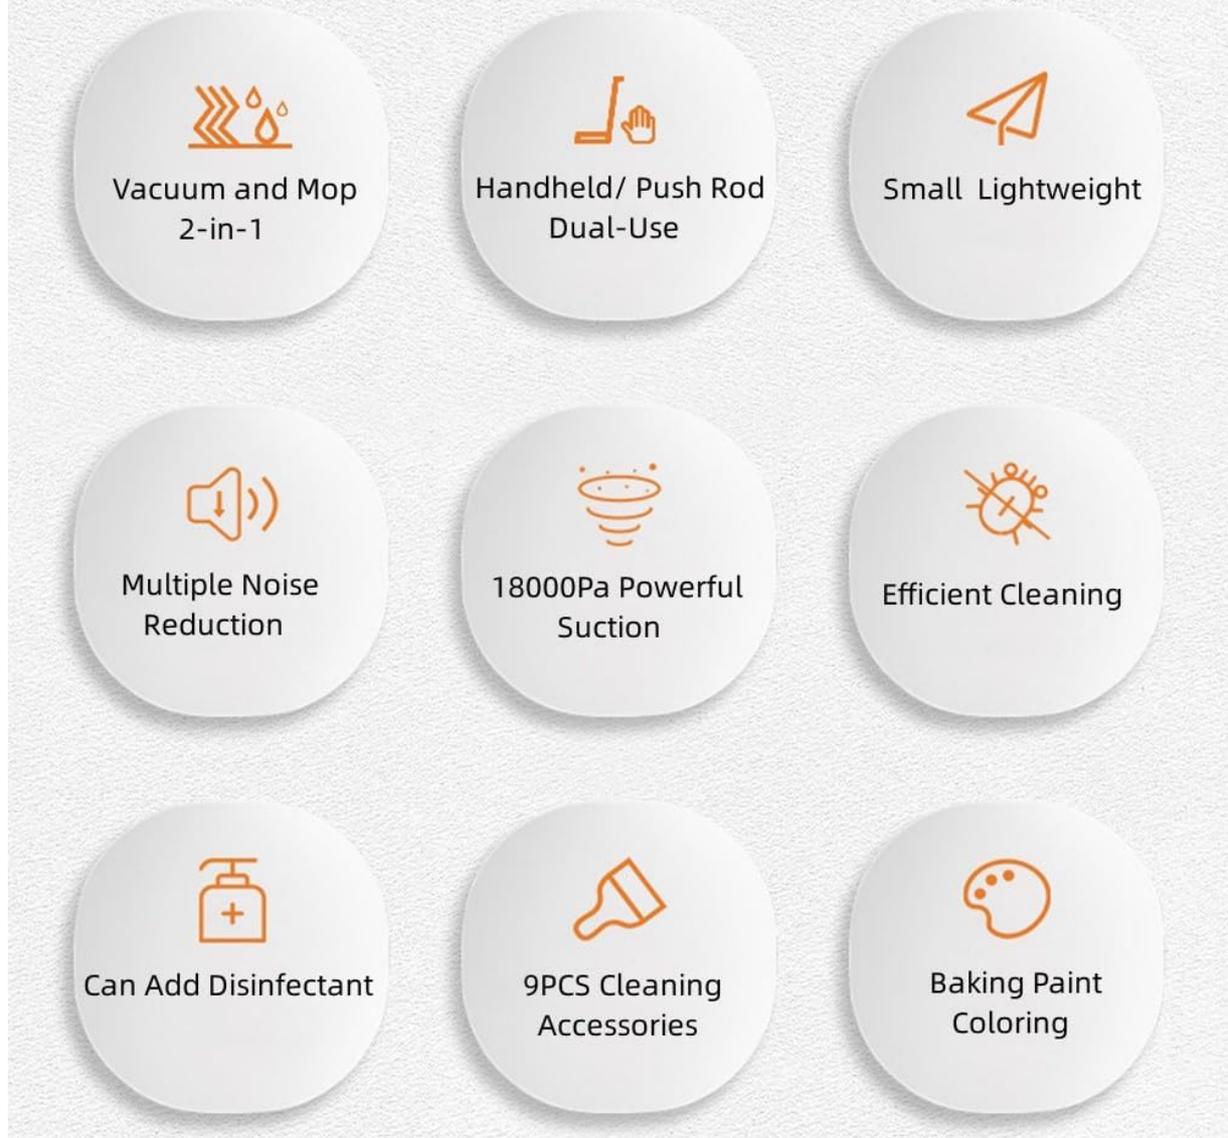


Image 2: Overview of the vacuum cleaner's key features and benefits.

3. PACKAGE CONTENTS

Carefully unpack all components and check against the list below. If any items are missing or damaged, contact customer support.

- Host body (main vacuum unit)
- Extension Tube
- Small Brush suction nozzle
- Long Flat suction nozzle
- Floor brush (with water tank)
- Cleaning Brush
- Rag (for mopping)
- User Manual

4. ASSEMBLY

Follow these steps to assemble your vacuum cleaner:

1. **Attach the Extension Tube:** Insert the extension tube into the main host body until it clicks securely into place.
2. **Connect the Floor Brush:** Attach the floor brush (with the integrated water tank) to the other end of the extension tube. Ensure it is firmly connected.
3. **Install Mopping Rag:** Secure the provided mopping rag to the bottom of the floor brush.
4. **Optional Attachments:** For handheld use or specific cleaning tasks, you can directly attach the Small Brush suction nozzle or Long Flat suction nozzle to the main host body without the extension tube.



Image 3: The vacuum cleaner's snap design allows for easy assembly and disassembly.

5. OPERATION

5.1 Powering On/Off

Plug the 16.4 ft (5 meter) power cord into a suitable electrical outlet. Press the power button located on the handle to turn the vacuum on or off.

5.2 Vacuuming

For dry vacuuming, ensure the water tank is empty or removed if preferred. Guide the floor brush over the desired surface. The 18000Pa suction effectively picks up dust, debris, and pet hair from hard floors.

5.3 Mopping Function

To use the mopping function:

1. **Fill Water Tank:** Open the water tank cap on the floor brush and fill it with clean water. You may add a small amount of disinfectant if desired.
2. **Attach Rag:** Ensure the mopping rag is securely attached to the bottom of the floor brush.
3. **Start Cleaning:** As you vacuum, the self-penetration technology in the water tank will keep the rag evenly moist, allowing for simultaneous vacuuming and wet mopping.

Vacuuming and Mopping at the Same Time One Step Cleaning

Large Capacity Water Tank Can Add Water or Disinfectant Solution, Make Cleaning More Thorough. Self-Penetrating Technology Will Evenly Keep the Mopping Wipes Wet at All Times, Making It Easier for You to Mop the Floor



Image 4: Filling the water tank for the mopping function.

5.4 Using Attachments

The vacuum comes with specialized nozzles for different cleaning needs:

- **Long Flat Suction Nozzle:** Ideal for reaching deep into narrow gaps, crevices, and corners.
- **Small Brush Suction Nozzle:** Use for dusting surfaces, cleaning upholstery, or removing stubborn dirt from textured areas.

These attachments can be connected directly to the main host body for handheld use or to the extension tube.



Image 5: Demonstrating the use of the flat suction nozzle and brush nozzle for detailed cleaning.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

6.1 Emptying the Dust Collection Box

The transparent 1.2L dust collection box should be emptied regularly, especially when the MAX line is reached. To empty:

1. Ensure the vacuum is unplugged.
2. Press the release button to detach the dust collection box from the main unit.
3. Open the bottom lid of the dust box and empty contents into a waste bin.
4. Close the lid and reattach the dust box to the main unit.

6.2 Cleaning the HEPA Filter

The HEPA filter is washable and recyclable. Clean it periodically to maintain suction power:

1. Unplug the vacuum and remove the dust collection box.
2. Carefully remove the HEPA filter from inside the dust box.
3. Rinse the filter under running water until clean. Do not use detergent.
4. Allow the filter to air dry completely for at least 24 hours before reinserting. Do not use a wet filter.

6.3 Cleaning the Mopping Rag and Water Tank

- Remove the mopping rag after each use and wash it with water. Allow it to air dry.
- Empty any remaining water from the water tank and rinse it thoroughly. Allow it to air dry before storage.

7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Not plugged in; Power outlet fault; Power button not pressed	Check power cord connection; Try a different outlet; Press power button firmly
Low suction power	Dust box full; Filter clogged; Obstruction in nozzle/hose	Empty dust box; Clean HEPA filter; Remove any blockages
Mopping function not effective	Water tank empty; Rag not properly attached or dirty	Refill water tank; Reattach or clean mopping rag
Unusual noise	Obstruction in brush head or hose; Loose parts	Check for and remove obstructions; Ensure all parts are securely assembled

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

- **Model Name:** Household Quiet Deep Clean Vacuum Cleaner and Mop in One
- **Model Number:** AN-20250111-01
- **Brand:** Generic
- **Power Source:** Corded Electric
- **Wattage:** 400 watts
- **Suction Power:** 18000Pa
- **Dust Collection Box Capacity:** 1.2 Liters
- **Filter Type:** HEPA Filter
- **Special Features:** Corded stick vacuum with Water Tank, Handheld stick vacuum
- **Form Factor:** Upright
- **Color:** White

- **Product Dimensions:** 9"L x 5.9"W x 43.3"H
- **Item Weight:** 1.54 pounds
- **Noise Level:** 65 Decibels
- **Indoor/Outdoor Usage:** Indoor
- **Surface Recommendation:** All hard floors (marble, ceramic tile, wood floor, etc.)

9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, replacement parts, or any inquiries, please contact the retailer or manufacturer directly.