



Manuals.plus /

› Conciseer /

› Conciseer Modern 72 Inch Ceiling Fan with Light and Remote, Model CS7208-MBK-WD User Manual

Conciseer CS7208-MBK-WD

Conciseer Modern 72 Inch Ceiling Fan with Light and Remote

Model: CS7208-MBK-WD | Brand: Conciseer

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Conciseer Modern 72 Inch Ceiling Fan with Light and Remote, Model CS7208-MBK-WD. Ensure safe and efficient use by following all guidelines. Please read all instructions carefully before beginning installation or operation.

KEY FEATURES

- **Integrated 36W LED Light:** Features an integrated 36W LED light with 3 correlated color temperatures (3000K, 4500K, 6500K) for adjustable lighting.
- **8 Dual-Color Blades:** The 72-inch fan is equipped with 8 dual-color blades (Black/Wood Grain) suitable for various room styles and sizes.
- **Super-Thin Design:** Boasts a super-thin body design for a modern aesthetic. Suitable for indoor and covered outdoor use (not directly exposed to rain).
- **Remote Control:** Includes a remote control for independent fan and light operation. Functions include 6-speed adjustment, timer (2H/4H/8H), mute, natural wind simulation, and reversible rotation.
- **Quiet DC Motor:** Equipped with a high-quality, low-power DC motor for quiet operation, ensuring a peaceful environment.
- **Easy Installation:** Designed for straightforward installation with detailed instructions. Customer support is available for assistance.

SETUP AND INSTALLATION

Before beginning installation, ensure all components are present and undamaged. Turn off power at the fuse box to prevent electrical shock. Refer to the detailed instructions provided in the package for specific wiring and mounting steps.



Figure 1: Overview of the Conciseer 72 Inch Ceiling Fan with Light and Remote.

Components Overview

- Motor Housing
- 8 Fan Blades (reversible Black/Wood Grain)
- LED Light Kit
- Remote Control
- Mounting Bracket
- Downrods (various lengths: 7.87in, 15.75in, 23.62in)
- Hardware Pack (screws, washers, wire nuts)

Suit for Different Height Ceilings

Include 3 different downrods

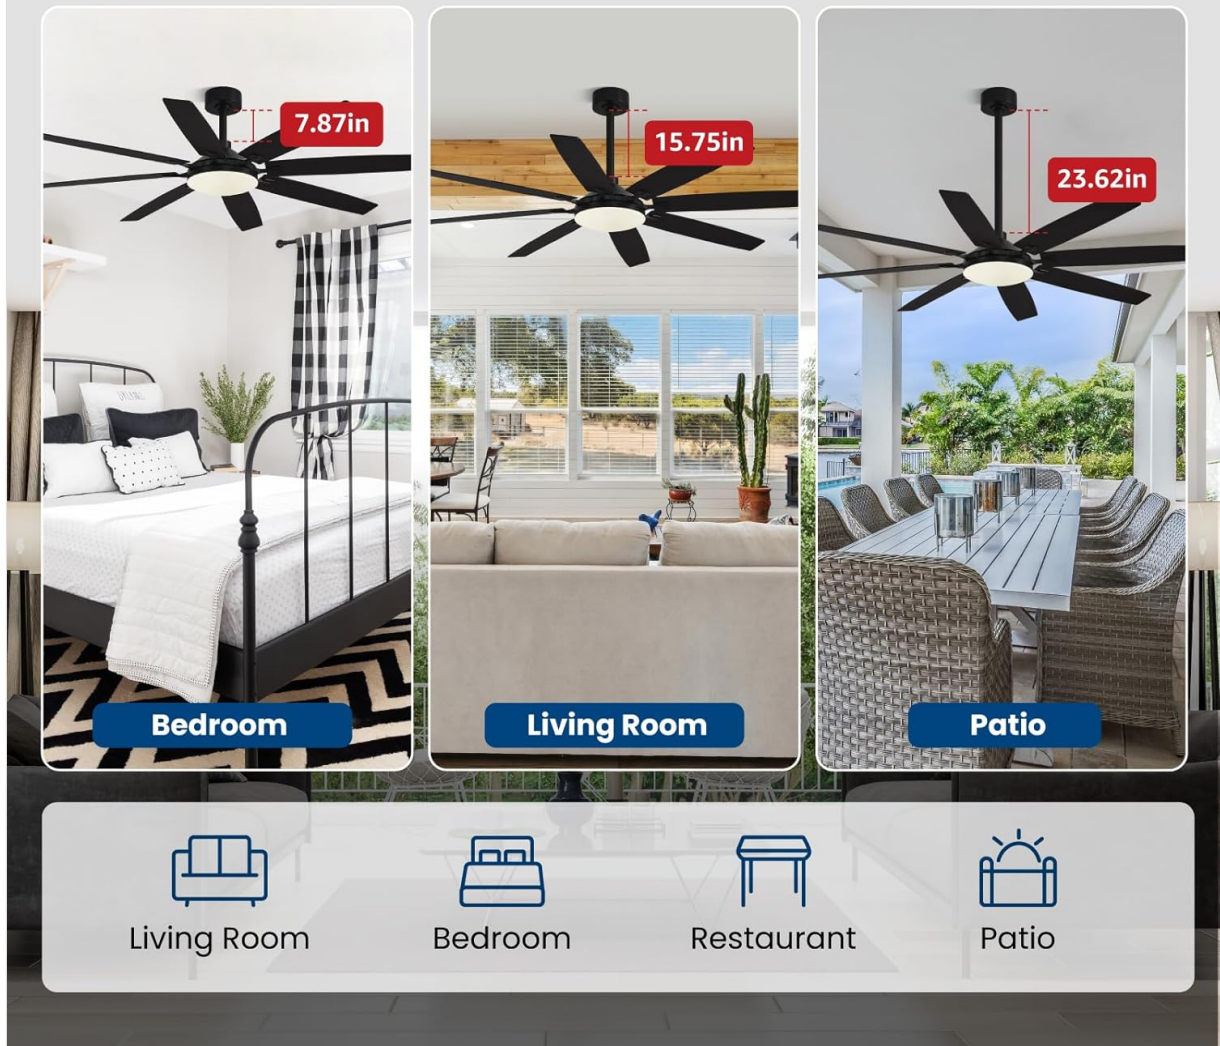


Figure 2: The fan includes three different downrod lengths (7.87in, 15.75in, 23.62in) to accommodate various ceiling heights and room types, from bedrooms to patios.

Installation Steps (Summary)

- Mounting Bracket:** Securely attach the mounting bracket to the ceiling junction box. Ensure it is firmly fixed to a structural support.
- Downrod Assembly:** Select the appropriate downrod length. Thread the fan wires through the downrod and attach the downrod to the motor housing.
- Hang the Fan:** Carefully lift the fan assembly and hang it onto the mounting bracket.
- Wiring:** Connect the electrical wires (live, neutral, ground) from the ceiling to the fan's wiring according to the provided diagram. Ensure all connections are secure.
- Blade Attachment:** Attach each of the 8 fan blades to the motor housing using the provided screws. Ensure they are tightened securely.
- Light Kit Installation:** Connect the LED light kit wires and secure the light kit to the bottom of the fan.
- Canopy Installation:** Slide the canopy up to cover the mounting bracket and secure it.

OPERATING INSTRUCTIONS

Your Conciseer ceiling fan is operated using the included remote control. Ensure batteries are installed correctly in

the remote.



Figure 3: Remote control layout and functions.

Remote Control Functions

- **Power ON/OFF:** Press the power button to turn the fan and light on or off.
- **Fan Speed Control:** Use the '+' and '-' buttons to adjust between 6 fan speeds.
- **Light ON/OFF:** Press the light button to toggle the LED light.
- **Light Color Temperature (3CCT):** Cycle through 3000K (Warm White), 4500K (Natural Light), and 6500K (Cool Daylight) by pressing the light color button.
- **Light Dimmer:** Use the dimmer '+' and '-' buttons to adjust the brightness of the LED light.
- **Reverse Function:** Press the 'R' button to change the direction of the fan blades for summer (downward airflow) or winter (upward airflow) modes.
- **Timer:** Set the fan to automatically turn off after 2, 4, or 8 hours using the dedicated timer buttons.
- **Natural Wind:** Activate natural wind simulation mode for varying fan speeds.
- **Mute:** Silence remote control beeps or fan sounds.

Conciseer

LOW-NOISE DC MOTORS
Only wind, no sound



Figure 4: Fan reverse function for optimal air circulation in summer and winter.

Video 1: Official product video demonstrating the features of the Conciseer CS7208-MBK-WD ceiling fan.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan. Always disconnect power before performing any maintenance.

- **Cleaning:** Use a soft, damp cloth to clean the fan blades and motor housing. Avoid using abrasive cleaners that may damage the finish.
- **Blade Tightness:** Periodically check that all blade screws are tight. Over time, screws may loosen due to fan movement.
- **Light Cover:** Ensure the light cover is securely attached and free of dust or debris to maintain optimal light output.

TROUBLESHOOTING

If you experience issues with your fan, consult the following common troubleshooting steps:

- **Fan Does Not Start:** Check power supply to the fan. Ensure all wiring connections are secure. Verify remote control batteries are functional.

- **Light Does Not Work:** Check power supply. Ensure light kit wiring is correctly connected.
- **Excessive Wobbling:** Ensure all blade screws are tight. Check that the mounting bracket is securely installed. Use the included balancing kit if necessary.
- **Remote Not Responding:** Replace remote control batteries. Ensure the remote receiver is correctly installed and connected.

For further assistance, please contact Conciseer customer support.

SPECIFICATIONS

Brand	Conciseer
Model Name	CS7208-MBK-WD
Color	Black&Wood Grain
Electric Fan Design	Ceiling Fan
Power Source	DC
Style	Modern
Product Dimensions	8"D x 72"W x 8"H
Room Type	Bedroom, Dining Room, Home Office, Kids Room, Living Room
Special Feature	LED Light, Quiet Operation, Remote Controlled, Timer
Wattage	36 watts
Blade Length	72 Inches
Voltage	120 Volts (DC)
Included Components	Cord, Light Kit, Remote
Indoor/Outdoor Usage	Indoor, Outdoor
Control Method	Remote
Item Weight	29 pounds

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official Conciseer website. Our professional after-sales support team is always ready to assist you with any questions during installation or usage.