

K6773

Regal Kitchen Pro Bread Maker Pan Seal Kit K6773 Instruction Manual

Model: K6773

1. INTRODUCTION

This instruction manual provides guidance for the installation and maintenance of the Pan Seal Kit for the Regal Kitchen Pro Bread Maker, Model K6773. This kit is designed to replace worn or damaged seals in your bread maker's pan, ensuring proper operation and preventing leaks.

Compatibility: This Pan Seal Kit is exclusively designed for the **Regal Kitchen Pro Bread Maker Model K6773**. It is not compatible with other bread maker models.

2. IMPORTANT NOTICE

Before proceeding with installation, please ensure you have correctly identified your bread maker's brand name and model number. This information is typically found on the outer surface of your machine, such as an adhesive decal, ink stamp, or embedded impression, often located on the sides, bottom, or control panel.

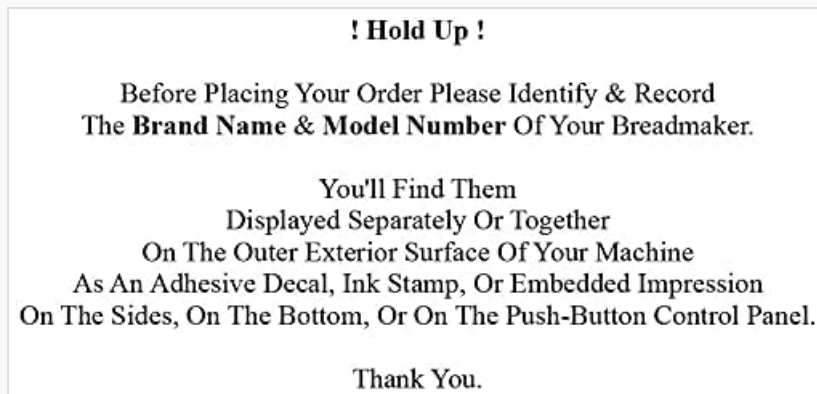


Image: A notice emphasizing the importance of verifying the bread maker's brand and model number before installation.

3. PRODUCT OVERVIEW

The Pan Seal Kit includes the necessary components to restore the sealing integrity of your bread maker pan. Please inspect all parts upon receipt.



Image: The Pan Seal Kit components, typically including a main seal, washers, and retaining clips.

Kit Contents:

- Main Pan Seal (typically a rubber or silicone ring)
- Washers (quantity may vary, often two)
- Retaining Clips (quantity may vary, often two C-clips)

4. INSTALLATION INSTRUCTIONS

Safety First: Always unplug your bread maker and allow it to cool completely before attempting any repairs or maintenance. Exercise caution when handling tools and small parts.

Required Tools (Not Included):

- Small flathead screwdriver or pick tool (for removing clips)
- Pliers (optional, for gripping)

Step-by-Step Installation:

1. **Prepare the Pan:** Remove the bread pan from the bread maker. Ensure it is clean and dry.
2. **Access the Old Seal:** Turn the bread pan upside down. You will typically see the drive shaft extending from the bottom, secured by retaining clips and washers, with the old seal around it.
3. **Remove Old Components:** Carefully use a small flathead screwdriver or pick tool to pry off the retaining clips. Once the clips are removed, slide off the washers and the old seal. Note the order of these components for reassembly.

- 4. **Clean the Area:** Thoroughly clean the area around the drive shaft and where the seal sits. Remove any old food debris or residue.
- 5. **Install New Seal:** Slide the new main pan seal onto the drive shaft, ensuring it sits flush against the pan's base.
- 6. **Reassemble Washers and Clips:** Place the new washers onto the drive shaft in the correct order (as noted during disassembly). Secure them with the new retaining clips. Ensure the clips are fully seated to prevent them from coming loose during operation.
- 7. **Test for Leaks:** Before using the bread maker, fill the pan with a small amount of water and let it sit for a few minutes to check for any leaks around the newly installed seal. If no leaks are observed, the installation is complete.

5. MAINTENANCE

To prolong the life of your new pan seal and ensure optimal performance of your bread maker:

- **Regular Cleaning:** After each use, clean the bread pan thoroughly, paying attention to the area around the seal and drive shaft. Avoid abrasive cleaners that could damage the seal material.
- **Inspect for Wear:** Periodically inspect the seal for any signs of wear, cracking, or hardening. Replace the seal if any damage is observed to prevent leaks.
- **Proper Storage:** Store the bread pan in a clean, dry place when not in use.

6. TROUBLESHOOTING

If you encounter issues after installing the new pan seal, consider the following:

- **Pan Leaks:**
 - Ensure the new seal is correctly seated and not twisted.
 - Verify that the washers and retaining clips are properly installed and fully secured.
 - Check for any damage to the bread pan itself that might be causing leaks unrelated to the seal.
- **Paddle Not Turning:**
 - Ensure the drive shaft is free to rotate after reassembly.
 - Confirm the paddle is correctly attached to the drive shaft inside the pan.

7. SPECIFICATIONS

Attribute	Detail
Product Name	Pan Seal Kit
Compatible Model	Regal Kitchen Pro Bread Maker Model K6773
Manufacturer	Generic
Item Weight	1.92 ounces
Package Dimensions	10 x 8 x 1 inches
ASIN	B0DSV524TK

8. WARRANTY AND SUPPORT

As this is a generic replacement part, warranty coverage may be provided by the seller. Please refer to your purchase

documentation or contact the seller directly for information regarding warranty, returns, or technical support related to this Pan Seal Kit.

For issues related to the Regal Kitchen Pro Bread Maker itself, please consult the original manufacturer's manual or support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question