



[Manuals.plus](#) /

> [Furniwood](#) /

> Furniwood Mid Century Modern TV Stand 70 Inch (White) - Instruction Manual

## Furniwood Mid Century Modern TV Stand 70 Inch

# Furniwood Mid Century Modern TV Stand 70 Inch (White)

Instruction Manual

## 1. INTRODUCTION

---

Thank you for choosing the Furniwood Mid Century Modern TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

### 1.1 Safety Information

- Always follow the assembly instructions carefully.
- Use appropriate safety gear when handling tools.
- Be cautious of pinch points and sharp edges during assembly.
- Ensure all cables are properly managed and secured to prevent tripping hazards.
- Do not overload the cabinet beyond its weight capacity.
- This product is designed for indoor use only.

## 2. PRODUCT OVERVIEW

---

The Furniwood Mid Century Modern TV Stand is a versatile entertainment center designed to accommodate TVs up to 80 inches. It features a durable wood frame, ample storage with adjustable shelves, and efficient cable management solutions.



Figure 1: Front view of the assembled Furniwood Mid Century Modern TV Stand in white, featuring gold handles and legs, with decorative items on top.

# Dimension (Inch)

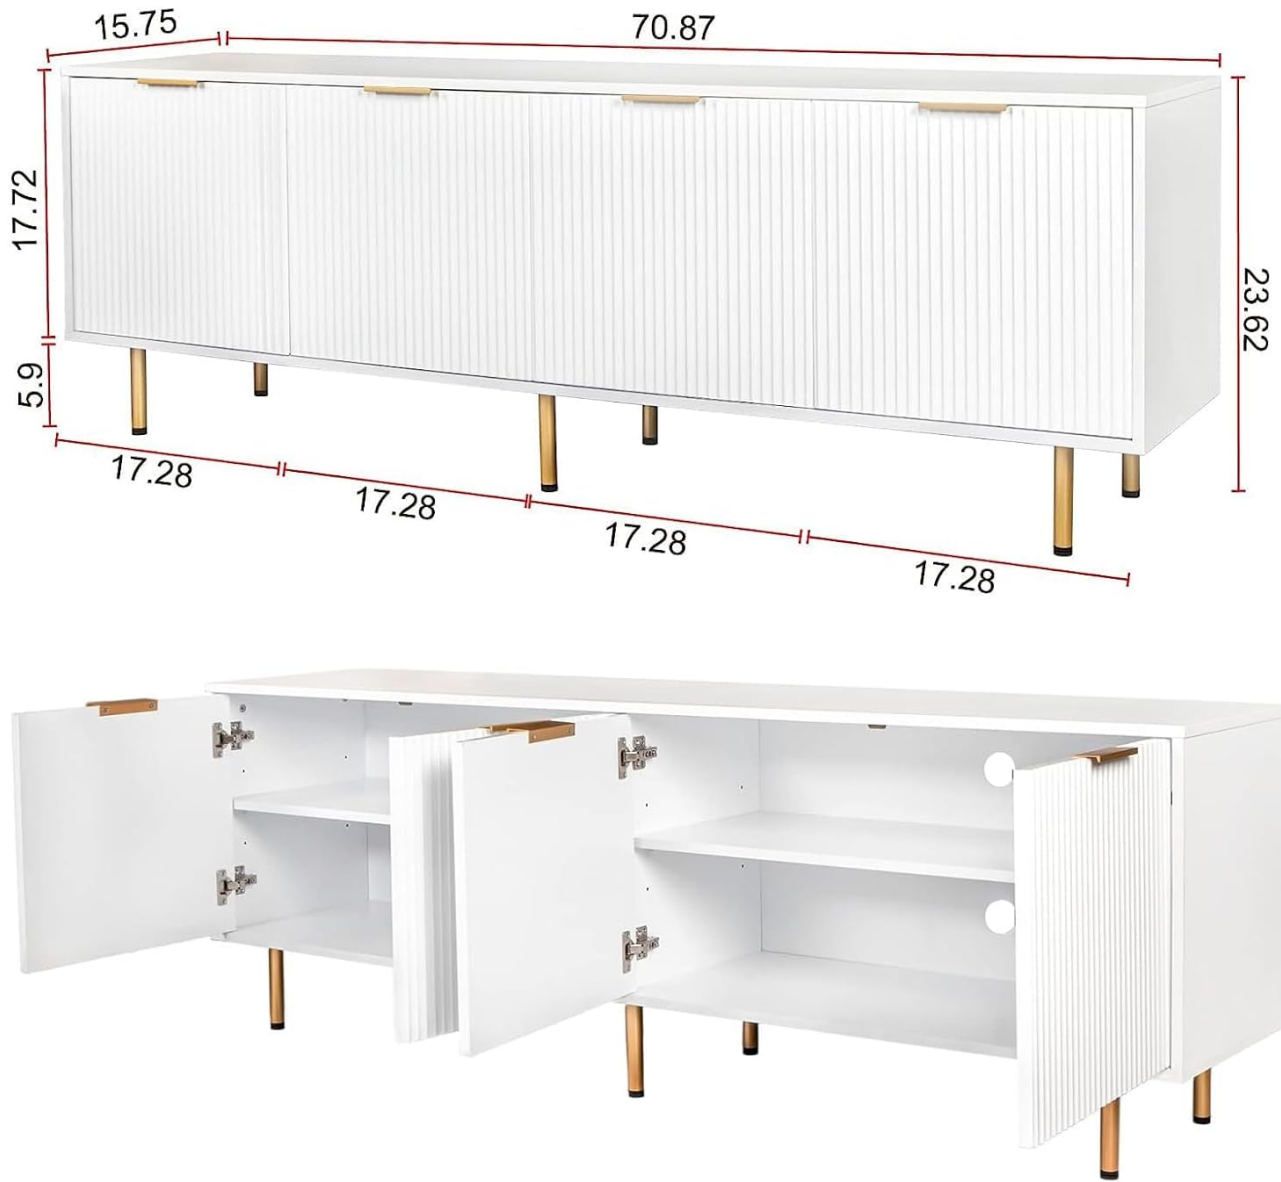


Figure 2: Diagram showing the dimensions of the TV stand (70.87 inches L x 15.75 inches W x 23.62 inches H) and an interior view with doors open, revealing adjustable shelves.

## 3. PARTS LIST

Before assembly, ensure all parts and hardware are present and undamaged. Refer to the installation video for a visual guide to all components.

### 3.1 Included Components:

- 1x TV Stand (main unit)
- 1x Installation Instruction Manual
- 1x Mounting Accessories Pack (screws, dowels, hinges, etc.)
- 2x "Non-Product Part" Protection Panel (for packaging)

### 3.2 Hardware and Panels (Refer to Installation Video for detailed diagrams):

The assembly process involves various panels and hardware. The installation video provides a comprehensive

breakdown of each numbered panel and lettered hardware piece. Please match the components with the diagrams in the video to ensure correct assembly.

Your browser does not support the video tag.

Video 1: Installation Video of Furniwood White TV Stand. This video provides a step-by-step visual guide for assembling the TV stand, including identifying all parts and hardware.

## 4. SETUP AND ASSEMBLY

---

Assembly is required for this TV stand. We recommend assembling with a partner to ensure stability and ease of construction. All accessories are labeled with numbers and packed in separate bags for easy identification.

### 4.1 Assembly Steps:

- 1. Prepare the Base:** Begin by attaching the necessary hardware (e.g., cam locks, dowels) to the bottom panel (Part 1) as indicated in the instructions.
- 2. Attach Side and Center Panels:** Secure the side panels (Parts 3, 5) and center divider panels (Part 4) to the bottom panel using the provided hardware. Ensure all connections are firm.
- 3. Install Back Panel:** Slide the back panel (Part 9) into the grooves of the assembled frame. Use the provided clips to secure the backboard along the back.
- 4. Attach Top Panel:** Carefully place and secure the top panel (Part 2) onto the assembled frame, ensuring all cam locks and screws are tightened.
- 5. Install Legs:** Attach the six golden metal legs (Part 11) to the designated points on the bottom of the TV stand. Ensure they are securely fastened.
- 6. Install Adjustable Shelves:** Insert the adjustable shelves (Part 10) into the desired height positions within the compartments. The middle partition can be adjusted to 3 levels.
- 7. Attach Doors and Hinges:**
  - Identify the correct hinges: K1 and K2 door panels must use K hinges (DW). L1 and L2 door panels must use L hinges (ZW).
  - Attach the hinges to the doors and then to the main cabinet structure.
  - Adjust the door fit using the screws on the hinges. Refer to the troubleshooting section for detailed adjustment instructions.
- 8. Install Handles:** Attach the gold metal handles to the front of each door.

For a visual step-by-step guide, please refer to the 'Installation Video of Furniwood White TV Stand' provided in Section 3.2.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Storage and Organization

The TV stand features two groups of opposite door storage spaces. The internal storage capacity is sufficient for various items such as CDs, DVDs, game consoles, books, or other media accessories. The middle partition offers 3 levels of height adjustment, allowing you to customize the storage space according to your needs.



Figure 3: Interior view showcasing the adjustable shelves and spacious storage compartments.

## 5.2 Cable Management

The wood TV stand includes a groove design on the top of the back panel, providing space for power cords and ensuring the unit fits flush against the wall. Four basic cable holes are designed to help organize wires, preventing clutter and aiding in electrical equipment ventilation and heat dissipation.

## 5.3 Door Operation

The doors are equipped with a magnetic design for secure and automatic closing. Simply push the door gently, and it will close smoothly on its own.

Your browser does not support the video tag.

Video 2: Furniwood White TV Consoles For Living Room. This video demonstrates the features of the TV stand, including the magnetic door closure and adjustable feet.

## 5.4 Adjustable Feet

The TV stand is equipped with adjustable feet pads. These can be rotated to keep the unit stable on uneven

surfaces and protect your floor from scratches. The 6.1-inch height also provides enough space for robotic vacuum cleaners.

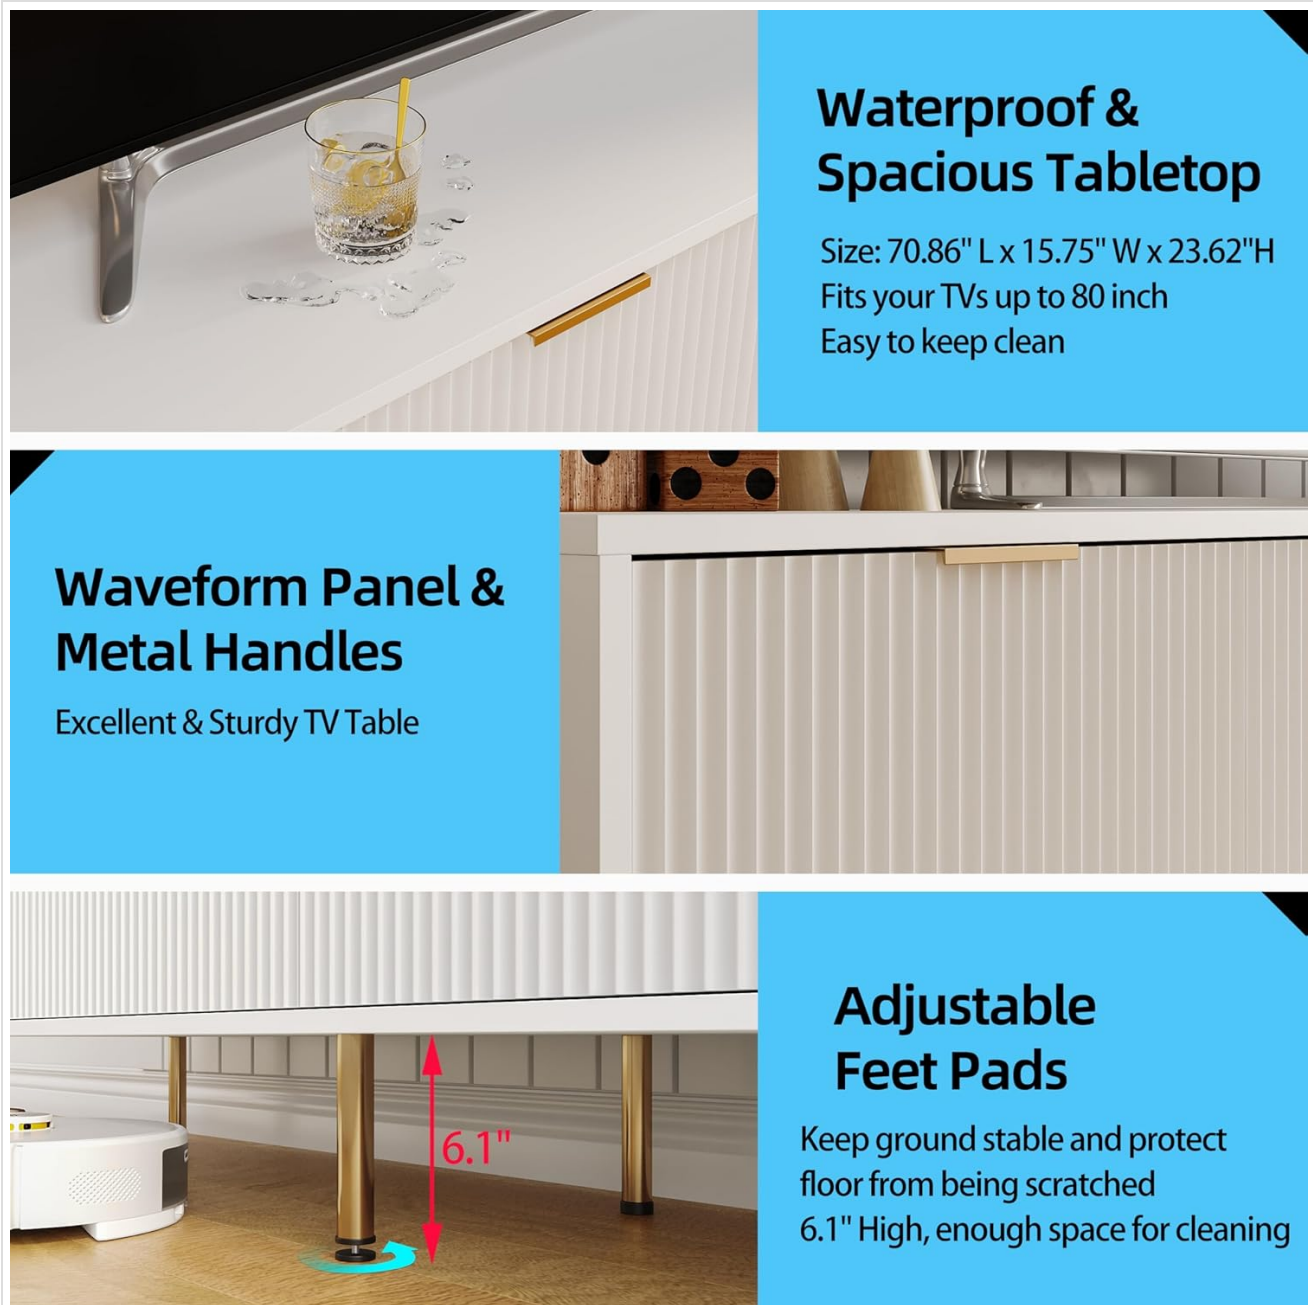


Figure 4: Features including waterproof tabletop, waveform panel, and adjustable feet.

## 6. MAINTENANCE

### 6.1 Cleaning

The TV stand features a waterproof tabletop, making it easy to clean. Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the finish.

### 6.2 General Care

- Periodically check all screws and connections to ensure they remain tight.
- Avoid placing excessively hot or cold items directly on the surface without protective coasters.
- Keep the unit away from direct sunlight and excessive moisture to prevent warping or discoloration.

## 7. TROUBLESHOOTING

---

### 7.1 Door Alignment Issues

If the doors do not align properly after assembly, the hinges can be adjusted. The hinges allow for adjustments in multiple directions (up/down, front/back, left/right). Use a screwdriver to carefully turn the adjustment screws on each hinge until the doors are perfectly aligned. Patience is key during this process.

### 7.2 Instability

If the TV stand feels unstable, ensure that all assembly screws are fully tightened. Additionally, adjust the individual feet pads on the bottom of the unit to compensate for uneven flooring, ensuring the stand is level and stable.

## 8. SPECIFICATIONS

---

Feature	Detail
Brand	Furniwood
Model	Mid Century Modern TV Stand 70 Inch
Color	70 Inch-white
Product Dimensions	70.87"D x 15.75"W x 23.62"H
Item Weight	91.2 Pounds
Material	Wood (High-grade certified manufactured wood frame, particle board, density board)
Recommended Uses	TV Stand & Entertainment Center
Special Feature	Cable Management
Mounting Type	Floor Mount
Room Type	Bedroom, Living Room, Meeting Rooms, Study Room
Number of Shelves	2 (adjustable)
Storage Options	4 doors, adjustable shelving
Assembly Required	Yes

## 9. WARRANTY AND SUPPORT

---

For any questions, concerns, or assistance with your Furniwood TV Stand, please contact customer support through your purchase platform. While specific warranty details are not provided in this manual, Furniwood is committed to customer satisfaction.