

[Manuals.plus](#) /

› [Outsunny](#) /

› Outsunny Hanging Egg Chair Instruction Manual - Model 84A-356V70GY

## Outsunny 84A-356V70GY

# Outsunny Hanging Egg Chair Instruction Manual

Model: 84A-356V70GY

## INTRODUCTION

---

Thank you for choosing the Outsunny Hanging Egg Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your new chair. Please read these instructions carefully before assembly and retain them for future reference.

This chair is designed for both outdoor and indoor use, offering a comfortable and relaxing seating experience. Ensure all components are present and undamaged before beginning assembly.



Image 0.1: The Outsunny Hanging Egg Chair, featuring a grey basket and dark grey cushions, set up on a patio.

## 1. SETUP AND ASSEMBLY

### 1.1 Package Contents

Before assembly, verify that all the following components are included in your package:

- Metal Stand (Base and Hanging Arm)
- Folding Basket (Chair frame)
- Thickened Cushion (Main seat cushion)
- Bottom Cushion
- Cup Holder
- Tether
- Assembly Hardware (Screws, nuts, washers, tools if provided)

### 1.2 Assembly Instructions

Follow these steps carefully for proper assembly. It is recommended to have two people for assembly.

1. **Assemble the Base:** Connect the four legs to the central hub of the metal stand. Ensure all

connections are secure and tightened with the provided hardware.

2. **Attach the Hanging Arm:** Securely attach the curved hanging arm to the assembled base. Ensure the connection points are firm and stable.
3. **Unfold the Basket:** Carefully unfold the chair basket. If it is in a folded state for shipping, remove any temporary fasteners.
4. **Attach the Basket to the Hanging Arm:** Using the provided hanging mechanism (e.g., spring hook, chain), attach the chair basket to the top of the hanging arm. Ensure the basket hangs freely and securely.
5. **Install Cushions:** Place the thickened main cushion and the bottom cushion inside the chair basket for comfort.
6. **Attach Cup Holder:** Secure the cup holder to the designated area on the side of the chair basket.
7. **Connect the Tether:** Attach the tether from the bottom of the chair basket to the base of the stand. This helps reduce excessive movement of the chair. Adjust the tether length to your preference, ensuring it does not restrict comfortable swinging.
8. **Final Check:** Before use, double-check all screws and connections to ensure they are tight and secure.



**Image 1.1:** Overall dimensions of the Outsunny Hanging Egg Chair. The chair measures 172 cm in height, 116 cm in width, and 125 cm in depth. The seat dimensions are 74 cm wide and 56 cm deep, with a height of 50 cm from the ground.



Image 1.2: Illustration of the folding basket feature. The chair basket can be folded by removing screws, allowing for compact storage when not in use.

## 2. OPERATING INSTRUCTIONS

### 2.1 Using Your Egg Chair

The Outsunny Hanging Egg Chair is designed for comfortable relaxation. Observe the maximum weight capacity of **120 kg (264 lbs)**.

- **Seating:** Gently sit into the chair. The spacious design and thick cushions provide ample comfort.
- **Cup Holder:** Utilize the integrated cup holder on the side of the basket to keep beverages conveniently within reach.
- **Tether:** The tether connected to the base helps stabilize the chair and prevents excessive swinging. Do not remove the tether during normal operation.
- **Movement:** The chair is designed for gentle swinging. Avoid aggressive or sudden movements that could compromise stability.



**Image 2.1:** Detail of the soft cushions. The chair includes a large 1-piece cushion and a bottom cushion, both 13 cm thick, designed for optimal comfort.



**Cup Holder**  
Keep drinks  
within easy reach



### Tether

Secure to the base to keep  
basket moving too much



**Four-leg Base**  
Reinforced structure  
for more stability

**Image 2.2:** Features including the cup holder, tether, and four-leg base. The cup holder keeps drinks accessible, the tether secures the basket to the base, and the reinforced four-leg base provides stability.

## 3. MAINTENANCE

### 3.1 Cleaning

- **Frame:** Wipe the powder-coated steel frame with a damp cloth and mild soap. Dry thoroughly to prevent rust.
- **Cushions:** The cushions are made of 100% polyester. Spot clean with a mild detergent and water. Allow to air dry completely. Do not machine wash or tumble dry.
- **Basket Fabric:** The 560gsm texteline fabric can be cleaned with a soft brush or cloth and mild soapy water. Rinse thoroughly and allow to air dry.

### 3.2 Storage

- **Folding Basket:** For long-term storage or when not in use, the chair basket can be folded to save space. Remove the screws connecting the basket sections, carefully fold, and secure.
- **Protective Cover:** When the chair is not in use, especially outdoors, it is recommended to use a protective cover to shield it from rain, wind, dirt, and prolonged sun exposure.
- **Winter Storage:** During winter months or periods of harsh weather, store the chair indoors in a dry,

protected area to extend its lifespan.

## 4. TROUBLESHOOTING

This section addresses common issues you might encounter with your Outsunny Hanging Egg Chair.

- **Chair feels unstable or rocks excessively:**
  - Ensure all bolts and screws on the stand and basket connections are fully tightened.
  - Verify the tether is properly attached between the basket and the base and is not too loose.
  - Ensure the chair is placed on a flat, level surface.
- **Difficulty during assembly:**
  - Refer back to the "Setup and Assembly" section and review the steps carefully.
  - Ensure you are using the correct hardware for each step as indicated in the instructions.
  - Some parts may require gentle force to align; avoid excessive force that could cause damage.
- **Tether appears damaged or broken:**
  - The tether is designed to limit movement. If it shows signs of wear or breakage, discontinue use immediately.
  - Contact customer support for a replacement tether. Do not use the chair without a functional tether.
- **Chair basket does not fold easily:**
  - Ensure all necessary screws are removed before attempting to fold the basket.
  - Check for any obstructions or misalignments in the folding mechanism.

## 5. SPECIFICATIONS

<b>Model Number</b>	84A-356V70GY
<b>Brand</b>	Outsunny
<b>Color</b>	Grey
<b>Overall Dimensions (H x W x D)</b>	172 cm x 116 cm x 125 cm (67.7" x 45.7" x 49.2")
<b>Seat Dimensions (H x W x D)</b>	50 cm x 74 cm x 56 cm (19.7" x 29.1" x 22")
<b>Basket Folding Size (L x W x H)</b>	103 cm x 63 cm x 20 cm (40.6" x 24.8" x 7.9")
<b>Cushion Thickness</b>	13 cm (5.1")
<b>Maximum Load Capacity</b>	120 kg (264 lbs)
<b>Net Weight</b>	26 kg (57.3 lbs)
<b>Frame Material</b>	Powder-coated Alloy Steel
<b>Basket Material</b>	Alloy Steel Mesh with 560gsm Texteline Fabric
<b>Cushion Material</b>	100% Polyester
<b>Included Components</b>	Cup Holder, Folding Basket, Metal Stand, Tether, Thickened Cushion

## 6. SAFETY INFORMATION

---

- Do not exceed the maximum weight capacity of 120 kg (264 lbs).
- Ensure the chair is placed on a stable, level surface to prevent tipping.
- Keep children and pets away from the chair during assembly.
- Regularly inspect all bolts, screws, and connections to ensure they remain tight and secure.
- Do not stand on the chair or use it as a step stool.
- Avoid aggressive swinging or sudden movements that could cause instability.
- Do not use the chair if any part is damaged or broken. Contact customer support for replacement parts.
- Keep away from open flames or extreme heat sources.
- Use caution when getting in and out of the chair.