

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [VAXCANZE](#) /

› [VAXCANZE VAX-HCV 350W Cordless Stick Vacuum Cleaner Instruction Manual](#)

VAXCANZE VAX-HCV

VAXCANZE VAX-HCV 350W Cordless Stick Vacuum Cleaner Instruction Manual

Model: VAX-HCV

1. INTRODUCTION

Thank you for choosing the VAXCANZE VAX-HCV 350W Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and retain it for future reference.

This versatile 6-in-1 vacuum cleaner is designed for deep cleaning various surfaces, including carpets, hardwood floors, and car interiors. It features a powerful 350W brushless motor, a multi-cyclone filtration system with HEPA, and is compatible with Milwaukee M18 batteries (battery not included).

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance, including the following:

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged battery or charger. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by battery, use battery as a handle, close a door on battery, or pull battery around sharp edges or corners. Do not run appliance over battery. Keep battery away from heated surfaces.
- Do not handle battery or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust cup and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance.

3. PRODUCT COMPONENTS

Your VAXCANZE VAX-HCV vacuum cleaner comes with the following components:

- **Handheld Vacuum Unit:** The main body containing the motor, dust cup, and control panel.
- **Scalable Metal Tube:** An adjustable extension wand for reaching various heights and floor cleaning.
- **LED Roller Brush:** Motorized floor brush with built-in LED lights for illuminating dust and debris. Features 90° vertical and 180° horizontal rotation.
- **2-in-1 Dust Brush:** A versatile attachment for dusting and cleaning delicate surfaces.
- **Crevice Nozzle:** A narrow tool for cleaning tight spaces and corners.
- **Wall Mount:** For convenient storage of the vacuum and accessories.
- **Dust Cup & Multi-Cyclone Filtration System:** Includes a removable dust cup and internal HEPA filter for efficient dust separation.



Image: VAXCANZE VAX-HCV Cordless Vacuum Cleaner and all included accessories, including the main unit, extension tube, floor brush, and various nozzles.



Image: A visual breakdown of the components you will receive: LED Roller Brush, Handheld Vacuum, 2-in-1 Dust Brush, Crevice Nozzle, Scalable Metal Tube, and Wall Mount.

4. SETUP AND ASSEMBLY

4.1 Attaching the Extension Tube and Floor Brush

1. Align the end of the Scalable Metal Tube with the suction port on the Handheld Vacuum Unit. Push firmly until it clicks into place.
2. Attach the LED Roller Brush to the other end of the Scalable Metal Tube, ensuring it clicks securely.
3. To adjust the length of the Scalable Metal Tube, press the release button and extend or retract to the desired length.

4.2 Installing the Battery

This vacuum cleaner is designed for use with Milwaukee M18 batteries (battery not included).

1. Ensure the vacuum is powered off.
2. Slide a charged Milwaukee M18 battery into the battery slot on the top of the handheld unit until it locks securely.
3. To remove the battery, press the battery release button and slide the battery out.

BATTERY NOT INCLUDED



Image: The VAXCANZE VAX-HCV vacuum cleaner highlighting its compatibility with Milwaukee M18 18V Lithium-Ion batteries. Battery is not included.

4.3 Wall Mount Installation

The included wall mount allows for convenient storage of your vacuum and accessories.

1. Choose a suitable location on a wall, ensuring it is near a power outlet if you plan to charge batteries while stored (charger not included).
2. Use the provided screws and anchors to securely attach the Wall Mount to the wall.
3. The handheld unit can be docked onto the mount, and accessories can be stored in the designated slots.

INTEGRATED WALL MOUNT EASILY STORE ALL PARTS

BATTERY NOT INCLUDED



Image: The integrated wall mount system for easy storage of the vacuum and its accessories. Battery is not included.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off and Suction Modes

1. Ensure a charged Milwaukee M18 battery is installed.
2. Press the Power button on the Smart LED Touch Display to turn the vacuum on.
3. The display will show the current battery level and suction mode.
4. Press the Mode button to cycle through the three available suction modes: Low, Medium, and High (up to 35KPA).

5. Press the Power button again to turn the vacuum off.



Image: Illustration of the three adjustable suction modes (17000PA, 25000PA, 35000PA) for deep cleaning various floor types.

5.2 Using the LED Floor Brush

- The LED lights on the floor brush automatically illuminate when the vacuum is in operation, helping to reveal hidden dust and debris.
- The brush head can rotate 90° vertically and 180° horizontally, allowing for easy maneuverability around furniture and into tight spaces.



Image: The motorized floor brush with LED headlights and flexible 90° vertical and 180° horizontal rotation for enhanced cleaning visibility and access.

5.3 Using Versatile Attachments

The 6-in-1 design allows you to transform the vacuum for various cleaning tasks:

- **For Floors and Carpets:** Use the Handheld Vacuum Unit with the Scalable Metal Tube and LED Roller Brush.
- **For Sofas and Upholstery:** Detach the Scalable Metal Tube and attach the 2-in-1 Dust Brush directly to the Handheld Vacuum Unit.
- **For Curtains and High Places:** Use the Scalable Metal Tube with the 2-in-1 Dust Brush or Crevice Nozzle.

- **For Car Interiors:** Use the Handheld Vacuum Unit with the Crevice Nozzle for tight spots or the 2-in-1 Dust Brush for seats and mats.



Image: The vacuum being used in various configurations for different cleaning scenarios, including as a stick vacuum, handheld, and for high-reach areas.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Emptying the Dust Cup

1. Ensure the vacuum is powered off and the battery is removed.

2. Press the dust cup release button located on the side of the handheld unit.
3. Carefully remove the dust cup and empty its contents into a trash bin.



Image: Demonstrating the one-click dust removal feature of the 0.8L dust cup for easy emptying.

6.2 Cleaning the Filters

The multi-cyclone filtration system includes a HEPA filter that should be cleaned regularly.

1. After emptying the dust cup, twist and pull to separate the filter assembly from the dust cup.
2. Remove the HEPA filter from the assembly.
3. Tap the filters gently to remove loose dust. For a more thorough cleaning, rinse the filters under running water.

4. Allow all filter components to air dry completely for at least 24 hours before reassembling and placing back into the vacuum. Do not use the vacuum with wet filters.



Image: Step-by-step guide on how to remove, clean, dry, and reinstall the dust cup and filter components.

6.3 Cleaning the Brush Roll

Periodically check the LED Roller Brush for tangled hair or debris. To clean:

1. Ensure the vacuum is powered off and the battery is removed.
2. Locate the release mechanism on the side of the brush head.
3. Remove the brush roll and carefully cut away any tangled hair or fibers using scissors.
4. Reinsert the brush roll and secure the release mechanism.

7. TROUBLESHOOTING

If you encounter issues with your VAXCANZE VAX-HCV, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery not installed correctly or discharged.	Ensure battery is fully inserted and charged.
Low suction power	Dust cup full, filters clogged, or blockage in nozzle/tube.	Empty dust cup, clean filters, check for and remove blockages.
Brush roll not spinning	Hair/debris tangled in brush roll or brush roll jammed.	Clean brush roll, remove any obstructions.
Unusual noise	Blockage in air path or foreign object in brush roll.	Check for and remove blockages, inspect brush roll.

8. SPECIFICATIONS

Feature	Specification
Brand	VAXCANZE

Feature	Specification
Model Name	VAX-HCV
Motor Horsepower	350 Watts (Brushless)
Maximum Suction Power	35 kPa
Motor Speed	120,000 RPM
Number of Power Levels	3
Filter Type	HEPA Filter, Multi-Cyclone Filtration System
Dust Cup Capacity	0.8 Liters (800 Grams)
Battery Compatibility	Milwaukee M18 18V Lithium-Ion series (Battery Not Included)
Form Factor	Stick / Handheld
Product Dimensions	17.5"L x 11.4"W x 7.2"H
Item Weight	6.89 pounds
Special Feature	Cordless, LED Floor Brush, Smart LED Touch Display, Wall-Mounted Storage
Indoor/Outdoor Usage	Indoor

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product packaging or contact VAXCANZE customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.