

ADLER EUROPE AD 2181

ADLER AD 2181 Electric Nail Drill User Manual

Model: **AD 2181** | Brand: **ADLER EUROPE**

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the ADLER AD 2181 Electric Nail Drill. Keep this manual for future reference.

- **Eye Protection:** Always wear protective eyewear to prevent eye injuries from debris or dust generated during operation.
- **Skin Contact:** Avoid direct contact of the rotating accessory or motor with skin to prevent burns or injury.
- **Children and Pets:** Keep the device out of reach of children and pets at all times.
- **Water Exposure:** Do not use the device near water or in wet conditions. Do not immerse the device in water or any other liquid.
- **Power Source:** Use only the specified charging cable and power source.
- **Damage:** Do not use the device if it is damaged or malfunctioning. Contact customer support for assistance.
- **Ventilation:** Ensure adequate ventilation during use to prevent overheating.
- **Professional Use:** This device is intended for personal use. If used professionally, ensure proper training and hygiene practices.

2. PRODUCT OVERVIEW AND PACKAGE CONTENTS

The ADLER AD 2181 Electric Nail Drill is a versatile and compact device designed for the care of natural, acrylic, and hybrid nails. It offers professional results for manicure and pedicure sessions at home.



Image: The ADLER AD 2181 Electric Nail Drill, pink in color, resting on a grey storage pouch. Alongside are two clear plastic cases containing various nail drill bits and a bag of sanding bands, along with a small brush.

Package Contents:

- ADLER AD 2181 Electric Nail Drill
- 11 interchangeable drill bits (various shapes and grits)
- Sanding bands
- Small cleaning brush
- USB-C to USB-A charging cable
- Storage pouch
- User Manual (this document)



Image: A complete set of 11 nail drill bits, including various diamond, ceramic, and felt bits, along with multiple sanding bands and a soft brush, all laid out on a white background.

3. KEY FEATURES

- **Adjustable Speed:** Offers 5 adjustable speed settings, up to 13,500 RPM, for precise control over various nail care tasks.
- **Bidirectional Rotation:** Allows for changing the rotation direction, providing flexibility and comfort for both left and right-handed users and for working on different nail areas.
- **Pause Function:** Enables temporary stopping of the device without losing current settings, convenient for changing bits or short breaks.
- **Integrated LED Lighting:** Illuminates the working area, ensuring precision even in hard-to-reach spots and for detailed work.
- **Fast Charging & Long Battery Life:** Charges fully in approximately 1 hour and 20 minutes via USB-C and provides up to 100 minutes of continuous operation on a single charge.

4. SETUP

4.1 Charging the Device

1. Connect the provided USB-C cable to the charging port on the nail drill.
2. Connect the USB-A end of the cable to a compatible USB power adapter (not included) or a computer USB port.
3. The device will indicate charging status (e.g., a charging indicator light or display).
4. A full charge takes approximately 1 hour and 20 minutes. Disconnect the charger once fully charged.

4.2 Attaching/Changing Bits

1. Ensure the device is turned off before attaching or changing any bits.
2. Gently pull out the current bit from the chuck at the tip of the drill.
3. Select the desired bit. For sanding bands, slide the band onto the appropriate mandrel bit.
4. Insert the shaft of the new bit firmly into the chuck until it is securely seated. Do not force it.





Image: A close-up view of the pink ADLER AD 2181 Electric Nail Drill's tip, showing a grey, cylindrical grinding bit securely inserted into the chuck.





Image: A close-up showing a brown sanding band being slid onto a silver mandrel bit, illustrating the process of preparing a sanding attachment for the nail drill.

5. OPERATION

5.1 Power On/Off

Press and hold the power button () located on the control panel to turn the device on or off.

5.2 Adjusting Speed

Once the device is on, use the+ and - buttons to increase or decrease the rotation speed. There are 5 speed levels available. The current speed level will be displayed on the LED screen.

5.3 Changing Rotation Direction

Press the direction button (◀▶) to switch between clockwise and counter-clockwise rotation. This is useful for working on different hands or for specific nail techniques.

5.4 Using the Pause Function

Briefly press the power button () during operation to activate the pause function. The drill will stop, but your current speed and direction settings will be retained. Press the power button again to resume operation.

5.5 LED Light

The integrated LED light automatically activates when the device is in operation, providing clear visibility of the nail area.



Image: A detailed view of the ADLER AD 2181 Electric Nail Drill's control panel, featuring the power button, direction toggle, speed adjustment buttons (+/-), and a digital display showing the current speed setting.



Image: A hand holding the pink ADLER AD 2181 Electric Nail Drill, demonstrating its use on a fingernail. The drill's LED display is visible, and the integrated LED light illuminates the working area.

6. MAINTENANCE

6.1 Cleaning

1. Always ensure the device is turned off and disconnected from any power source before cleaning.
2. Use the provided small brush to remove dust and debris from the drill bits and the chuck area.
3. Wipe the body of the device with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the device.
4. Do not use harsh chemicals, abrasive cleaners, or solvents, as these can damage the device.
5. Bits can be cleaned with a brush and, if necessary, disinfected according to standard hygiene practices for nail

tools.

6.2 Storage

- Store the device and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures.
- Use the provided storage pouch to protect the device from dust and damage.
- Keep all bits organized in their respective cases to prevent loss or damage.

7. TROUBLESHOOTING

If you encounter any issues with your ADLER AD 2181 Electric Nail Drill, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully (refer to Section 4.1).
Device does not turn on.	Power button not pressed correctly.	Press and hold the power button for a few seconds.
Bit is loose or falls out.	Bit not inserted correctly.	Ensure the bit is fully and firmly inserted into the chuck (refer to Section 4.2).
Reduced performance or slow rotation.	Low battery.	Recharge the device.
Reduced performance or slow rotation.	Bit is worn out or clogged.	Clean or replace the bit.
Device overheats.	Prolonged continuous use.	Allow the device to cool down before resuming use. Ensure proper ventilation.

8. TECHNICAL SPECIFICATIONS

Specification	Value
Model Number	AD 2181
Maximum Rotation Speed	13,500 RPM
Speed Settings	5 levels
Battery Type	Li-Po 500 mAh

Specification	Value
Charging Time	Approx. 1 hour 20 minutes
Operating Time	Up to 100 minutes (continuous)
Power Source	Battery Powered (USB-C charging)
Material	Plastic
Color	Pink
Package Dimensions	49 x 32 x 29.5 cm
Package Weight	330 Grams

9. WARRANTY AND SUPPORT

ADLER EUROPE products are manufactured to high-quality standards and are guaranteed against manufacturing defects. For specific warranty details, please refer to the warranty card included with your purchase or contact your retailer.

If you require technical assistance, have questions about the product, or need to report a defect, please contact ADLER EUROPE customer support or your authorized dealer. Please have your model number (AD 2181) and proof of purchase ready when contacting support.

© 2025 ADLER EUROPE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question